

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Maxipact](#) /

› [Maxipact Cordless Pressure Washer User Manual](#)

Maxipact fcbb1a65-afc7-4eb0-a240-6372eaa8e7c1

Maxipact Cordless Pressure Washer User Manual

Model: fcbb1a65-afc7-4eb0-a240-6372eaa8e7c1

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Maxipact Cordless Pressure Washer. Please read it thoroughly before first use and retain it for future reference.

The Maxipact Cordless Pressure Washer features a powerful brushless motor, offering up to 1100 PSI for effective cleaning. Its portable design, powered by two 4.0Ah batteries, provides flexibility for various cleaning tasks without the need for a power outlet. Key features include a 3-speed adjustment LCD touchscreen and a versatile 6-in-1 nozzle.



Image: The MaxiPact Cordless Pressure Washer with its complete set of accessories, including the main unit, batteries, charger, hose, suitcase, foam bottle, water stop adapter, quick connect adapters, water filter, faucet adapter, and 6-in-1 nozzle.

MaxiPact®

Portable Cordless Pressure Washer



Image: A man holding the portable cordless pressure washer, highlighting its maximum 1100 PSI and 2.6 GPM, 3-speed adjustment LCD touchscreen, 6-in-1 nozzle, dual battery power, and brushless motor.

2. SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before use.
- Wear appropriate personal protective equipment, including eye protection.
- Do not operate the pressure washer in the rain or in wet locations.
- Ensure all connections are secure before starting the unit.
- Keep children and pets away from the operating area.
- Disconnect the battery when not in use or before performing maintenance.

3. COMPONENTS OVERVIEW

Your MaxiPact Cordless Pressure Washer comes with several components designed for versatile cleaning.



3-Speed LCD
Touchscreen



Premium Brushless
Motor



Faucet Adapter



Easy Assembly



6 In 1 Nozzle



Water Filter

Image: Close-up views of the 3-speed LCD touchscreen, premium brushless motor, faucet adapter, easy assembly connection, 6-in-1 nozzle, and water filter.

Included Accessories:

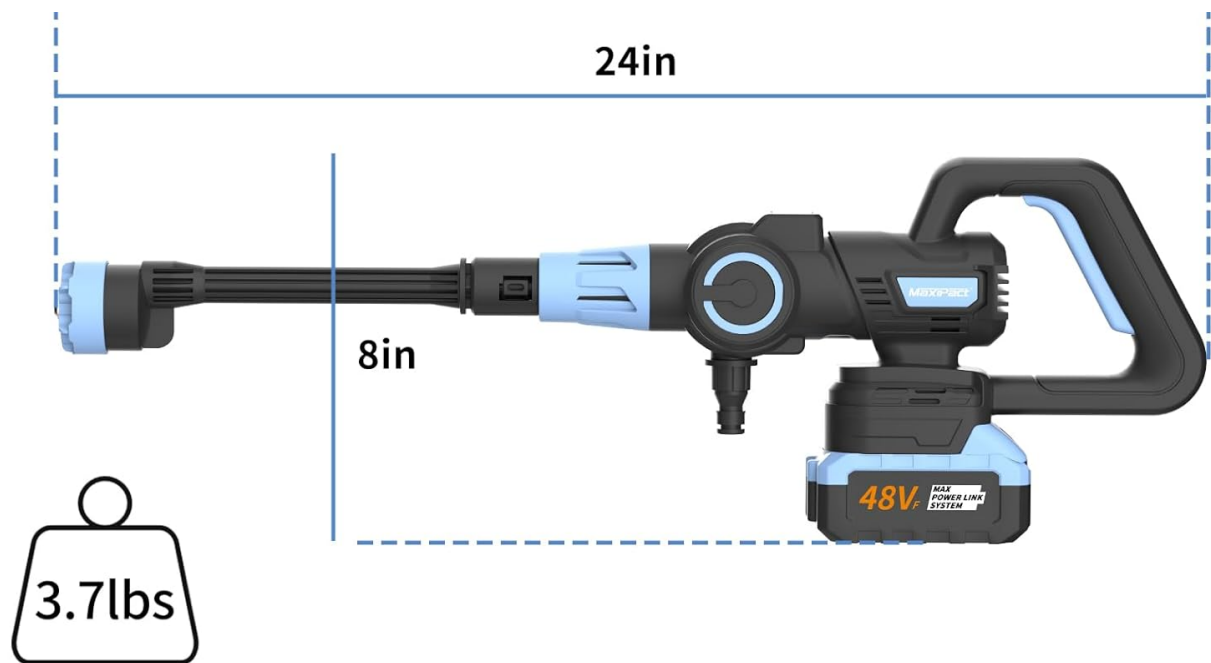 


Image: A diagram illustrating the pressure washer's dimensions and a visual list of included accessories: suitcase, 2 x batteries, charger, foam bottle, water stop adapter, 200-inch hose, 2 x quick connect adapters, water filter, faucet adapter, and 6-in-1 nozzle.

- **Main Unit:** The core pressure washer with integrated handle and battery slot.
- **Batteries (2x):** 4.0Ah Lithium-Ion batteries for cordless operation.
- **Charger:** For recharging the batteries.
- **6-in-1 Nozzle:** Adjustable spray patterns for various tasks.
- **Foam Bottle:** For applying soap or detergent.
- **Water Filter:** Protects the pump from debris.
- **Faucet Adapter:** For connecting to a standard water faucet.
- **Water Stop Adapter:** Ensures water flow control.
- **Hose (200 inch):** Provides ample reach for water intake.
- **Quick Connect Adapters (2x):** For easy hose connections.
- **Suitcase:** For convenient storage and transport.

6-IN-1 Spray Nozzle



Rotate the nozzle to
easily select different modes

Image: A visual representation of the 6-in-1 spray nozzle, demonstrating how to rotate it to select different spray modes, from a concentrated jet to a wide fan.

21V

With 2 Lithium-Ion Battery



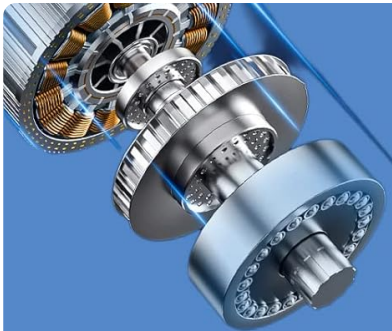 
30 Mins Runtime







4 Hours
Charging Time


48VF Motor Torque, Provide More Power.


Image: An illustration detailing the 21V Lithium-Ion battery, indicating a 30-minute runtime and 4-hour charging time, powered by a 48VF motor torque system for increased power.



Premium Brushless Motor

-  Extremely Long Service Life, Sturdy and Stable
-  Avoid Overheating, Low Temperature, High Efficiency
-  Stronger Power Output
-  Low Noise, More Power Saving





Carbon Brush Motor





-  Short Service Life
-  Overheat Quickly, Need Cooling
-  Low Power and Low Water Pressure
-  Unreliable, Generates Sparks and Smoke

Image: A comparison chart highlighting the advantages of the Premium Brushless Motor (extremely long service life, sturdy and stable, avoids overheating, low temperature, high efficiency, stronger power output, low noise, more power saving) over a Carbon Brush Motor (short service life, overheats quickly, low power, unreliable, generates sparks and smoke).

4. SETUP INSTRUCTIONS

Follow these steps to assemble and prepare your pressure washer for use.

1. Install Nozzle/Accessories:

Attach the desired accessory (e.g., 6-in-1 nozzle or foam bottle) to the front of the pressure washer unit by aligning and twisting until secure.

Your browser does not support the video tag.

Video: Demonstrates the installation of the 6-in-1 nozzle and foam bottle onto the pressure washer unit, showing the twisting motion for secure attachment.

2. Connect Water Hose and Filter:

Attach the water filter to one end of the hose. Connect the water stop adapter to the other end of the hose, then connect the water stop adapter to the pressure washer's water inlet. Ensure all connections are tight

to prevent leaks.



Water Filter



Faucet Adapters

Image: Shows the water filter submerged in water and the faucet adapters connected to a spigot, illustrating the water intake methods.



Image: A man connecting the faucet adapter to the pressure washer, demonstrating how easily it connects to faucet water, emphasizing portability.

3. Install Battery:

Slide a charged 48V battery into the battery slot on the underside of the pressure washer until it clicks into place.

Quick Assembly Steps:



Image: A step-by-step visual guide for easy assembly and operation: Rotate Install (nozzle), Connect Hose, Plug On Battery, Start Mode (press power button), Hold Trigger.

5. OPERATING INSTRUCTIONS

Learn how to effectively use your cordless pressure washer for various cleaning tasks.

1. Power On:

Press the power button on the unit. The LCD touchscreen will illuminate, indicating the current speed setting.



Image: A person operating the pressure washer, with an inset showing the 3-speed LCD touchscreen displaying different power levels indicated by green lights.

2. Adjust Speed:

Use the LCD touchscreen to cycle through the 3-speed settings (low, medium, high) to match the cleaning intensity required for your task.

3. Select Spray Pattern:

Rotate the 6-in-1 nozzle to choose the appropriate spray pattern for your application (e.g., narrow jet for tough stains, wide fan for general cleaning, or rinse mode).

4. Begin Cleaning:

Point the nozzle at the surface to be cleaned and press the trigger to start the water flow. Maintain a safe distance from the surface to avoid damage.

Your browser does not support the video tag.

Video: A comprehensive demonstration of the cordless pressure washer in action, showing various cleaning applications such as road cleaning, super cleaning of a manhole cover, and general surface cleaning.

Your browser does not support the video tag.

Video: Shows the pressure washer being used for long-distance cleaning, such as watering plants or cleaning high areas, and demonstrates the 3-speed adjustment feature.

5. Applying Detergent (with Foam Bottle):

Fill the foam bottle with appropriate pressure washer detergent. Attach it to the unit. Spray the detergent

onto the surface, allow it to dwell, then rinse with clean water using the appropriate nozzle setting.

Typical Applications:

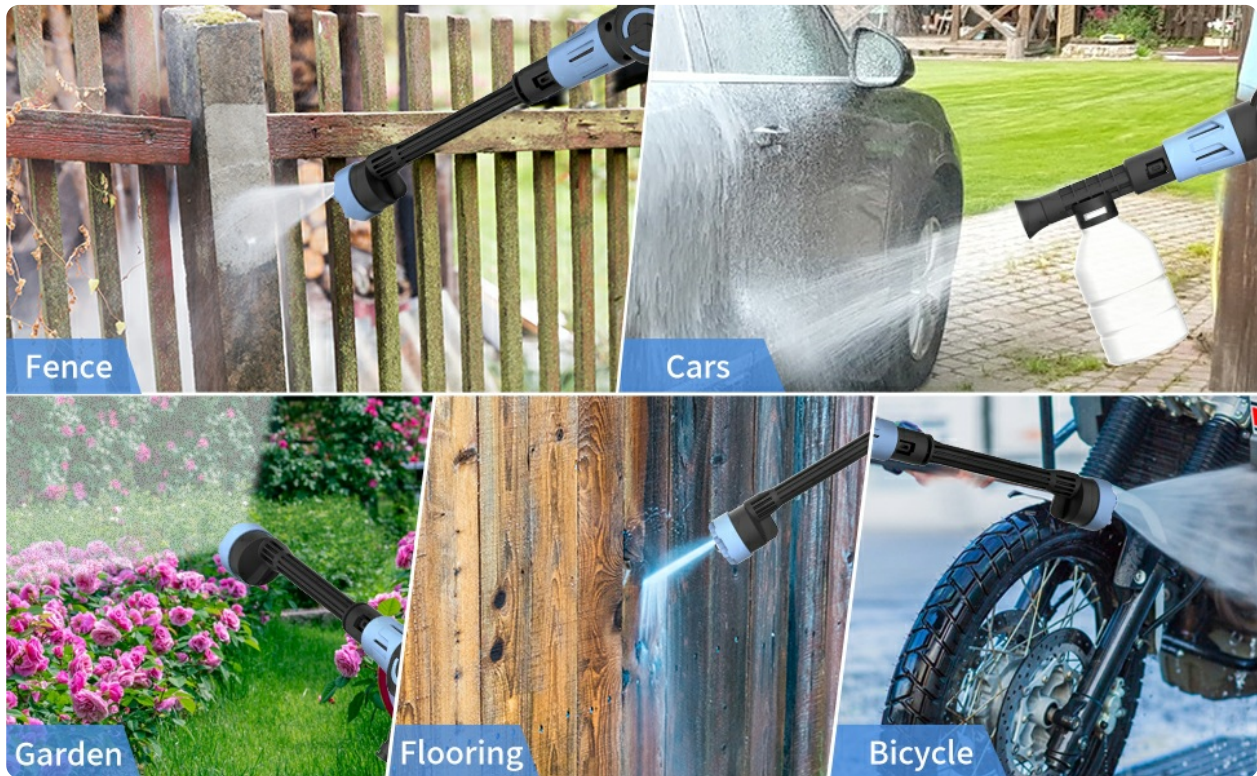 


Image: A collage showing the pressure washer being used for cleaning various items and surfaces, including fences, cars, gardens, flooring, and bicycles.



Image: A man safely cleaning a tiled roof with the pressure washer, demonstrating its effectiveness for thorough cleaning of elevated surfaces.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **After Each Use:**

- Flush the system with clean water to remove any detergent residue.
- Remove and clean the water filter.
- Wipe down the exterior of the unit with a damp cloth.

- **Storage:**

- Store the pressure washer and accessories in a dry, frost-free environment.
- Ensure batteries are fully charged before long-term storage and recharge them periodically.

- **Battery Care:**

- Do not expose batteries to extreme temperatures.
- Use only the provided charger for recharging.

7. TROUBLESHOOTING

If you encounter issues, refer to these common troubleshooting tips.

Problem	Possible Cause	Solution
No power/Unit not starting	Battery not charged or improperly installed.	Ensure battery is fully charged and correctly inserted.
Low pressure	Insufficient water supply, clogged filter, or incorrect nozzle setting.	Check water source, clean water filter, adjust nozzle.
Water leaks	Loose connections or damaged O-rings.	Tighten all connections, inspect and replace O-rings if necessary.
Unit stops during operation	Battery depleted or motor overheating.	Recharge battery. Allow unit to cool down if overheated.

8. SPECIFICATIONS

Attribute	Detail
Brand	Maxipact
Model Number	fccb1a65-afc7-4eb0-a240-6372eaa8e7c1
Power Source	Battery Powered (2x 4.0Ah Lithium-Ion)

Attribute	Detail
Maximum Pressure	1100 PSI
Product Dimensions	15 x 10 x 5 inches
Item Weight	8 pounds
Color	Blue
Motor Type	Brushless Motor
Speed Adjustment	3-Speed LCD Touchscreen
Nozzle Type	6-in-1 Spray Nozzle

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Maxipact customer service through the retailer where the product was purchased or visit the official Maxipact website. Please have your model number and purchase date available when contacting support.

Maxipact Store: [Visit Store](#)