

## ECONTROLLY DG11Q1-01 / DG11Q1-02

# Instruction Manual for ECONTROLLY Replacement Remote Control

Model: DG11Q1-01 / DG11Q1-02

## 1. INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY DG11Q1-01 / DG11Q1-02 replacement remote control, designed for seamless compatibility with Beko Arçelik Air Conditioner units. This remote offers a direct replacement solution, requiring no complex programming or setup. Simply insert batteries, and it is ready for use.

The remote control is constructed from durable ABS material, ensuring a comfortable grip and long-lasting performance. It utilizes infrared technology for sensitive and precise control over your air conditioner from a distance of up to 8-10 meters (26-33 feet).

## 2. SETUP AND BATTERY INSTALLATION

The ECONTROLLY replacement remote control is designed for immediate use. No programming or pairing is required. Follow these simple steps to begin operation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2.1: Rear view of the remote control with the battery cover removed, illustrating the battery insertion process.

Once batteries are installed, the remote control is ready to operate your compatible Beko Arçelik Air Conditioner.

### 3. OPERATING INSTRUCTIONS

This remote control provides full functionality for your Beko Arçelik Air Conditioner. Below is a description of each button's function:





Figure 3.1: Front view of the ECONTROLLY remote control, highlighting the button layout.

#### Button Functions:

| Button                      | Function                                                                                              |
|-----------------------------|-------------------------------------------------------------------------------------------------------|
| <b>Power ( )</b>            | Turns the air conditioner ON or OFF.                                                                  |
| <b>MODE</b>                 | Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).                                    |
| <b>FAN</b>                  | Adjusts the fan speed (e.g., Low, Medium, High, Auto).                                                |
| <b>SUPER</b>                | Activates or deactivates the rapid cooling/heating function.                                          |
| <b>SWING (≡)</b>            | Controls the horizontal louver swing.                                                                 |
| <b>SMART</b>                | Activates intelligent operating mode for optimal comfort.                                             |
| <b>IFEEL</b>                | Enables the remote control to sense the temperature at its location for more precise comfort control. |
| <b>TIMER OFF</b>            | Sets a timer for the air conditioner to turn OFF automatically.                                       |
| <b>CLOCK /<br/>TIMER ON</b> | Sets the current time or sets a timer for the air conditioner to turn ON automatically.               |
| <b>DIMMER</b>               | Adjusts the brightness of the air conditioner's display panel.                                        |
| <b>SWING (∟)</b>            | Controls the vertical louver swing.                                                                   |
| <b>SLEEP</b>                | Activates the sleep mode, which adjusts temperature and fan speed for comfortable sleep.              |
| <b>MUTE</b>                 | Mutes or unmutes the air conditioner's operational sounds.                                            |

## 4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's range decreases or if the air conditioner does not respond consistently. Always replace both batteries at the same time with new alkaline batteries of the correct type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote. Store it in a cool, dry place away from direct sunlight.
- **Avoid Drops:** Protect the remote from physical impact. Dropping the remote can damage internal circuitry or the display screen.

## 5. TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote control and the air conditioner's infrared receiver.
- Confirm you are within the effective operating range (8-10 meters).

- **Short Operating Range:**

- Batteries may be low; replace them.
- Ensure the remote's infrared emitter and the air conditioner's receiver are clean and free from dust.

- **Display Not Working:**

- Check and replace batteries.
- If the display remains blank after new batteries are installed, the remote may be faulty.

If these steps do not resolve the issue, please refer to the support information provided by your retailer or the air conditioner manufacturer.

## 6. SPECIFICATIONS

Key specifications for the ECONTROLLY DG11Q1-01 / DG11Q1-02 replacement remote control:



Figure 6.1: Dimensions of the ECONTROLLY remote control.

| Feature       | Detail                                                      |
|---------------|-------------------------------------------------------------|
| Model Numbers | DG11Q1-01, DG11Q1-02 (Item Model Number: RCEC-DG11Q1-01-02) |
| Compatibility | Beko Arçelik Air Conditioner Remote Control                 |
| Material      | ABS Environmental Protection Material                       |

| Feature               | Detail                                              |
|-----------------------|-----------------------------------------------------|
| Color                 | White                                               |
| Transmitting Distance | 8-10 meters (26-33 feet)                            |
| Power Source          | 2 x AAA Alkaline Batteries (not included)           |
| Product Dimensions    | 5 x 1 x 0.25 inches (approx. 12.7 x 2.54 x 0.64 cm) |
| Item Weight           | 2.3 ounces (approx. 65 grams)                       |
| Special Feature       | No programming or setting required                  |

## 7. WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please contact the seller or retailer from whom you purchased the product. Ensure you have your purchase receipt or order details available when contacting support.