

[Manuals.plus](#) /

› [TiMOVO](#) /

› TiMOVO Remote Control Page Turner User Manual

TiMOVO 840156967563

TiMOVO Remote Control Page Turner User Manual

Model: 840156967563

INTRODUCTION

The TiMOVO Remote Control Page Turner provides a convenient way to control your e-reader or tablet without direct screen interaction. This device enhances your reading experience by allowing you to turn pages remotely and can also function as a remote camera shutter for your smartphone or tablet.

This manual provides instructions for setting up, operating, and maintaining your TiMOVO Remote Control Page Turner.

PACKAGE CONTENTS

- RF Remote Control × 1
- Screen Sensor Clip × 1
- USB-C Charging Cable × 2
- Wrist Lanyard × 1
- Instruction Manual × 1

COMPATIBILITY

The TiMOVO Remote Control Page Turner is designed for use with capacitive touchscreen devices.

Compatible Devices:

- Kindle (all models except 7th/8th Generation)
- Kindle Paperwhite
- Kindle Oasis
- Kindle Kids Edition
- Kindle Voyage
- Kobo eReaders
- iPhone

- iPad
- Android Tablets
- Microsoft Surface

Incompatible Devices:

- Kindle 7th Generation
- Kindle 8th Generation
- Amazon Fire HD 10 (10th/11th Generation)

Compatibility

✓ **Compatible with**



Kindle Paperwhite



Kindle 10/11



Kindle Oasis



Kindle Kids edition



Kindle Scribe



Kindle Voyage



Kobo, iPad, iPhone and Andriod tablets



✗ **Not Compatible with**



Older Kindles



Kindle 7/8



Amazon Fire HD 10(10/11th generation)



This image illustrates the range of devices compatible with the TiMOVO Remote Control Page Turner, including various Kindle models, Kobo e-readers, and mobile tablets. It also clearly lists devices that are not compatible.

SETUP INSTRUCTIONS

Follow these steps to set up your TiMOVO Remote Control Page Turner for first-time use:

1. **Activate the Sensor Clip:** Press and hold the button on the screen sensor clip for approximately 3 seconds until a red indicator light illuminates and remains steady. This indicates the clip is ready for pairing.
2. **Pair the Remote Control:** Press any button on the RF remote controller. A quick blue flash on the sensor clip confirms a successful connection between the remote and the clip.
3. **Attach the Sensor Clip:** Carefully attach the sensor clip to the screen of your e-reader or tablet. Ensure the clip's contact point touches the screen and does not obstruct any text or content.

Once these steps are completed, you can begin using your page turner.

Simple to Set up




Step 1

Press the sensor clip's button for 3 seconds until the red light stays on




Step 2

Press the RF remote controller button. A swift blue flash on the sensor clip means successful connection

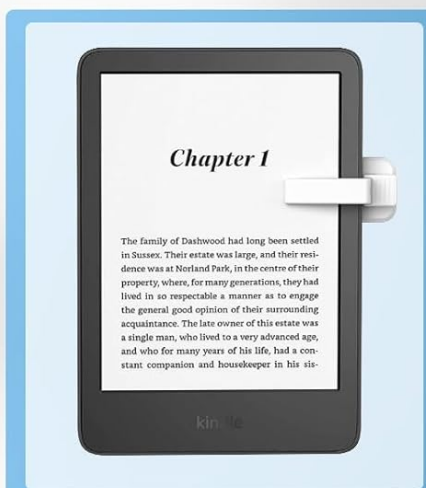


Step 3

Attach the sensor clip on the screen, then start your reading

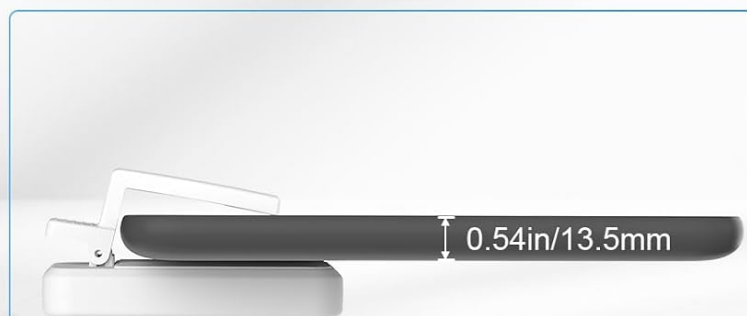

Note : the sensor clip fits devices with thickness less than 0.54in/13.5mm

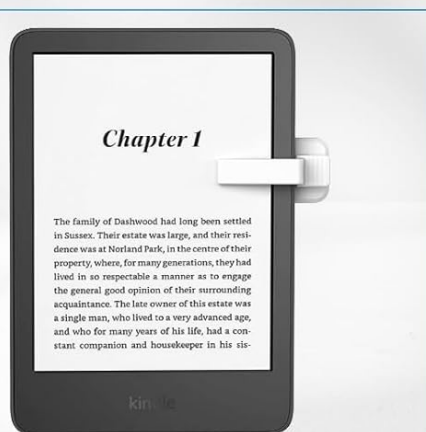

Make sure the clip touches the screen and does not block the text

This image provides a visual guide for the three simple steps required to set up the TiMOVO Remote Control Page Turner, from activating the sensor clip to attaching it to your device.

Important Considerations for Setup:

- **Device Thickness:** The total thickness of your e-reader or tablet, including any protective case, should not exceed 13.5mm (0.54 inches). If it exceeds this limit, remove the case before use to ensure proper functionality.
- **Clip Placement:** Ensure the sensor clip is positioned so that its contact point makes proper contact with the screen

without covering essential text. Adjust the margins of your reading application if necessary to prevent text obstruction.

OPERATING INSTRUCTIONS

Turning Pages:

After successful setup, simply press the button on the RF remote control to advance to the next page on your e-reader or tablet. This allows for hands-free reading.

Returning to Previous Page:

To navigate back to the previous page, detach the sensor clip and re-attach it to the **left side** of your e-reader's screen. This will enable the remote to trigger the 'previous page' function.

Using with Mobile/Tablet Reading Apps:

If using the page turner with reading applications on mobile phones or tablets, it is recommended to disable any scrolling functions within the app. This ensures that the page turner's button press correctly registers as a page turn rather than a scroll action.

Comfortable Reading Time

Turn the page with a simple button press, effortlessly read your favourite stories



No Bluetooth



No Wifi



Remote Control



Power Display



This image demonstrates the primary use of the TiMOVO Remote Control Page Turner, allowing for comfortable, hands-free reading by simply pressing a button to turn pages.

CAMERA REMOTE FUNCTION

Beyond its primary function as a page turner, the TiMOVO Remote Control can also serve as a wireless remote shutter for your smartphone or tablet's camera. This feature is compatible with all capacitive touchscreens.

To use this function, ensure your device's camera app is open and ready to take a photo or start a video. Pressing the button on the remote will trigger the camera shutter, allowing for easier selfies, group photos, or video recording from a distance.

Wireless Remote Control

Note: Please make sure the clip is clipped to the shooting confirmation button

For taking photos



For video shooting

This image illustrates the versatility of the TiMOVO Remote Control, showcasing its use as a wireless camera shutter for both photography and video recording on a smartphone.

CHARGING AND POWER DISPLAY

The TiMOVO Remote Control Page Turner features USB-C charging and an integrated LCD power display for convenient battery monitoring.

- **Charging:** Use the provided USB-C charging cable to charge both the RF remote control and the screen sensor clip. A full charge typically takes approximately 2 hours.
- **Battery Life:** The RF remote control offers up to 60 days of use on a single charge, while the screen sensor clip provides up to 15 days of use.
- **LCD Power Display:** The remote control features an LCD screen that clearly indicates the current battery level, allowing you to know when charging is needed.
- **Auto-Sleep Function:** To conserve battery, the device includes a 10-minute auto-sleep function. If the page turner enters sleep mode, simply press any button on the remote to wake it up and resume operation.

Convenient USB-C Charging LCD Power Display



2Hrs
Charging



RF Remote:
60 days use



Sensor Clip:
15 days use



Specific Power Display



This image displays the USB-C charging ports on both the remote control and the sensor clip, along with the remote's LCD power display, indicating battery status and charging progress.

TROUBLESHOOTING

If you encounter issues with your TiMOVO Remote Control Page Turner, consider the following:

- **Device Not Responding:**

- Ensure both the remote control and the sensor clip are sufficiently charged. Check the LCD power display on the remote.
- Verify that the sensor clip is properly attached to the screen and its contact point is making firm contact.
- Confirm that the device is not in auto-sleep mode. Press any button on the remote to wake it up.
- Re-attempt the pairing process as described in the "Setup Instructions" section.

- **Page Turning Inconsistent or Not Working:**

- Check the thickness of your e-reader/tablet with its case. If it exceeds 13.5mm (0.54 inches), remove the case.

- Adjust the position of the sensor clip to ensure it is not blocking text and is making optimal contact with the screen.
 - If using a reading app on a mobile device, ensure any scrolling functions are disabled within the app settings.
- **Cannot Turn to Previous Page:**
 - Ensure the sensor clip is attached to the **left side** of your e-reader's screen for the previous page function.


SPECIFICATIONS

Brand	TiMOVO
Model Number	840156967563
Product Dimensions	8.81 x 3 x 2.95 cm
Item Weight	81.08 g (2.86 ounces)
Color	White
Connectivity Technology	Radiofrequency (RF)
Maximum Range	15 meters
Number of Buttons	1
Special Features	Rechargeable; Power Display
Battery Description	Rechargeable
Max Supported Devices	1

MAINTENANCE

- To ensure the longevity and optimal performance of your TiMOVO Remote Control Page Turner, follow these maintenance guidelines:
- **Cleaning:** Use a soft, dry cloth to wipe the surfaces of the remote control and sensor clip. Avoid using harsh chemicals or abrasive materials, which can damage the finish or internal components.
 - **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
 - **Battery Care:** For best battery health, avoid fully discharging the device frequently. Charge it when the power display indicates a low battery level. If storing for an extended period, charge the device to approximately 50% before storage.
 - **Handle with Care:** Avoid dropping the device or subjecting it to strong impacts, as this can damage internal circuitry.

Screen-friendly Design

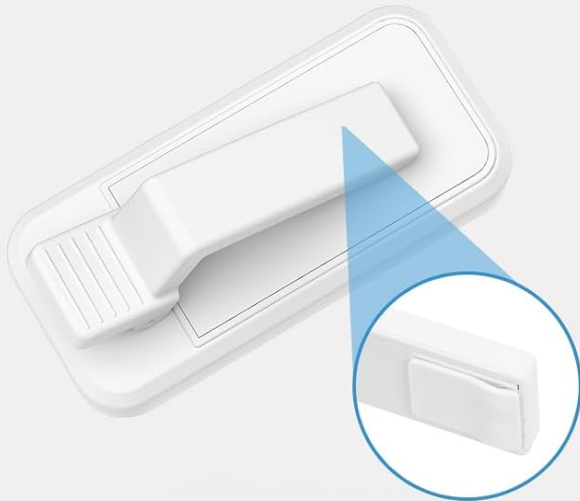

Silicone protective pad

Comfortable to Hold in Hand



Mute Button Design



Wrist Lanyard

This image showcases the thoughtful design elements of the TiMOVO Page Turner, such as the screen-friendly silicone protective pad on the clip, the ergonomic shape of the remote for comfortable holding, the silent operation of the mute button, and the practical wrist lanyard.

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries regarding your TiMOVO Remote Control Page Turner, please refer to the product packaging or visit the official TiMOVO website. Contact details and specific warranty terms are typically provided with your purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question