

[Manuals.plus](#) /

> [Neff](#) /

> NEFF B2CCJ7AK3 N 30 Built-in Oven User Manual

Neff B2CCJ7AK3

NEFF B2CCJ7AK3 N 30 Built-in Oven User Manual

Model: B2CCJ7AK3

1. IMPORTANT SAFETY INSTRUCTIONS



Figure 1.1: The NEFF B2CCJ7AK3 N 30 Built-in Oven, featuring a black finish and LED touch control.

Read these instructions carefully before using the appliance for the first time. Keep this instruction manual for future reference. Failure to follow these instructions may result in injury or damage to the appliance.

- **Electrical Safety:** Ensure the appliance is correctly installed and earthed by a qualified professional. Do not use damaged power cords.
- **Hot Surfaces:** The oven and its accessible parts become very hot during use. Exercise caution to avoid burns. Keep children away.
- **Children and Vulnerable Persons:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- **Pyrolytic Cleaning:** During pyrolytic cleaning, the oven reaches very high temperatures. Ensure the area is well-ventilated and keep children and pets away. The door temperature remains low, but caution is still advised.
- **Proper Use:** Use the oven only for preparing food. Do not use it for heating rooms, drying clothes, or storing flammable materials.

2. SETUP AND INSTALLATION

The NEFF B2CCJ7AK3 built-in oven requires professional installation. Refer to the technical drawings and installation instructions provided separately with the appliance for precise details.

2.1 Dimensions

- **Appliance Dimensions (H x W x D):** 59.5 cm x 59.5 cm x 54.8 cm (23.43" H x 23.39" W x 21.57" D)
- **Niche Dimensions for Installation (H x W x D):** 59.5 cm x 56 cm x 55 cm

2.2 Initial Use

Before using the oven for the first time, clean the interior with a damp cloth. Heat the empty oven at maximum temperature for approximately one hour to burn off any manufacturing residues. Ensure good ventilation during this process.

3. OPERATING INSTRUCTIONS

The NEFF B2CCJ7AK3 oven features an intuitive LED touch control for easy operation.



Figure 3.1: Close-up of the NEFF B2CCJ7AK3 oven's LED touch control panel, showing temperature display and function icons.

3.1 LED Touch Control

The LED touch control allows you to select heating modes, set temperatures, and activate automatic programs with a simple touch. The display shows current settings and cooking progress.

3.2 Heating Modes

The oven offers 7 heating modes, adjustable from 30 °C to 275 °C:

- **CircoTherm®:** Innovative hot air system for baking and roasting on up to three levels simultaneously without flavor transfer.
- **Air Fry:** Ideal for preparing crispy dishes like chicken wings or fries with minimal oil.
- **Large Grill:** For grilling larger quantities of food.
- **Hot Air:** General hot air function for even cooking.
- **Warm Air Soft:** Gentle hot air for delicate dishes.
- **Top/Bottom Heat:** Traditional heating for baking and roasting.
- **Pizza Position:** Specific setting for perfect pizza crusts.
- **Circulation Air Grill:** Combines grill and fan for even browning.

3.3 Automatic Programs

The oven includes 10 preset automatic programs. Select the desired program, and the oven will automatically adjust the heating mode, temperature, and cooking time for optimal results.

3.4 Fast Heating Function

Activate the fast heating function to quickly reach the desired temperature without additional energy consumption.

3.5 Child Safety Lock

The individually adjustable child safety lock prevents unintended operation of the oven. Refer to the full manual for activation and deactivation instructions.

3.6 Oven Lighting

The oven features a halogen lamp for even illumination of the oven interior. The oven light can be switched off if desired.

4. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure the longevity and optimal performance of your NEFF oven.

4.1 Pyrolytic Self-Cleaning

For thorough cleaning of heavy soiling, use the pyrolytic self-cleaning function. This process heats the oven to very high temperatures, turning food residues into ash that can be easily wiped away once the oven has cooled. During this process, the 4-way door glazing and very low window temperature ensure safety.

4.2 EasyClean® Function

For light soiling, the EasyClean® function provides a quick and environmentally friendly cleaning solution. This function uses water vapor and a small amount of detergent to soften residues, making them easier to wipe clean.

4.3 General Cleaning

- Clean the exterior surfaces with a soft, damp cloth and mild detergent.
- Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- The anthracite enamel interior design and fully glass interior door are designed for easy cleaning.

5. TROUBLESHOOTING

If you encounter issues with your oven, consult the following common solutions before contacting customer service.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; incorrect settings.	Check circuit breaker. Ensure oven is plugged in. Verify selected heating mode and temperature.
Uneven cooking results.	Incorrect rack position; overloaded oven.	Use recommended rack positions. Avoid overcrowding the oven. Utilize CircoTherm for multi-level cooking.
Oven light not working.	Lamp faulty or switched off.	Check if the oven light is switched off. Replace halogen lamp if necessary (consult service manual).
Clock is inaccurate.	Internal clock drift.	Reset the electronic clock. This is a known characteristic for some units.

6. SPECIFICATIONS

Detailed technical specifications for the NEFF B2CCJ7AK3 N 30 Built-in Oven.

- **Model:** B2CCJ7AK3
- **Brand:** Neff
- **Installation Type:** Built-In
- **Oven Capacity:** 71 Liters
- **Energy Efficiency Class:** A+
- **Wattage:** 3600 Watt-hours
- **Voltage:** 240 Volts
- **Heating Methods:** Large grill, hot air, warm air soft, air frying, top/bottom heat, pizza position, circulation air grill, CircoTherm®
- **Temperature Range:** 30 °C to 275 °C
- **Control Type:** LED Touch Control
- **Cleaning System:** Pyrolytic self-cleaning, EasyClean®
- **Material:** Enameled Steel
- **Item Weight:** 35.1 Kilograms
- **Dimensions (H x W x D):** 59.5 cm x 59.5 cm x 54.8 cm (23.43" H x 23.39" W x 21.57" D)
- **Niche Dimensions (H x W x D):** 59.5 cm x 56 cm x 55 cm
- **Door Glazing:** 4-fold
- **Additional Features:** Automatic programs (10), Fast heating function, Individually adjustable child safety lock, Electronic clock, Optical heating control, Switchable oven light (halogen lamp).

6.1 Included Components



Figure 6.1: The NEFF B2CCJ7AK3 oven comes with a combo grate, a universal pan, and an air fry & grill plate.

- 1 x Combo Grate
- 1 x Universal Pan
- 1 x Air Fry & Grill Plate

7. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact NEFF customer service. NEFF provides support for product inquiries, technical assistance, and service requests.

You can find contact details for customer support on the official NEFF website or through your retailer.

Online Resources: [Visit the Neff Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DGY5DYKS>

More documents and user manuals: <https://manuals.plus/>