

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› **TERENCE** /

› TERENCE V30 Digital Piano 88 Key Weighted Keyboard Instruction Manual

TERENCE V30

TERENCE V30 Digital Piano User Manual

Model: V30

1. INTRODUCTION

Welcome to the TERENCE V30 Digital Piano. This manual provides essential information for setting up, operating, and maintaining your instrument. Please read it thoroughly to ensure optimal performance and longevity of your digital piano.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- TERENCE V30 Digital Piano
- Music Stand
- Sustain Pedal
- Piano Bag
- Keyboard Stickers
- Power Adapter
- User Manual (this document)

3. PRODUCT FEATURES

The TERENCE V30 Digital Piano offers a range of features designed for an enhanced playing experience:

- **Upgraded Speaker System:** Dual tone design with two 5W speakers and two 5W bass diaphragms for realistic and delicate sound quality.
- **88 Key Full Size Weighted Keyboard:** Full-size weighted keys with velocity sensitivity, mimicking an acoustic piano feel. Features wood grain, anti-slip, and scratch-resistant keys.
- **Rich Functions and Accessories:** Includes 96 tones, 128 rhythms, 29 demo songs, LCD screen, keyboard percussion, reverb, sustain, metronome, speed, and transpose functions. Comes with a piano bag, music stand, keyboard stickers, and sustain pedal.
- **Multifunctional Connection:** MIDI, audio input, headphone jack, microphone, pedal, and power jack. Built-in Bluetooth for connecting to mobile devices, computers, or tablets for learning applications.
- **Foldable Design:** Newly upgraded folding shape with a refined and stable mechanical hinge, allowing 180-degree flexible opening and closing. Folded size: 24.2 x 8.5 x 5.1 inches for portability.



Image: The TERENCE V30 Digital Piano shown in both its unfolded, playable state with a tablet on the music stand, and its compact, folded state, highlighting its portability.

4. SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Unfolding the Piano:** Place the piano on a flat, stable surface. Gently unfold the two halves of the keyboard until it lies flat and locks into position. Ensure the hinge mechanism is fully extended and stable.

Breakthrough Design of Foldable Digital Piano



Image: A detailed view of the piano's folding mechanism, showing how the two halves connect securely when unfolded.

3. **Attaching the Music Stand:** Insert the music stand into the designated slot on the top panel of the piano.
4. **Connecting the Sustain Pedal:** Plug the sustain pedal cable into the "PEDAL" or "SUS" jack on the rear panel of the piano.
5. **Power Connection:** Connect the power adapter to the DC IN jack on the piano and then to a suitable power outlet. The piano can also operate on its internal rechargeable battery.
6. **Initial Power On:** Press the Power button to turn on the piano. The LCD screen will illuminate.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

- **Power On/Off:** Press the **Power** button to turn the unit on or off.
- **Volume Control:** Use the **Volume** knob or buttons to adjust the overall sound level.
- **LCD Display:** The LCD screen displays current settings such as tone, rhythm, and tempo.



LCD Display



Built-in Rechargeable Battery

Suitable for outdoor playing

Image: A detailed view of the piano's control panel, showing the LCD screen and various function buttons.

5.2 Sound and Rhythm Selection

- **Tones:** Select from 96 available tones using the dedicated tone selection buttons or menu.
- **Rhythms:** Choose from 128 rhythms to accompany your playing. Adjust tempo using the tempo controls.
- **Demo Songs:** Play one of the 29 built-in demo songs for listening or practice.

5.3 Advanced Functions

- **Metronome:** Activate the metronome function to assist with timing and rhythm practice. Adjust the tempo as needed.
- **Recording:** Use the recording function to capture your performances. Refer to the on-screen prompts for recording and playback.
- **Reverb/Sustain:** Apply reverb effects or use the sustain pedal for extended note decay.
- **Transpose:** Change the key of the keyboard without altering your finger positions.
- **Keyboard Percussion:** Access various percussion sounds directly from the keyboard keys.

5.4 Connectivity

- **Headphones:** Connect headphones to the 3.5mm headphone jack for private practice.

Support External Speakers and Headphones

Achieve stunning sound or quiet performance



Sustain Pedal Function



Image: A detailed view of the piano's connectivity panel, showing ports for headphones, MIDI, and USB.

- **MIDI:** Use the MIDI port to connect to external MIDI devices or computers for advanced music production or learning software.
- **Bluetooth:** Activate Bluetooth on the piano and your device to connect wirelessly. This allows for audio streaming and interaction with piano learning applications.

Support Bluetooth & MIDI Function

Compatible for various music apps for practicing, performing, game playing.



Can not only output the music, but also can input an external sound source to play it on the speakers that come with the digital piano.



Image: The TERENCE V30 Digital Piano demonstrating its Bluetooth connectivity with a tablet running a music application.

- **Audio Input:** Connect external audio sources (e.g., MP3 player) to the audio input jack to play along with your favorite music through the piano's speakers.
- **Microphone:** Connect a microphone to the microphone input for vocal accompaniment.

6. BATTERY INFORMATION

The TERENCE V30 Digital Piano is equipped with a built-in rechargeable Lithium Metal battery (1 included). To charge, connect the power adapter. The LCD display indicates battery level.

Multi-style Piano Tones;

The piano keyboard has multi-style piano tones -- classic tone, popular tone and others, catering for your different playing styles.



Self-developed
Audio Chip



Image: The TERENCE V30 Digital Piano highlighting its LCD display and the convenience of its built-in rechargeable battery for portable use.

7. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the piano's surface. For stubborn dirt, slightly dampen the cloth with water. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use, fold the piano and store it in the provided piano bag to protect it from dust and damage. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the piano with care, especially when folding or unfolding, to prevent damage to the hinge mechanism or keys.
- **Liquid Exposure:** Keep liquids away from the piano to prevent electrical damage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from speakers/headphones.	Volume too low; headphones not fully inserted; power issue.	Increase volume. Ensure headphones are fully plugged in. Check power connection and battery level.

Problem	Possible Cause	Solution
Keys are unresponsive or glitching.	Dust or debris under keys; internal connection issue.	Gently clean around the keys. Power cycle the piano. If the problem persists, contact customer support.
Bluetooth connection fails.	Bluetooth not enabled; device too far; interference.	Ensure Bluetooth is active on both piano and device. Move device closer. Restart both devices.
Piano does not power on.	Low battery; power adapter not connected or faulty.	Charge the battery. Verify power adapter connection and ensure it's working.

9. SPECIFICATIONS

- **Model:** V30
- **Brand:** TERENCE
- **Number of Keys:** 88
- **Key Type:** Full-size Weighted, Wood grain, Anti-slip
- **Speaker System:** Dual tone design, 2 x 5W speakers, 2 x 5W bass diaphragms
- **Tones:** 96
- **Rhythms:** 128
- **Demo Songs:** 29
- **Connectivity:** MIDI, Audio Input, Headphone Jack (3.5mm), Microphone, Pedal, Power Jack, Bluetooth
- **Power Source:** Battery Powered (1 Lithium Metal battery included)
- **Folded Dimensions:** 24.2 x 8.5 x 5.1 inches
- **Product Dimensions (Unfolded):** Approximately 48.4 x 8.5 x 5.1 inches
- **Item Weight:** 12.42 pounds (5.65 Kilograms)
- **Material Type:** Wood (keys), Plastic/Synthetic Composite (outer casing)

10. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official TERENCE website. Keep your proof of purchase for warranty claims.