

XXXXX

onn. Rugged Portable Bluetooth IPX7 Waterproof Speaker User Manual

Model: xxxxx

INTRODUCTION

This user manual provides comprehensive instructions for the onn. Rugged Portable Bluetooth IPX7 Waterproof Speaker, Model xxxxx. Designed for durability and versatility, this speaker offers a robust audio solution for various environments. Please read this manual thoroughly before using your speaker to ensure proper operation and longevity.

WHAT'S IN THE BOX

Upon unpacking your onn. Rugged Portable Bluetooth Speaker, please verify that all the following items are included:

- 1 x onn. Rugged Portable Bluetooth Speaker
- 1 x USB Charging Cable (1.97 ft / 60 cm)
- 1 x Quick Start Guide



Image: The onn. Rugged Portable Bluetooth Speaker in its retail packaging, showing the speaker and included accessories.

FEATURES

The onn. Rugged Portable Bluetooth Speaker is equipped with features designed for convenience and performance:

- **Waterproof and Durable:** Designed to withstand water exposure and rough handling, perfect for outdoor and active use. Rated IPX7 for water resistance.
- **Bluetooth Wireless Technology:** Streams audio from all your devices with up to 33 ft (10 m) range.
- **Long Playtime:** Built-in rechargeable battery provides up to 10 hours of playtime on a single charge.
- **Compact and Portable:** Small, rugged design with a convenient carry strap for easy transport.
- **Clear Sound Quality:** Delivers decent sound quality with clear audio output.

SETUP

Charging the Speaker

1. Locate the charging port on the speaker, typically covered by a waterproof flap.

2. Open the flap and insert the small end of the provided USB charging cable into the speaker's charging port.
3. Connect the larger end of the USB cable to a compatible USB power source (e.g., computer USB port, USB wall adapter).
4. The charging indicator light will illuminate, typically red, to show that the speaker is charging.
5. Once fully charged (approximately 2-3 hours), the indicator light will change or turn off (refer to specific light behavior in Quick Start Guide).

Initial Power On

1. Press and hold the Power button (usually marked with a power symbol) located on the top or side of the speaker for a few seconds.
2. You will hear an audible tone or see an indicator light (often blue) to confirm the speaker is powered on and ready for pairing.



Image: Top view of the speaker, highlighting the power button and other controls for setup and operation.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Ensure the speaker is powered on and in pairing mode (the Bluetooth indicator light will typically flash rapidly).
2. On your Bluetooth-enabled device (smartphone, tablet, computer), navigate to the Bluetooth settings.
3. Search for available devices. The speaker will appear as "onn. Rugged Speaker" or similar.
4. Select the speaker from the list to initiate pairing.
5. Once successfully paired, the Bluetooth indicator light on the speaker will become solid, and you will hear a confirmation tone.

Basic Controls

The speaker features intuitive controls on its top panel:

- **Power Button (⏻):** Press and hold to turn the speaker on/off.

- **Volume Down (-):** Press to decrease volume.
- **Volume Up (+):** Press to increase volume.
- **Play/Pause (▶/||):** Press to play or pause audio.
- **Skip Track (⏮):** Double-press volume buttons or dedicated skip buttons (if present) to skip tracks. Refer to Quick Start Guide for exact button functions.

Waterproof Usage (IPX7)

The speaker is IPX7 waterproof, meaning it can be submerged in up to 1 meter of water for up to 30 minutes. To maintain its waterproof integrity:

- Ensure the charging port cover is securely closed before exposing the speaker to water.
- Do not expose the speaker to saltwater or other chemicals, as this may damage the seals.
- After exposure to water, especially chlorinated or dirty water, rinse the speaker with clean fresh water and dry thoroughly before charging or opening the port cover.

MAINTENANCE

To ensure the longevity and optimal performance of your speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, damp cloth to wipe down the speaker. Avoid using harsh chemicals, solvents, or abrasive cleaners.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in constant use.

TROUBLESHOOTING

If you encounter any issues with your onn. Rugged Portable Bluetooth Speaker, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker using the provided USB cable.
No sound from speaker.	Volume too low; Not paired; Device not playing.	Increase speaker and device volume; Ensure speaker is paired; Check if audio is playing on the connected device.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is flashing Bluetooth light; Move device closer to speaker; Turn off other Bluetooth devices nearby.

Problem	Possible Cause	Solution
Poor sound quality.	Device too far; Obstructions; Low battery.	Move device closer; Remove obstructions; Charge speaker.

SPECIFICATIONS

Feature	Specification
Model Name	onn. Rugged Portable Bluetooth Speaker
Model Number	xxxxx
Connectivity Technology	Bluetooth, USB
Wireless Communication Technology	Bluetooth
Bluetooth Range	Up to 33 Feet (10 meters)
Waterproof Rating	IPX7
Battery Life	Up to 10 Hours
Power Source	Battery Powered
Input Voltage	5 Volts
Speaker Maximum Output Power	20 Watts
Audio Output Mode	Stereo
Product Dimensions (D x W x H)	2.28" x 4.72" x 2.56"
Item Weight	12 Ounces
Material	Rubberized or Silicone Outer Layer
Color	Blue-gray
Manufacturer	onn

WARRANTY AND SUPPORT

The onn. Rugged Portable Bluetooth Speaker comes with a **Limited Warranty**. Please refer to the Quick Start Guide included in your product packaging for specific details regarding warranty coverage, terms, and conditions.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact the manufacturer's customer service. Contact information can typically be found on the product packaging or the manufacturer's official website.