

[Manuals.plus](#) /

› [Aquasonic](#) /

› Aquasonic Black Series PRO Electric Toothbrush User Manual

Aquasonic AS-TBSH-PRO3-BK

Aquasonic Black Series PRO Electric Toothbrush User Manual

Model: AS-TBSH-PRO3-BK

INTRODUCTION

Thank you for choosing the Aquasonic Black Series PRO Ultra-Whitening Electric Toothbrush. This manual provides essential information for the safe and effective use, maintenance, and care of your new electric toothbrush. Please read it thoroughly before first use and retain it for future reference.



Image: The AquaSonic Black Series PRO Electric Toothbrush, including the handle, six ProFlex brush heads, a premium travel case, and the charging base.

IMPORTANT SAFETY INFORMATION

Please observe the following safety guidelines to prevent injury or damage to the product:

- Do not use with damaged brush heads or if the bristles are excessively worn.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not immerse the charging base in water or other liquids.
- Ensure the charging base is placed on a stable, dry surface.

- If the product is damaged in any way, discontinue use immediately and contact customer support.

PACKAGE CONTENTS

Your Aquasonic Black Series PRO package includes:

- 1 x Aquasonic Black Series PRO Toothbrush Handle
- 6 x ProFlex Brush Heads
- 1 x Premium Travel Case
- 1 x Wireless Charging Base

Exceptional Value

6 DuPont ProFlex Brush Heads Included
for 1.5+ Years of Brushing



Premium Travel Case Included

Image: Six ProFlex brush heads and the premium travel case, demonstrating the included accessories.

SETUP GUIDE

1. Initial Charging

1. Place the wireless charging base on a dry, stable surface.
2. Connect the charging base to a power outlet.
3. Place the toothbrush handle onto the charging base. The indicator light on the handle will illuminate, indicating it is charging.
4. Charge the toothbrush for a full 24 hours before first use to ensure optimal battery life. A full charge provides up to 30 days of use.

2. Attaching a Brush Head

1. Align the brush head with the metal shaft on the toothbrush handle.
2. Push the brush head down firmly until it clicks into place. Ensure it is securely attached.



Image: A detailed view of a ProFlex brush head, highlighting its design for effective cleaning.

OPERATING INSTRUCTIONS

Power On/Off and Mode Selection

1. Press the **ON/OFF** button once to turn on the toothbrush. It will start in the last used mode.
2. Press the **ON/OFF** button repeatedly to cycle through the 5 brushing modes: Clean, Soft, Whiten, Massage, Deep Clean.
3. To turn off the toothbrush, press and hold the **ON/OFF** button for 2 seconds, or cycle through all modes until it turns off. The toothbrush will also automatically shut off after 2 minutes of operation.

Brushing Modes

- **Clean:** Standard brushing mode for daily plaque removal.
- **Soft:** Gentle mode for sensitive teeth and gums.
- **Whiten:** Helps remove daily surface stains for brighter teeth.
- **Massage:** Delivers vibrating microbursts to gently stimulate gums.
- **Deep Clean:** Targets stubborn discoloration and leaves teeth feeling smoother.

Intelligent Brushing

5 Custom Modes

CLEAN

standard brushing mode

SOFT

gentle mode for sensitive teeth

WHITEN

helps remove daily surface stains

MASSAGE

delivers vibrating microbursts to gums

DEEP CLEAN

targets stubborn discoloration & leaves teeth feeling smoother

CLEAN

SOFT

WHITEN

MASSAGE

DEEP CLEAN

Image: The control panel of the Aquasonic Black Series PRO, illustrating the power button and the five distinct brushing modes.

Smart Timers

The Aquasonic Black Series PRO features a built-in smart timer system to guide your brushing:

- **2-Minute Auto Shut-Off:** The toothbrush will automatically turn off after 2 minutes, indicating the dentist-recommended brushing time has been completed.
- **30-Second Interval Timer:** Every 30 seconds, the toothbrush will briefly pause, signaling you to move to a different quadrant of your mouth (upper right, upper left, lower right, lower left).

Brushing Technique

For optimal results, follow these guidelines:

1. Wet the brush head and apply a small amount of toothpaste.
2. Place the brush head against your teeth at a slight angle towards the gum line.
3. Turn on the toothbrush and gently move it across your teeth, allowing the sonic vibrations to do the work. Do not

scrub aggressively.

4. Divide your mouth into four sections (quadrants). Brush each section for 30 seconds, moving to the next when the timer briefly pauses.
5. After 2 minutes, the toothbrush will automatically turn off. Rinse your mouth and the brush head thoroughly.

MAINTENANCE AND CARE

Cleaning the Toothbrush

- **After Each Use:** Rinse the brush head thoroughly under running water while the toothbrush is still on to remove any remaining toothpaste or debris. Turn off the toothbrush and rinse the handle.
- **Weekly Cleaning:** Periodically remove the brush head and rinse both the brush head and the metal shaft of the handle under running water. Wipe the handle with a soft, damp cloth.
- **Charging Base:** Unplug the charging base and wipe it with a damp cloth. Do not immerse the charging base in water.

Replacing Brush Heads

Dentists recommend replacing your toothbrush head every 3 months, or sooner if the bristles become frayed or worn. Your Aquasonic Black Series PRO comes with 6 ProFlex brush heads, providing an 18-month supply.

1. Grip the brush head firmly and pull it straight off the handle.
2. Align a new ProFlex brush head with the metal shaft and push it down until it clicks into place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toothbrush does not turn on.	Battery is depleted.	Place the toothbrush on the charging base and charge for 24 hours.
Reduced brushing power.	Low battery or worn brush head.	Recharge the toothbrush. Replace the brush head if bristles are frayed.
Brush head feels loose.	Brush head not properly attached.	Remove and re-attach the brush head, ensuring it clicks into place.
Charging indicator light not working.	Charging base not powered or toothbrush not correctly placed.	Ensure the charging base is plugged in. Re-position the toothbrush on the base.

SPECIFICATIONS

- Model Number:** AS-TBSH-PRO3-BK
- Vibrations Per Minute:** Up to 50,000 VPM
- Brushing Modes:** 5 (Clean, Soft, Whiten, Massage, Deep Clean)
- Battery Type:** Lithium Ion (included)
- Battery Life:** Up to 30 days on a single charge
- Waterproof Rating:** IPX7

Power Source: Battery Powered

Item Firmness Description: Soft

Package Dimensions: 8.5 x 3.31 x 2.72 inches

Item Weight: 14.07 ounces



**50,000 Vibrations
Per Minute Motor**

Smart Chip to Guide
the 30-Second Timers
& 2-Minute Auto Shut-Off

**5 Brushing
Modes**

**Powerful Lithium-Ion Battery
with Wireless Charging**

**Modern,
Smart Technology**

**ADA
Accepted**
American
Dental
Association
• Helps Remove Plaque
• Helps Prevent and
Reduce Gingivitis

Image: An internal diagram of the Aquasonic Black Series PRO, illustrating its advanced motor, smart chip, and lithium-ion battery.

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please visit the official Aquasonic store or contact their customer service department.

Official Aquasonic Store: [Aquasonic Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question