

[Manuals.plus](#) /

› [Aquasonic](#) /

› Aquasonic Vibe Series PRO Electric Toothbrush User Manual

Aquasonic AS-TBSH-PRO3

Aquasonic Vibe Series PRO Electric Toothbrush User Manual

Model: AS-TBSH-PRO3

INTRODUCTION

Thank you for choosing the Aquasonic Vibe Series PRO Ultra-Whitening Electric Toothbrush. This device is designed to provide an advanced oral care experience with its powerful motor, smart timers, and multiple brushing modes. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

SAFETY INFORMATION

To ensure safe operation and prevent injury, please observe the following safety guidelines:

- Do not use this device for purposes other than oral hygiene.
- Keep the device out of reach of children.
- Do not immerse the charging base in water or other liquids.
- If the device or charger is damaged, discontinue use immediately and contact customer support.
- Consult your dentist before using this product if you have severe periodontal disease or have undergone oral surgery.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Aquasonic Vibe Series PRO Toothbrush Handle
- 6 ProFlex Brush Heads
- Premium Travel Case
- Wireless Charging Base



Image: The Aquasonic Vibe Series PRO Electric Toothbrush handle, six ProFlex brush heads, a travel case, and the wireless charging base are displayed together, indicating the complete package contents.

SETUP

1. Charging the Toothbrush

1. Place the wireless charging base on a stable, dry surface.
2. Connect the charging base to a power outlet.
3. Place the toothbrush handle onto the charging base. The indicator light on the handle will illuminate to confirm charging.
4. Allow the toothbrush to charge for a full 24 hours before its first use. A full charge provides up to 30 days of use.

2. Attaching a Brush Head

1. Align the brush head with the metal shaft on the toothbrush handle.

2. Push the brush head down firmly until it clicks into place. Ensure it is securely attached.

OPERATING INSTRUCTIONS

1. Power On/Off and Mode Selection

- Press the power button once to turn the toothbrush on. It will start in the last used mode.
- Press the power button repeatedly within 5 seconds to cycle through the 5 brushing modes: Clean, Soft, Whiten, Massage, and Deep Clean.
- To turn the toothbrush off, press and hold the power button for 2 seconds, or press the power button after cycling through all modes.

Intelligent Brushing 5 Custom Modes

CLEAN

standard brushing mode

SOFT

gentle mode for sensitive teeth

WHITEN

helps remove daily surface stains

MASSAGE

delivers vibrating microbursts to gums

DEEP CLEAN

targets stubborn discoloration & polishes teeth

Image: A close-up of the Aquasonic Vibe Series PRO toothbrush handle, highlighting the power button and the indicator lights for the five distinct brushing modes: Clean, Soft, Whiten, Massage, and Deep Clean.

2. Brushing Modes Explained

- **Clean:** Standard brushing mode for daily plaque removal.
- **Soft:** Gentle mode suitable for sensitive teeth and gums.
- **Whiten:** Helps remove daily surface stains for brighter teeth.
- **Massage:** Delivers vibrating microbursts to gently stimulate gums.
- **Deep Clean:** Targets stubborn discoloration and polishes teeth.

3. Smart Timer

The Aquasonic Vibe Series PRO features a 2-minute smart timer, which is the dentist-recommended brushing time. The toothbrush will pause briefly every 30 seconds to signal you to move to a different quadrant of your mouth. After 2 minutes, the toothbrush will automatically turn off.

4. Brushing Technique

1. Wet the brush head and apply a small amount of toothpaste.
2. Place the brush head against your teeth at a slight angle towards the gum line.
3. Press the power button to start brushing.
4. Gently guide the brush head slowly across your teeth, allowing the sonic vibrations to do the work. Do not scrub aggressively.
5. Divide your mouth into four sections (upper right, upper left, lower right, lower left) and brush each section for 30 seconds. The timer will signal when to move.
6. After 2 minutes, the toothbrush will automatically turn off. Rinse your mouth and the brush head.



Whitens While You Brush

50,000 Vibrations Per
Minute Technology

**Removes up to 10x
more plaque
than a manual toothbrush**

Image: A close-up view of an electric toothbrush head with blue and white bristles actively cleaning a tooth surface, demonstrating the sonic action with water splashes.

MAINTENANCE

1. Cleaning the Toothbrush Handle

The Vibe Series PRO handle is IPX7 waterproof. After each use, rinse the handle under running water to remove any toothpaste residue. Wipe the handle with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.

2. Cleaning Brush Heads

After each use, rinse the brush head thoroughly under running water. Store the brush head upright to allow it to air dry.

3. Replacing Brush Heads

Dentists recommend replacing brush heads every 3 months, or sooner if the bristles become frayed. The included 6 ProFlex brush heads provide approximately 18 months of use. To replace, simply pull the old brush head off the handle

and push a new one on until it clicks.

Exceptional Value

6 DuPont ProFlex Brush Heads Included
for 1.5+ Years of Brushing



Premium Travel Case Included

Image: Six Aquasonic ProFlex replacement brush heads are arranged next to a premium travel case, illustrating the included accessories for extended use and portability.

4. Storage

When not in use, store the toothbrush and charging base in a clean, dry place. Use the premium travel case for hygienic storage and transport.

TROUBLESHOOTING

- **Toothbrush not turning on:** Ensure the toothbrush is fully charged. Place it on the charging base for at least 24 hours.
- **Weak vibrations:** The battery may be low. Recharge the toothbrush.
- **Brush head feels loose:** Ensure the brush head is pushed down firmly until it clicks into place. If it remains loose, replace the brush head.

- **Charging indicator not lighting up:** Check if the charging base is properly connected to a power outlet. Ensure the toothbrush is correctly seated on the charging base.
- **Unusual noise:** If you hear an unusual noise, turn off the toothbrush and inspect the brush head for any damage or debris. Replace the brush head if necessary.

If you experience any issues not listed here, please contact Aquasonic customer support.

SPECIFICATIONS

Feature	Detail
Model Number	AS-TBSH-PRO3-RG
Vibrations Per Minute	Up to 50,000
Brushing Modes	5 (Clean, Soft, Whiten, Massage, Deep Clean)
Smart Timer	2-minute auto-shutoff with 30-second interval reminders
Battery Type	1 Lithium Ion (included)
Battery Life	Up to 30 days on a single charge
Charging	Wireless Charging Base
Waterproof Rating	IPX7
Brush Head Firmness	Soft
Age Range	Adult
Manufacturer	Aquasonic

WARRANTY INFORMATION

Aquasonic products are manufactured to high-quality standards. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your product or visit the official Aquasonic website. Please retain your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report an issue with your Aquasonic Vibe Series PRO Electric Toothbrush, please contact our customer support team:

- **Website:** Visit the official Aquasonic website for FAQs and support contact information.
- **Email:** Refer to your product packaging or warranty card for direct email support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question