

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DYONDER](#) /

› [DYONDER Wireless Controllers Instruction Manual for PS4/Pro/Slim & PC](#)

DYONDER Wireless Controllers

DYONDER Wireless Controllers Instruction Manual

Model: Wireless Controllers (Compatible with PS4/Pro/Slim & PC)

1. INTRODUCTION

This manual provides instructions for the DYONDER 2-Pack Wireless Controllers. These controllers are designed for use with PlayStation 4 (PS4, PS4 Slim, PS4 Pro) consoles and personal computers (PC). They feature a 1000mAh battery, 6-axis motion sensor, and an audio jack for an enhanced gaming experience.

Please read this manual thoroughly before using the product to ensure proper operation and to maximize its lifespan.

2. PACKAGE CONTENTS

- 2 x DYONDER Wireless Controllers (Black & Pink)
- 2 x USB-C Charging Cables
- 1 x User Manual

3. CONTROLLER OVERVIEW

Familiarize yourself with the various buttons and features of your DYONDER Wireless Controller.



Image 3.1: Front and rear view of the controller with labels for SHARE, Touchpad, OPTIONS, D-Pad, Left Joystick, Action buttons, Right Joystick, Extended Interface, Headphone Jack, Home button, LED, and Charging Socket.

- **SHARE Button:** Used for sharing gameplay content.
- **OPTIONS Button:** Accesses in-game menus and options.
- **Touchpad:** Multi-touch, clickable pad.
- **D-Pad:** Directional input.
- **Action Buttons (Triangle, Circle, Cross, Square):** Primary game input buttons.
- **Left/Right Joysticks:** Analog input for movement and camera control.
- **Home Button:** Returns to the console's home screen.
- **Extended Interface:** For accessories.
- **Headphone Jack:** 3.5mm audio output.
- **Charging Socket:** USB-C port for charging.
- **LED Light Bar:** Indicates player number, charging status, and in-game information.

4. SETUP AND CONNECTION

4.1 Initial Charging

Before first use, fully charge the controller. Connect the supplied USB-C cable to the controller's charging socket and the other end to a USB port on your PS4 console or a compatible USB wall adapter. The LED light bar will indicate charging status and turn off when fully charged. A full charge takes approximately 2 hours and provides up to 15 hours of playtime.



Image 4.1: Controller connected via USB-C for charging, illustrating the charging port and battery capacity.

4.2 Connecting to PS4/PS4 Slim/PS4 Pro

1. Ensure your PS4 console is powered on.
2. Connect the controller to your PS4 console using the included USB-C charging cable.
3. Press the **Home** button (PS button) on the controller. The controller will pair with the console.
4. Once paired, you can disconnect the USB-C cable, and the controller will connect wirelessly. For subsequent uses, simply press the **Home** button to connect wirelessly.

PS4 CONTROLLER 2 PACK

Compatible with PS4/Pro/Slim/PC



Image 4.2: DYONDER controllers wirelessly connected to a PS4 console, demonstrating compatibility.

4.3 Connecting to PC

To connect the controller to a PC wirelessly:

1. Ensure your PC has Bluetooth enabled.
2. On the controller, simultaneously press and hold the **SHARE** button and the **Home** button for 3 seconds until the LED light bar starts flashing rapidly. This indicates the controller is in pairing mode.
3. On your PC, go to Bluetooth settings and search for new devices.
4. Select the controller from the list of available devices to pair.
5. Once paired, the LED light bar will stop flashing and remain solid.

Alternatively, you can connect the controller to your PC using the USB-C cable for a wired connection.

PS4 CONTROLLER 2 PACK

PS4 Controller Wireless Perfectly Compatible with PS4/Pro/Slim/PC



Image 4.3: Compatibility diagram showing the controllers working with PS4 Slim, PS4, PS4 Pro, and PC.

5. OPERATING INSTRUCTIONS

5.1 Dual Vibration Feedback

The controller features dual vibration motors that provide tactile feedback during gameplay. This enhances immersion by simulating in-game actions such as impacts, explosions, and environmental effects. There are 4 levels of vibration intensity, which are typically controlled by the game itself.

5.2 6-Axis Motion Sensor

An integrated 6-axis gyro sensor allows for motion-sensing gameplay. This feature enables you to control certain in-game actions by tilting, rotating, or shaking the controller, providing an additional layer of interaction in compatible games.

6-Axis Gyro Sensor

Provide you superior motion sensing



Image 5.1: Illustration of the 6-Axis Gyro Sensor providing motion sensing capabilities.

5.3 Responsive Joysticks and Buttons

The joysticks and buttons are designed for precision and responsiveness, aiming to minimize input lag and drift. This allows for accurate control and quick reactions during gameplay.



Image 5.2: Detailed view of the 360° Joystick, SHARE Button, and the internal 1000mAh battery.

5.4 Audio Jack

The integrated 3.5mm audio jack allows you to connect a compatible headset for in-game audio and voice chat. Ensure your headset is properly plugged in and configured in your console or PC's audio settings.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in constant use.
- **Avoid Drops:** Protect the controller from drops and impacts, which can damage internal components.

7. TROUBLESHOOTING

7.1 Controller Not Connecting/Pairing

- **For PS4:** Ensure the controller is connected via USB-C cable for the first pairing. Press the Home button. If issues persist, try resetting the controller (see 7.4).
- **For PC:** Ensure Bluetooth is enabled on your PC. Confirm the controller is in pairing mode (flashing LED after holding SHARE + Home). Remove any previous pairings of the controller from your PC's Bluetooth settings and try pairing again.
- **Cable Check:** Verify the USB-C cable is securely connected and not damaged. Try a different USB-C cable if available.

7.2 Input Lag or Drift

- **Re-pair:** Disconnect and re-pair the controller to your device.
- **Interference:** Ensure there are no strong wireless interference sources nearby (e.g., Wi-Fi routers, other Bluetooth devices).
- **Wired Connection (PC):** If experiencing significant lag on PC, try connecting the controller via USB-C cable to rule out wireless issues.
- **Reset:** Perform a controller reset (see 7.4).

7.3 Audio Jack Not Working

- **Headset Compatibility:** Ensure your headset is compatible with the controller's 3.5mm audio jack.
- **Connection:** Make sure the headset is fully plugged into the audio jack.
- **Audio Settings:** Check the audio output settings on your PS4 console or PC to ensure the controller's audio output is selected and volume levels are appropriate.
- **Test Headset:** Test your headset with another device to confirm it is functioning correctly.

7.4 How to Reset the Controller

If the controller is unresponsive or behaving erratically, you can perform a reset:

1. Turn off your PS4 console or disconnect the controller from your PC.
2. Locate the small reset button on the back of the controller, usually near the L2 shoulder button. It is often recessed inside a small hole.
3. Use a small, pointed object (like a straightened paperclip) to press and hold the reset button for 3-5 seconds.
4. Release the button.
5. Reconnect the controller to your PS4 or PC using the USB-C cable and re-pair it as described in Section 4.

8. SPECIFICATIONS

Feature	Detail
Model	Wireless Controller
Compatibility	PS4, PS4 Slim, PS4 Pro, PC

Feature	Detail
Battery Capacity	1000mAh Lithium Ion
Charging Time	Approximately 2 hours
Playtime	Up to 15 hours
Connectivity	Wireless (Bluetooth), Wired (USB-C)
Motion Sensor	6-Axis Gyro Sensor
Vibration	Dual Vibration Motors (4 levels)
Audio Port	3.5mm Headphone Jack
Dimensions	6.5 x 5.24 x 4.49 inches (Package)
Weight	1.14 pounds (Item)

9. WARRANTY AND SUPPORT

DYONDER products are manufactured to high quality standards. For specific warranty information, please refer to the warranty card included with your purchase or contact DYONDER customer support.

If you encounter any issues or have questions regarding your DYONDER Wireless Controllers, please contact our customer support team through the retailer's platform or the official DYONDER website for assistance.

Online Support: Visit the [DYONDER Store on Amazon](#) for product information and support resources.

© 2025 DYONDER. All rights reserved.

Related Documents - Wireless Controllers

	<p>Wireless Switch Pro Controller User Manual</p> <p>This manual provides instructions for using the Wireless Switch Pro Controller for Nintendo Switch, Switch Lite, and Switch OLED. It covers features such as wireless connectivity, programmable buttons, motion control, vibration, turbo function, and wakeup capabilities.</p>
	<p>EVOLVEO Ptero 4PS Gamepad User Manual</p> <p>User manual for the EVOLVEO Ptero 4PS wireless gamepad, detailing its features, connectivity, and operation with PS4 consoles and other devices.</p>

 <p>porodo Porodo Gaming PS4 Wireless Controller with 6-Axis Gyro Sensor & an Ergonomic Design SKU: PDX628</p>	<p>Porodo Gaming PS4 Wireless Controller with 6-Axis Gyro Sensor & Ergonomic Design - User Manual</p> <p>Comprehensive user manual for the Porodo Gaming PS4 Wireless Controller (SKU: PDX628). Learn about its features, 6-axis gyro sensor, ergonomic design, and how to connect it to PS4, PS3, PC, Switch, iOS, Android, and Mac devices. Includes specifications and warranty information.</p>
	<p>Master Pro Wireless Controller for PS4, PC, and More - Instruction Manual</p> <p>Comprehensive instruction manual for the Master Pro wireless controller, detailing features, specifications, setup, programming, and troubleshooting for PS4, PC, PS3, Android, and iOS devices. Includes warranty information from PlayCool.</p>
	<p>Marvo GT-64 PS4 Wireless Gamepad: User & Installation Guide</p> <p>Comprehensive guide for the Marvo GT-64 PS4 Wireless Gamepad, covering features, technical specifications, system requirements, installation, troubleshooting, and safety notes for PS4 and PC gaming.</p>
	<p>Wireless Game Controller for PS-4/PS-4 Slim/PS-4 Pro/PC Instruction Manual</p> <p>Instruction manual detailing the setup, features, and usage of the wireless game controller compatible with PlayStation 4 consoles and PC. Includes connection guides, button functions, and technical specifications.</p>

Documents - DYONDER – Wireless Controllers



[\[pdf\] Instructions](#)

Xbox one 168 2021 12 8 Administrator Instructions for Use IFU DYONDER Wireless Controller PC
PS3 Game Compatible with Windows7 10 2 4GHZ Gamepad Linear Trigger Dual Vibration Video Games
D19vch4COXL m media amazon images I |||

...

lang: score:19 filesize: 8.2 M page_count: 1 document date: 2021-12-08