

[Manuals.plus](#) /

› [Aquasonic](#) /

› Aquasonic Vibe Series PRO Electric Toothbrush (Model AS-TBSH-PRO3-CH) Instruction Manual

Aquasonic AS-TBSH-PRO3-CH

Aquasonic Vibe Series PRO Electric Toothbrush (Model AS-TBSH-PRO3-CH) Instruction Manual

Comprehensive guide for setup, operation, and maintenance.

1. PRODUCT OVERVIEW

The Aquasonic Vibe Series PRO is an advanced ultra-whitening electric toothbrush designed to provide a thorough and customized oral care experience. It features a powerful motor, multiple brushing modes, smart timers, and a long-lasting battery, all housed in a waterproof design for convenience.



Figure 1: AquaSonic Vibe Series PRO Electric Toothbrush and included accessories, such as brush heads, charging base, and travel case.

2. SETUP

2.1 Unboxing and Components

Before first use, ensure all components are present:

- Vibe Series PRO toothbrush handle
- 6 ProFlex brush heads
- Premium travel case
- Wireless charging base

2.2 Attaching the Brush Head

1. Align the brush head with the metal shaft on the toothbrush handle.
2. Gently push the brush head down until it clicks securely into place. Ensure the bristles face the same direction as the

power button.

2.3 Initial Charging

Charge the toothbrush for a full 24 hours before its first use to optimize battery performance.

1. Plug the wireless charging base into a power outlet.
2. Place the toothbrush handle onto the charging base. The indicator light on the handle will illuminate to confirm charging.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

Press the **On/Off** button once to turn the toothbrush on. Press and hold the **On/Off** button for 3 seconds to turn it off.

3.2 Selecting Brushing Modes

The Vibe Series PRO offers 5 distinct brushing modes. To switch modes while the toothbrush is on, press the **Mode** button repeatedly until the desired mode is selected. The indicator light next to the mode name will illuminate.

- **Clean:** Standard brushing mode for daily cleaning.
- **Soft:** Gentle mode for sensitive teeth and gums.
- **Whiten:** Helps remove daily surface stains.
- **Massage:** Delivers vibrating microbursts to gums for improved circulation.
- **Deep Clean:** Targets stubborn discoloration and polishes teeth.



Figure 2: Close-up view of the Aquasonic Vibe Series PRO handle, illustrating the power button and the five selectable brushing modes with their corresponding indicator lights.

3.3 Smart Timers

The toothbrush features a 2-minute smart timer, which is the dentist-recommended brushing time. It also includes 30-second interval timers that gently pulse to indicate when to move to a different quadrant of your mouth, ensuring an even and thorough clean.

4. MAINTENANCE

4.1 Brush Head Replacement

It is recommended to replace the brush head every 3 months, or sooner if the bristles appear frayed. The Vibe Series PRO includes 6 ProFlex brush heads, providing up to 18 months of brushing.

4.2 Cleaning the Toothbrush

- After each use, rinse the brush head thoroughly under running water.
- Wipe the toothbrush handle with a damp cloth. Do not submerge the handle in water for extended periods, although it

is IPX7 waterproof.

- Ensure the charging base is kept dry.

4.3 Wireless Charging and Battery Life

The toothbrush offers convenient wireless charging and a long-lasting battery, providing up to 30 days of use on a single charge. To maintain optimal battery health, avoid leaving the toothbrush on the charger continuously after it is fully charged. Charge it when the battery indicator shows low power.

4.4 Travel Case

The premium travel case provides protection and hygiene for your toothbrush and two brush heads when traveling. Disassemble the brush head from the handle and place both securely within the case.



Helps whiten teeth
in as little as 2 weeks



Clinically proven to
**reduce plaque and
prevent and reduce
gingivitis**



**State-of-the-art dental
technology** & superior
customer service



Developed and Perfected
in Los Angeles,
Loved Worldwide

Pro Performance



Figure 3: The Aquasonic Vibe Series PRO travel case, designed to hold the toothbrush handle and two brush heads securely for travel.

5. TROUBLESHOOTING

- **Toothbrush not turning on:** Ensure the toothbrush is fully charged. If the issue persists, try cleaning the charging

contacts on both the handle and the base.

- **Reduced vibration/power:** This may indicate a low battery. Place the toothbrush on the wireless charging base for a full charge.
- **Bristles fraying quickly:** This could be a sign of brushing too hard. Try using the 'Soft' mode or applying less pressure during brushing.

6. SPECIFICATIONS

- **Model Number:** AS-TBSH-PRO3-CH
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Vibrations Per Minute:** Up to 50,000
- **Brushing Modes:** Clean, Soft, Whiten, Massage, Deep Clean
- **Special Feature:** Brushing Timer (2-minute smart timer with 30-second intervals)
- **Waterproof Rating:** IPX7
- **Item Firmness Description:** Soft
- **Age Range (Description):** Adult
- **Package Dimensions:** 8.5 x 3.35 x 2.83 inches
- **Item Weight:** 14.07 ounces

7. IMPORTANT SAFETY INFORMATION

- May contain small parts, not suitable for children under 3 years.
- Supervise children under 12 years while brushing.
- Replace brush head every 3 months or when bristles become frayed.

8. OFFICIAL PRODUCT VIDEOS

Aquasonic IntelliBrush Series Toothbrush Overview

This video provides a general overview of an Aquasonic electric toothbrush, demonstrating its features, various brushing modes, and charging capabilities. While showcasing a different model name, the core functionalities are similar to the Vibe Series PRO.

9. WARRANTY AND SUPPORT

For detailed warranty information, product registration, or customer support, please refer to the official Aquasonic website or the documentation included in your product packaging. Contact information for customer service can typically be found on the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question