

TK24HG5, TK32HSG7, LED-24G5000, LED-32G5000, LED-39G5000, LED-43G5000, LED-48G5000+T2

User Manual for Generic Replacement Remote Control

Compatible with Teklio TK24HG5, TK32HSG7 and Bravis LED-24G5000, LED-32G5000, LED-39G5000, LED-43G5000, LED-48G5000+T2 Smart LCD LED HDTV TVs

1. INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your new Generic replacement remote control. This remote is designed as an infrared (IR) replacement for specific Teklio and Bravis Smart LCD LED HDTV TV models. It is crucial to ensure that your original remote control matches the appearance of this replacement unit for proper functionality.

Please review this manual thoroughly before use. If your TV model is not explicitly listed in the product title, it is recommended to confirm compatibility with the seller prior to purchase.

2. PRODUCT OVERVIEW

The replacement remote control features a standard layout for easy navigation and control of compatible television sets. It is designed to replicate the functions of your original remote.



Figure 2.1: Front view of the remote control, showing all buttons and their layout.



Figure 2.2: Back view of the remote control, showing the closed battery compartment.

3. SETUP

3.1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 3.1: Battery compartment open, illustrating correct battery placement.

3.2. Initial Use

This is an Infrared (IR) replacement remote control. It does not require complex pairing procedures. Once the batteries are correctly installed, the remote should function directly with compatible TV models. Point the remote control directly at the TV's IR receiver when operating.

4. OPERATING INSTRUCTIONS

The remote control provides access to various functions of your compatible television. Below are common button functions:

- **Power Button (●):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select TV channels.
- **Volume Up/Down (VOL +/-):** Adjusts the sound volume.
- **Channel Up/Down (CH +/-):** Changes TV channels sequentially.
- **Mute Button (⏸):** Mutes or unmutes the TV sound.
- **Source/Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Menu Button:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Navigate through menus and confirm selections.
- **Exit Button:** Exits the current menu or function.
- **List Button:** Displays a list of channels or other content.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain TV menus or smart features, as indicated on screen.

For detailed information on specific TV functions, please refer to your television's original user manual.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there is a clear line of sight between the remote's IR emitter and the TV's IR receiver. Remove any obstructions.
 - Make sure you are within the effective operating range of the remote.
- **Some functions do not work:**
 - This replacement remote is designed to mimic the original. However, due to variations in TV models and original remote features, not all functions may be fully identical or supported.
 - Verify that your TV model is listed as compatible. If your original remote is significantly different in appearance from this replacement, full compatibility cannot be guaranteed.

If issues persist after following these steps, please refer to the 'Warranty and Support' section for further assistance.

7. SPECIFICATIONS

Feature	Detail
Model Compatibility	Teklio TK24HG5, TK32HSG7; Bravis LED-24G5000, LED-32G5000, LED-39G5000, LED-43G5000, LED-48G5000+T2
Power Source	2 x AAA Batteries (not included)
Color	Black
Max Number of Supported Devices	1 (Television)
Communication Technology	Infrared (IR)
Manufacturer	SZHKHXD
ASIN	B0DH22FQH4

8. WARRANTY AND SUPPORT

This product is provided as a replacement remote control. Specific warranty details are typically not included with replacement units. For any inquiries regarding product functionality, compatibility, or troubleshooting beyond the scope of this manual, please contact the seller directly through the platform

where the purchase was made.

It is highly recommended to verify that your current remote control is identical to the one pictured in the product listing to ensure full compatibility before making a purchase. If your TV model is not explicitly mentioned in the product title, please reach out to the seller for confirmation.