

## Replacement Remote Control

# Generic Replacement Remote Control User Manual

Compatible with Telefunken and United Smart LED HDTV Models

## 1. INTRODUCTION

This manual provides instructions for the Generic replacement infrared (IR) remote control. This remote is designed to be compatible with various Telefunken and United Smart LED HDTV models, including TF-LED32S52T2S, LED40HS61, LED32H45, LED24H42, LED32H50, LED32H60, LED32HS51, and LED40HS50. Please ensure your original remote control matches the appearance of this replacement remote for optimal compatibility and functionality.

While this replacement remote aims to replicate the functions of your original device, some advanced or specific features may vary. It operates using infrared technology, requiring a clear line of sight to your television's IR receiver.

## 2. PRODUCT OVERVIEW

The replacement remote control is an ergonomic, black-colored device designed for comfortable handling and intuitive operation. It features a standard layout of buttons for power, channel, volume, navigation, and various media functions.



**Image 2.1:** Front view of the Generic Replacement Remote Control. This image displays the full layout of buttons, including the power button, number pad, navigation controls, volume, channel, and various function keys.

## 3. SETUP

### 3.1 Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.



**Image 3.1:** Rear view of the remote control with the battery compartment open, showing the correct orientation for AAA battery insertion.

After installing the batteries, the remote control is ready for use. No additional programming is typically required for compatible models.

## 4. OPERATING INSTRUCTIONS

---

Point the remote control directly at the infrared sensor on your television. Ensure there are no obstructions between the remote and the TV.

### 4.1 Basic Functions

- **Power (●):** Turns the television on or off.
- **Number Buttons (0-9):** Selects channels directly.
- **Volume Up/Down (VOL +/-):** Adjusts the sound volume.
- **Channel Up/Down (CH +/-):** Changes the television channel sequentially.
- **Mute (🔇):** Mutes or unmutes the television sound.

### 4.2 Navigation and Menu Functions

- **MENU:** Opens the television's main menu.
- **EXIT:** Closes the current menu or on-screen display.
- **Directional Pad (▲ ◀ ▶ ▼):** Navigates through menus and options.
- **ENTER:** Confirms a selection or enters a submenu.
- **SOURCE:** Cycles through available input sources (HDMI, AV, etc.).
- **INFO:** Displays information about the current program or input.

- **EPG:** Accesses the Electronic Program Guide (if supported by your TV/service).
- **LIST:** Displays a list of channels or other content.

### 4.3 Media Playback and Special Functions

- **DMP:** Likely for Digital Media Player access.
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons typically correspond to specific functions displayed on-screen within menus or interactive services.
- **SLEEP:** Sets a sleep timer for the television.
- **INDEX:** Accesses an index function.
- **SUBTITLE:** Toggles subtitles on or off.
- **AUDIO:** Selects audio tracks or modes.
- **RADIO:** Switches to radio mode (if supported).
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Used for controlling media playback from connected devices or internal media players.

## 5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.

## 6. TROUBLESHOOTING

- **Remote not working:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace the batteries with fresh AAA alkaline batteries.
  - Ensure there is a clear line of sight between the remote control and the TV's infrared sensor. Remove any obstructions.
  - Confirm that your television model is listed as compatible in the product description. If your original remote is visually different, this replacement may not be fully compatible.
- **Some functions do not work:**
  - This replacement remote is designed to cover primary functions. Some advanced or smart TV specific features might not be fully supported if they differ significantly from the original remote's IR codes.
  - Refer to your television's original user manual to confirm if the function requires a specific button or sequence not present on this replacement remote.

## 7. SPECIFICATIONS

Feature	Detail
---------	--------

Brand	Generic
Compatible Devices	Television (Telefunken, United Smart LED HDTVs)
Connector Type	Infrared (IR)
Batteries Required	Yes, 2 x AAA
Batteries Included	No
Battery Cell Composition	Alkaline
Color	Black
Special Feature	Ergonomic design

## 8. WARRANTY AND SUPPORT

This product is a generic replacement remote control. For any issues or questions regarding compatibility or functionality, please contact the seller directly through your purchase platform. Specific warranty details, if any, are typically provided by the seller at the time of purchase.