

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [innioasis](#) /

> [Innioasis G3 MP3 Player User Manual](#)

innioasis G3

Innioasis G3 MP3 Player User Manual

Model: G3 | Brand: innioasis

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Innioasis G3 MP3 Player. Please read this manual thoroughly before operating the device and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Innioasis G3 MP3 Player (x1)
- 128GB Micro SD Card (x1)
- USB-C Charging Cable (x1)
- Wired Earphones (x1)
- User Manual (x1)

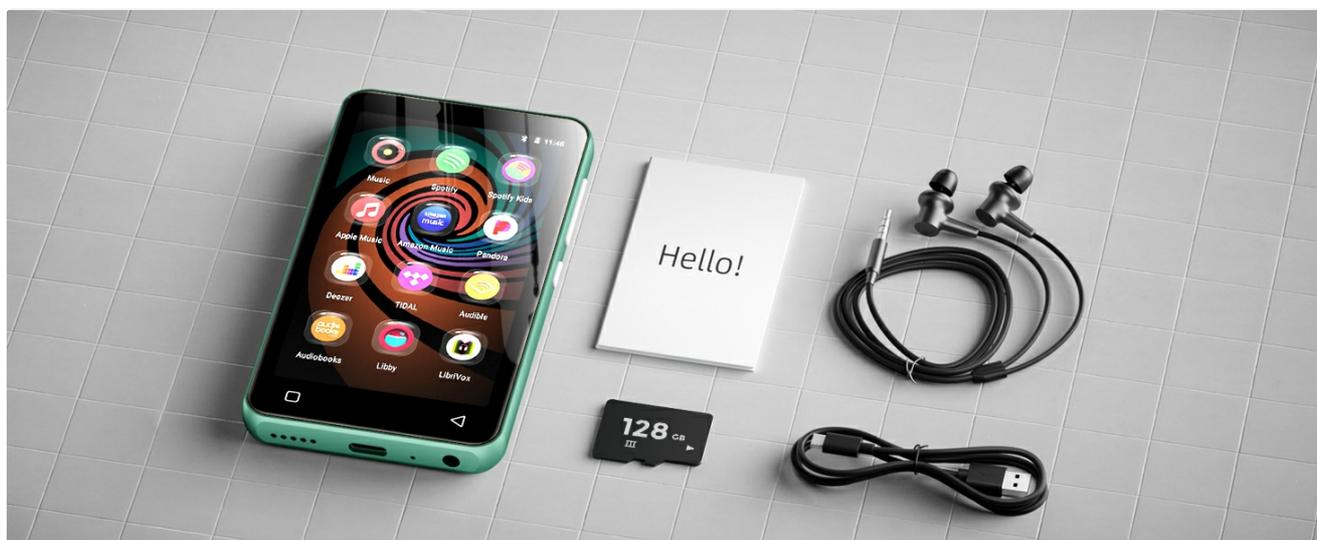


Image: The Innioasis G3 MP3 Player displayed with its accessories, including the 128GB SD card, USB-C cable, and wired earphones.

3. SETUP

3.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB-C cable to the device's USB-C port and the other end to a compatible USB power adapter (not included) or a computer's USB port. A full charge typically takes approximately 2 hours.

3.2 Inserting the Micro SD Card

The device comes with a 128GB Micro SD card pre-installed or included separately. To insert or replace the card, locate the Micro SD card slot on the side of the player. Gently push the card into the slot until it clicks into place. The device supports Micro SD cards up to 1TB.

3.3 Power On/Off

- **To Power On:** Press and hold the power button located on the side of the device until the screen illuminates.
- **To Power Off:** Press and hold the power button until a power-off menu appears on the screen. Select 'Power Off'.

3.4 Initial Configuration

Upon first power-on, follow the on-screen prompts to select your preferred language, set the date and time, and connect to a Wi-Fi network. A stable Wi-Fi connection is required for streaming services and app updates.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

The Innioasis G3 features a 4-inch full touch screen. Navigate the interface by tapping icons, swiping across the screen, and using the back and home buttons (if present) on the device or on-screen.

4.2 Music Playback

4.2.1 Streaming Music Applications

The device comes with pre-installed music streaming applications such as Spotify, Pandora, Amazon Music, Spotify Kids, Tidal, and Deezer. Ensure you are connected to Wi-Fi to use these services. Log in with your existing accounts to access your music libraries.

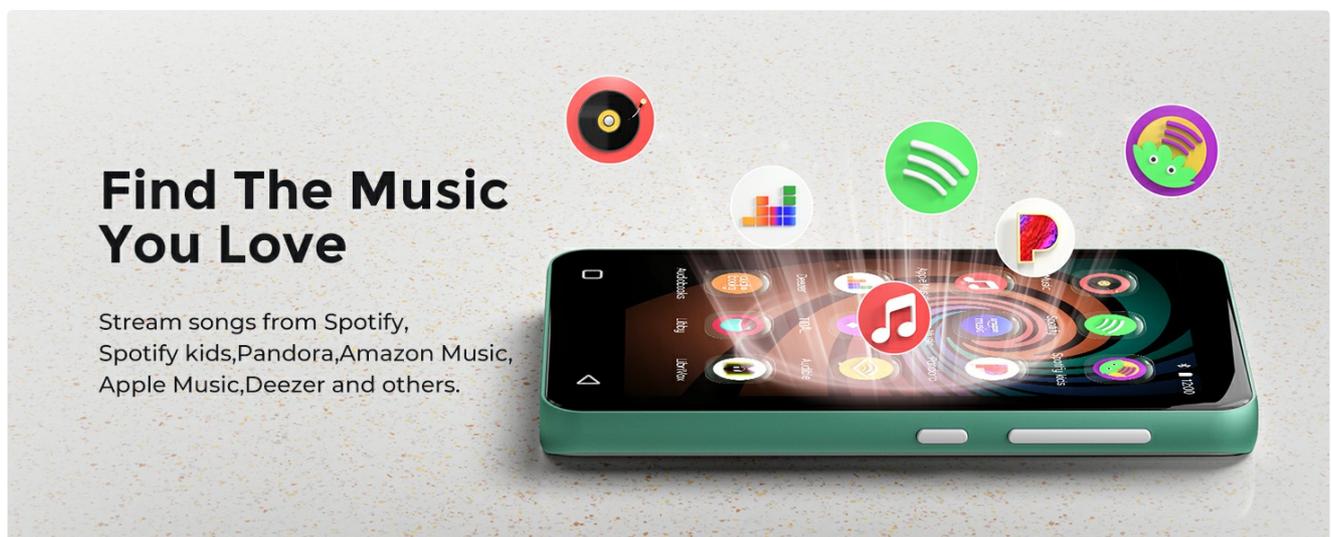


Image: The MP3 player's screen showing icons for pre-installed music streaming applications like Spotify, Amazon Music, and Deezer.

4.2.2 Local Music Playback

The built-in music player supports various audio formats including MP3, WAV, FLAC, AAC, APE, OGG, M4A, WMA, and MP2. To add music, connect the device to a computer via the USB-C cable and transfer files to the internal storage or the Micro SD card. Use the 'Scan Music' function within the music player app to update your library.

- **Creating Playlists:** Within the music player app, you can create and manage custom playlists.
- **Search Function:** Use the search bar to quickly find specific songs, artists, or albums.
- **Equalizer:** Adjust audio output using the graphic equalizer for personalized sound.

Not only a music player but also a storyteller

The mp3 player is the perfect companion for your everyday life.(Sports, travelling, Driving, sleeping and so on)



Image: A visual representation of the MP3 player's local music application, highlighting features such as playlist management, search, and a graphic equalizer.

4.3 Audiobook Playback

The device includes popular audiobook applications such as Audible, Audiobooks, Libby, LibriVox, and Kindle. These apps allow you to listen to audiobooks and read e-books. Ensure Wi-Fi connectivity for downloading content or syncing with your accounts.

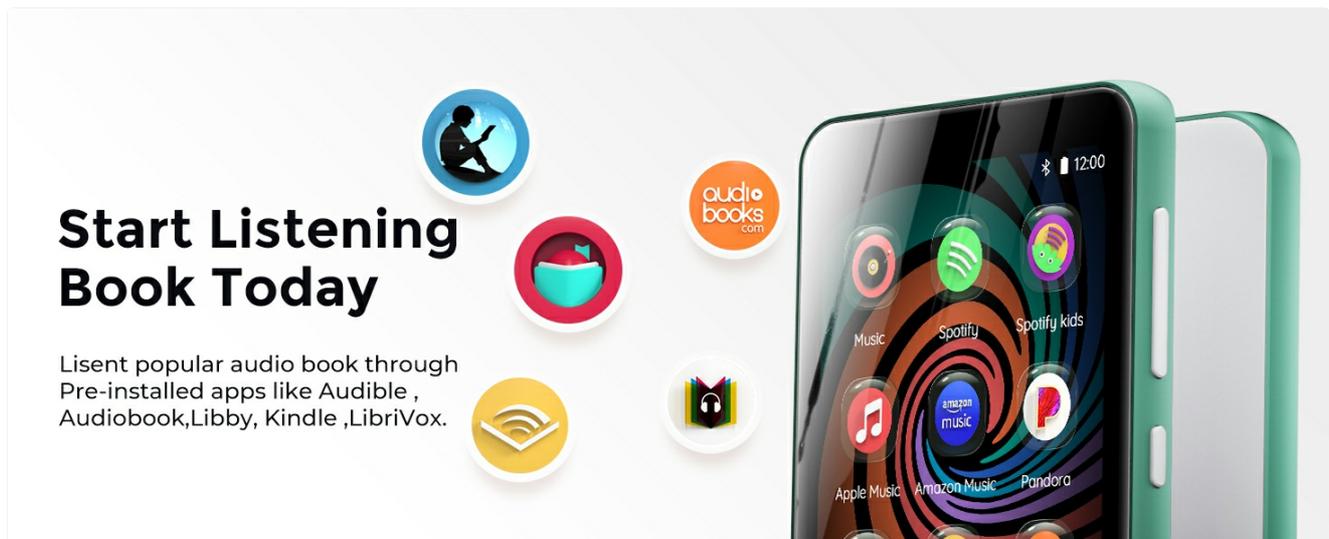


Image: The MP3 player's screen showing various audiobook applications, with a child sleeping in the background, suggesting ease of use for bedtime stories.

4.4 Connectivity (Wi-Fi & Bluetooth)

4.4.1 Wi-Fi Connection

The G3 supports dual-band Wi-Fi (2.4 GHz and 5 GHz) for stable internet access. To connect, go to **Settings > Wi-Fi**, select your network, and enter the password.

4.4.2 Bluetooth Connection

The device features Bluetooth 4.2 with two-way transmission, allowing connection to Bluetooth headphones, speakers, and car audio systems. To pair, go to **Settings > Bluetooth**, enable Bluetooth, and select your desired device from the list.



160GB Large Capacity

Built-in 2GB RAM+32GB ROM storage and along with a 128GB SD card. Additionally, the device features an SD card slot that allows for expandable external storage of up to 1TB.

RAM	ROM	SD card in package	SD slot up to
2 GB	32 GB	128 GB	1 TB

Image: The MP3 player displaying music playback, surrounded by miniature Bluetooth earbuds and a speaker, illustrating its wireless connectivity.

4.5 Parental Controls

The G3 MP3 player includes parental control features to manage content access:

- **App Installation Restriction:** The device prevents the installation of additional applications that require Google Play services, limiting access to inappropriate content.
- **Uninstall Pre-installed Apps:** You can uninstall pre-installed applications that you do not wish to be used.
- **Reset Lock:** Configure a reset lock to prevent unauthorized factory resets.
- **Usage Time Limits:** It is possible to limit the usage time for both internet access and the player itself.



Full Touch Screen --Easy to use

You can smoothly operate it just like using your phone.

Image: A close-up of the MP3 player's screen showing parental control options, including setting a password and enabling/disabling app installation.

4.6 Other Applications and Features

The G3 MP3 player includes several practical applications:

- **Voice Recorder:** For recording audio.
- **FM Radio:** Listen to local radio stations.
- **E-book Reader:** For reading digital books.
- **File Transfer Tool:** For managing and transferring files.
- **Clock, Calendar, Calculator, Gallery, File Manager:** Standard utility applications.



Image: The MP3 player's screen showing icons representing various useful applets such as FM radio, recorder, e-book, and gallery.

5. MAINTENANCE

5.1 Cleaning

Wipe the device with a soft, dry, lint-free cloth. Do not use liquid cleaners or aerosols directly on the screen or device body. Avoid excessive moisture.

5.2 Battery Care

To prolong battery life, avoid exposing the device to extreme temperatures. Do not allow the battery to fully discharge frequently. Charge the device regularly, even if not in use for extended periods.

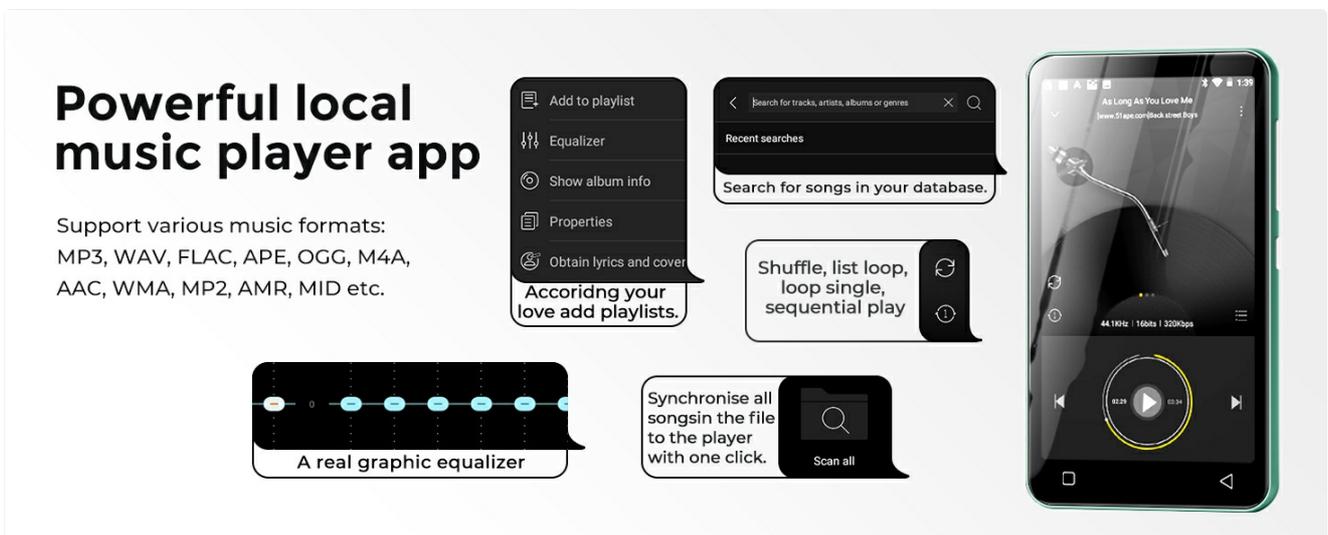


Image: An internal diagram of the MP3 player, emphasizing the 1500mAh lithium-ion battery and its long-lasting performance for music and video playback.

5.3 Storage Management

The device has 32GB of internal storage and comes with a 128GB Micro SD card, totaling 160GB. The storage can be expanded up to 1TB using a compatible Micro SD card. Regularly review and delete unnecessary files or applications to free up space and maintain optimal performance.



Image: The MP3 player's screen displaying various app icons, with an overlay indicating 32GB ROM, 128GB SD card, and expandable storage up to 1TB.

6. TROUBLESHOOTING

If you encounter issues with your Innioasis G3 MP3 Player, refer to the following common solutions:

- **Device Not Powering On:** Ensure the device is fully charged. If the battery is completely drained, it may take a few minutes of charging before it can power on.
- **Charging Issues:** Check the USB-C cable and charging adapter for damage. Ensure the cable is securely connected to both the device and the power source. Try a different cable or adapter if available.
- **Bluetooth Connection Problems:** Ensure Bluetooth is enabled on both the MP3 player and the target device. Make sure both devices are within range. If issues persist, try restarting the MP3 player and re-pairing the devices.
- **Wi-Fi Connectivity Issues:** Verify that your Wi-Fi network is active and you have entered the correct password. Try restarting your router and the MP3 player.
- **App Not Working/Crashing:** Ensure the app is updated to its latest version. Clear the app's cache and data via **Settings > Apps**. If the problem continues, uninstall and reinstall the app (if applicable and allowed by parental controls).
- **Slow Performance:** Close unused applications. Clear cache and temporary files. Ensure sufficient storage space is available. A restart can often resolve temporary slowdowns.
- **Factory Reset:** As a last resort, if software issues persist, you may perform a factory reset. Go to **Settings > System > Reset options > Erase all data (factory reset)**. **Warning:** This will erase all data on the device. Ensure you have backed up important files. If parental controls are active, a reset lock may prevent this action.

7. SPECIFICATIONS

Brand	innioasis
Model Name	G3

Screen	4-inch Full Touch HD Screen
Internal Storage	32GB ROM
Included SD Card	128GB Micro SD Card
Expandable Storage	Up to 1TB (Micro SDXC)
RAM	2GB
Processor	8-core MTK Chip
Wi-Fi Connectivity	Dual-band (2.4 GHz & 5 GHz)
Bluetooth Version	4.2 (Two-way transmission)
USB Port	USB-C
Battery Type	1500 mAh Lithium-ion
Music Playback Time	Up to 25 hours (wired earphones)
Video Playback Time	Up to 5 hours
Supported Audio Formats	MP3, WAV, FLAC, AAC, APE, OGG, M4A, WMA, MP2
Compatible Devices	Earphones, Personal Computer, Speaker, Smartphone

8. WARRANTY AND SUPPORT

8.1 Manufacturer's Warranty

The Innioasis G3 MP3 Player comes with a two-year manufacturer's warranty. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

8.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Innioasis customer support through the retailer's platform or the official Innioasis website. Have your product model number (G3) and purchase details ready when contacting support.