

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Soundcore](#) /

› [Soundcore Anker 3 Select 4 Go Bluetooth Speaker User Manual](#)

Soundcore Soundcore Anker 3 Select 4 Go (A31X1111)

Soundcore Anker 3 Select 4 Go Bluetooth Speaker User Manual

Model: A31X1111

INTRODUCTION

The Soundcore Anker 3 Select 4 Go is an ultra-portable Bluetooth speaker designed for robust performance in various environments. It features a durable, waterproof, and dustproof construction, making it suitable for both indoor and outdoor use. This manual provides essential information for setting up, operating, and maintaining your speaker.

Key Features:

- Up to 20-Hour Playback Time: Enjoy extended music playback on a single charge.
- 5W Powerful Sound: Delivers clear and dynamic audio despite its compact size.
- IP67 Waterproof and Dustproof: Fully protected against dust and water immersion, and designed to float.
- Lightweight & Portable Design: Easy to carry with an integrated strap for convenience.
- Wireless Stereo Pairing (TWS): Connect two speakers wirelessly for an immersive stereo sound experience.

WHAT'S IN THE BOX

Your Soundcore Anker 3 Select 4 Go speaker package includes the following items:

- Soundcore Anker 3 Select 4 Go Bluetooth Speaker
- USB-C Charging Cable
- Quick Start Guide / User Manual
- Integrated Carrying Strap



Image: The Soundcore Anker 3 Select 4 Go Bluetooth Speaker (larger, rectangular) and a smaller Soundcore Select 4 Go speaker (oval with strap).

PRODUCT OVERVIEW

Familiarize yourself with the speaker's controls and features.

Small Size, Punchy Sound

Tiny yet mighty—perfect for outdoor adventures.



Image: An internal view of the Soundcore Select 4 Go speaker, highlighting its 5W speaker driver and passive radiator for punchy sound.

Controls:

- **Power Button:** Press and hold to power on/off.
- **Bluetooth Button:** Press to enter Bluetooth pairing mode.
- **Volume Down (-):** Decrease volume.
- **Play/Pause Button:** Play or pause audio playback.

- **Volume Up (+):** Increase volume.
- **BassUp Button:** Activate/deactivate BassUp technology for enhanced bass.
- **TWS Button:** Initiate Wireless Stereo Pairing.

Ports:

- **USB-C Charging Port:** Used for charging the speaker.

SETUP

1. Charging the Speaker:

1. Connect the provided USB-C cable to the charging port on the speaker.
2. Connect the other end of the USB-C cable to a compatible USB wall charger (not included).
3. The LED indicator will show charging status. A full charge provides up to 20 hours of playtime.

2. Powering On/Off:

- Press and hold the Power button for 2 seconds to turn the speaker on or off.

3. Bluetooth Pairing:

1. When powered on, the speaker will automatically enter Bluetooth pairing mode. The Bluetooth indicator will flash blue.
2. On your mobile device, enable Bluetooth and search for