

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ATOMSTACK](#) /
- › [ATOMSTACK Hurricane 55W CO2 Laser Cutter Instruction Manual](#)

## ATOMSTACK Hurricane

# ATOMSTACK Hurricane 55W CO2 Laser Cutter Instruction Manual

Model: Hurricane | Brand: ATOMSTACK

## 1. INTRODUCTION AND OVERVIEW

The ATOMSTACK Hurricane 55W CO2 Laser Cutter is a smart desktop engraving and cutting machine designed for precision work on a variety of materials. This manual provides essential information for safe and effective operation, maintenance, and troubleshooting.



Figure 1: ATOMSTACK Hurricane 55W CO2 Laser Cutter, a powerful and precise desktop machine.

## Product Overview Video

Your browser does not support the video tag.

Video 1: Overview of the ATOMSTACK Hurricane 55W CO2 Laser Cutter, showcasing its features and capabilities.

## 2. KEY FEATURES AND CAPABILITIES

### Powerful 55W CO2 Laser

The Hurricane's high-powered 55W CO2 laser is capable of handling a variety of materials, including acrylic, wood, leather, glass, jewelry, and rubber. Its robust output ensures efficient and precise results, even on tougher materials, cutting 20mm clear acrylic and 15mm plywood in one pass.

# Powerful 55W CO2 Laser

Cuts up to 20mm thick materials in one pass



Figure 2: The 55W CO2 laser demonstrating its cutting power on clear acrylic and plywood.

## Autofocus and High-Speed Operation

The Hurricane features advanced autofocus capabilities that greatly enhance precision and reduce setup time. It operates at speeds up to 600mm/s, significantly boosting productivity without compromising quality.

# Fast and Precise

0.01mm precision, up to 600mm/s engraving speed

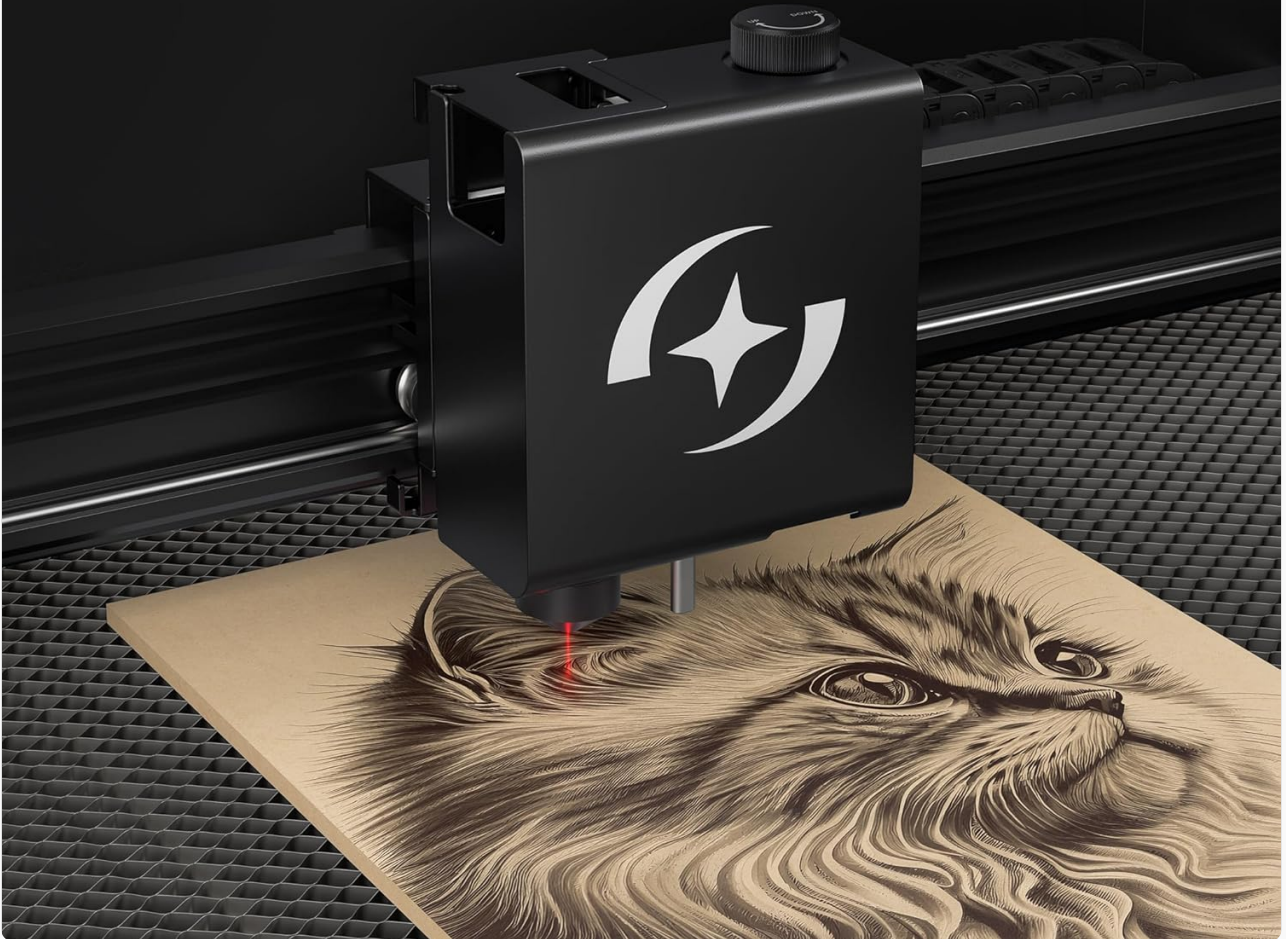
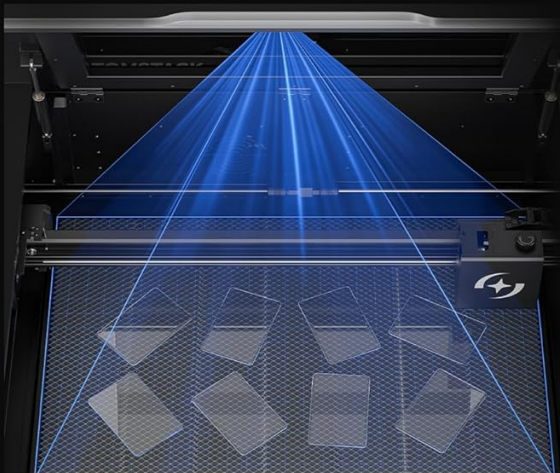


Figure 3: Close-up of the laser head performing high-speed, precise engraving.

## Precision & Batch Engraving with 5MP Camera

An integrated 5MP camera provides full visual positioning of the working area, ensuring accuracy. This feature also enables batch processing, allowing multiple objects to be engraved simultaneously, enhancing efficiency.

# 5MP Built-in Camera



Preview and calibration  
check designs to avoid  
errors

Precise positioning  
and real-time monitoring



Figure 4: Visual representation of the 5MP camera's positioning capabilities for precise and batch engraving.

## Safety and Enhanced User Experience

Engineered for ease of use and reliability, the Hurricane features IEC60825-4 Class 1 Safety Design. It includes multiple limit switches and an advanced fire detection system that automatically halts operation, triggers an alarm, and activates an auto-extinguishing function linked to a water container in case of fire. A safety lock design makes it suitable for safety-sensitive environments.



# Active Fire Supression



Smart Flame Detection  
Instantly Spots Fire Hazards

Sprays water in fire source  
until the fire is out



Figure 5: Depiction of the active fire suppression system, showing smart flame detection and water spray.

## Wide Software Compatibility and Multi-Platform Support

The Hurricane is fully compatible with LightBurn software for intuitive use. Additionally, AtomStack Studio allows operation across Windows, Mac OS, iOS, and Android platforms, offering advanced features like water temperature display, flame detection, active fire extinguishing, and a resume function.

## Easy Setup and Resume Function

Comprehensive tutorials and videos are provided for quick setup, operation, and maintenance. The resume function ensures projects continue seamlessly after a power outage, preventing material waste. The device can connect directly to a computer via Type-C cable, allowing operation without Wi-Fi.

# Resume Function Saves Time and Material

Resume from the last position after a power outage supporting sustainability



Figure 6: Illustration of the resume function, showing a project continuing from its last position.

## Large Working Area and Material Versatility

The Hurricane offers a generous working area of 19.7x11.8 inches (500x300mm). It excels at engraving and cutting clear acrylic, glass, fabric, leather, wood, and metal, providing broad creative possibilities.

# Extra Large Working Area

500\*300mm working area  
800\*500mm expanded working area with a conveyor feeder



Figure 7: View of the laser cutter's extra large working area, highlighting its capacity.



# Versatile Material Compatibility

Especially excels at engraving and cutting clear acrylic



Figure 8: Various materials and finished products showcasing the versatile compatibility of the Hurricane.

## 3. SETUP

Proper setup is crucial for optimal performance and safety. Follow these steps to prepare your ATOMSTACK Hurricane for use.

### 3.1 Initial Assembly and Connections

Refer to the included user manual for detailed instructions on initial assembly. Ensure all components are securely attached and cables are properly connected. The machine connects to your computer via a Type-C cable.

### 3.2 Camera Calibration

The integrated 5MP camera requires calibration for precise visual positioning. This process ensures accurate alignment of your designs with the material on the workbed.

Your browser does not support the video tag.

Video 2: Detailed tutorial on how to perform camera calibration for the ATOMSTACK Hurricane using LightBurn software.



### 3.3 Optical Path Adjustment

Accurate optical path alignment is essential for consistent laser performance and engraving quality. This involves adjusting the internal mirrors to ensure the laser beam travels correctly to the material.

Your browser does not support the video tag.

Video 3: Step-by-step guide on adjusting the optical path of the AtomStack Hurricane for optimal laser performance.

## 4. OPERATING INSTRUCTIONS

Once set up, the ATOMSTACK Hurricane is ready for operation. It is compatible with LightBurn and AtomStack Studio software.

### 4.1 Software Usage

Utilize LightBurn or AtomStack Studio to import or create your designs. The 5MP camera allows for precise material placement and batch processing. Adjust laser power, speed, and other parameters within the software based on the material being processed.

### 4.2 Material Handling

Place your chosen material securely on the workbed. Ensure it is flat and properly positioned to avoid errors during engraving or cutting. The autofocus feature will assist in setting the correct focal distance.

### 4.3 Safety During Operation

Always ensure the safety cover is closed during operation. The machine's built-in safety features, including limit switches and fire detection, are active to prevent accidents. Never leave the machine unattended while operating.

## 5. MAINTENANCE

Regular maintenance ensures the longevity and consistent performance of your ATOMSTACK Hurricane.

- **Lens Cleaning:** Regularly inspect and clean the laser lens to ensure optimal beam quality. Use a soft, lint-free cloth and appropriate lens cleaning solution.
- **Mirror Inspection:** Check the optical mirrors for dust or damage. Refer to Video 3 for guidance on accessing and adjusting the optical path.
- **Workbed Cleaning:** Keep the honeycomb workbed clean from debris and residue to prevent interference with laser operations.
- **Ventilation System:** Ensure the exhaust system is clear and functioning properly to remove fumes and smoke.
- **Water Container (for Fire Suppression):** Regularly check and refill the water container linked to the auto-extinguishing function.

## 6. TROUBLESHOOTING

This section addresses common issues you might encounter during the use of your laser cutter.

- **Poor Engraving/Cutting Quality:**
  - Check optical path alignment (refer to Video 3).
  - Ensure the lens is clean and free of debris.

- Verify material thickness and adjust focus if necessary.
- Adjust laser power and speed settings in the software.
- **Machine Not Responding:**
  - Check all cable connections (power, USB-C).
  - Ensure the machine is powered on and the emergency stop button is not engaged.
  - Restart the software and the machine.
- **Red Light Misalignment:**
  - Perform camera calibration (refer to Video 2).
  - Adjust optical path mirrors as needed (refer to Video 3).
- **Fire Alarm Activation:**
  - Immediately ensure the safety cover is closed.
  - Verify the water container for the auto-extinguishing system is filled.
  - Inspect the material for actual fire and take appropriate safety measures.

For persistent issues, contact customer support.

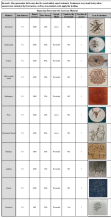
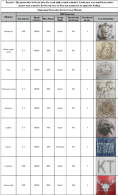

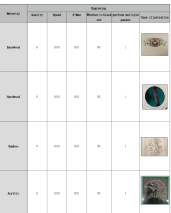
## 7. SPECIFICATIONS



Attribute	Value
Product Dimensions	46 x 31 x 13 inches
Item Model Number	Hurricane
Item Weight	130 pounds
Manufacturer	ATOMSTACK
Laser Output Power	55W CO2
Working Area	19.7 x 11.8 inches (500 x 300 mm)
Engraving Speed	Up to 600mm/s
Carving Precision	0.01mm
Camera	5MP Built-in Camera
Safety Design	IEC60825-4 Class 1

## 8. SUPPORT

For any questions, technical assistance, or support regarding your ATOMSTACK Hurricane, please refer to the official ATOMSTACK customer support channels. Additional resources, including comprehensive tutorials and videos, are available to help you quickly set up, operate, and maintain your device.

## Related Documents - Hurricane

	<p><a href="#">Laser Engraving and Cutting Parameters for Common Materials</a></p> <p>A comprehensive guide detailing optimal laser engraving and cutting parameters for a wide range of materials, including wood, leather, acrylic, glass, metal, and more. Parameters cover line interval, speed, power, image mode, and passes, with visual examples.</p>
	<p><a href="#">ATOMSTACK K40 MAX-20W Laser Engraving and Cutting Parameter Guide</a></p> <p>A comprehensive guide detailing engraving and cutting parameters for the ATOMSTACK K40 MAX-20W laser module across a variety of common materials. Includes settings for speed, power, line interval, and image modes.</p>
	<p><a href="#">P7 M30 Laser Engraving and Cutting Parameters</a></p> <p>Comprehensive parameter tables for AtomStack P7 M30 laser engraver and cutter, detailing settings for various materials like Basswood, Hardwood, Bamboo, Acrylic, Kraft Paper, Mirrors, and Leather for both engraving and cutting operations.</p>
	<p><a href="#">Atomstack A5 Pro Laser Engraving and Cutting Parameters</a></p> <p>Detailed parameter tables for the Atomstack A5 Pro laser engraver and cutter, covering engraving and cutting settings for various materials including Basswood, Hardwood, Bamboo, Acrylic, Kraft Paper, Mirrors, Leather, and Stainless Steel. Includes recommended Speed, S-Max, and pass settings.</p>

	<p><a href="#">ATOMSTACK Laser Engraving and Cutting Parameters for Common Materials</a></p> <p>A comprehensive guide to engraving and cutting parameters for various materials using ATOMSTACK laser machines, including speed, S-Max, and pass settings.</p>
	<p><a href="#">ATOMSTACK A5 Pro Laser Engraving Machine Manual</a></p> <p>Comprehensive user manual for the ATOMSTACK A5 Pro laser engraving machine, covering safety, software installation (LaserGRBL and LightBurn), operation, and troubleshooting.</p>