

[Manuals.plus](#) /

› [ELUKHT](#) /

› ELUKHT i3000 Digital Kitchen Scale User Manual

ELUKHT i3000

ELUKHT i3000 Digital Kitchen Scale User Manual

Precision Weighing for Your Needs

INTRODUCTION

Thank you for choosing the ELUKHT i3000 Digital Kitchen Scale. This precision instrument is designed for accurate weighing of various items, from kitchen ingredients to jewelry. Please read this manual carefully before use to ensure proper operation and to maximize the lifespan of your scale.

SAFETY PRECAUTIONS

- Do not overload the scale beyond its maximum capacity of 2000g.
- Avoid exposing the scale to extreme temperatures, humidity, or direct sunlight.
- Keep the scale away from strong electromagnetic fields.
- Do not immerse the scale in water or other liquids.
- Handle with care; avoid dropping or subjecting the scale to strong impacts.
- Keep out of reach of children.

PACKAGE CONTENTS

- ELUKHT i3000 Digital Kitchen Scale
- User Manual
- Batteries (may be included or sold separately, check packaging)
- Protective Cover/Tray (optional, depending on model variant)

PRODUCT OVERVIEW

The ELUKHT i3000 features a compact design with a stainless steel weighing platform and an easy-to-read LCD display. Control buttons are located below the display for convenient operation.



Image 1: Front view of the ELUKHT i3000 Digital Kitchen Scale, showing the brushed stainless steel platform, blue backlit LCD display, and control buttons (ON/OFF, MODE, TARE).



Image 2: An angled perspective of the ELUKHT i3000 scale, illustrating its sleek design and the placement of the control buttons.



Image 3: Side view of the ELUKHT i3000 scale, demonstrating its compact and slim form factor.

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.
3. Insert the required batteries (e.g., AAA batteries) according to the polarity indicators (+/-).
4. Close the battery compartment cover securely.

2. Placement

Place the scale on a hard, flat, and stable surface to ensure accurate readings. Avoid soft or uneven surfaces, as these can affect precision.

OPERATING INSTRUCTIONS

1. Power On/Off

- To turn on the scale, press the **ON/OFF** button. The display will show '88888' then '0.0' or '0.00' when ready.
- To turn off the scale, press and hold the **ON/OFF** button for a few seconds. The scale will also

automatically shut off after a period of inactivity to conserve battery life.

2. Unit Conversion (MODE)

- With the scale on, press the **MODE** button to cycle through available weighing units (e.g., grams (g), ounces (oz), carats (ct), pennyweights (dwt), grains (gn)).
- Select the desired unit before weighing.

3. Tare Function

The Tare function allows you to subtract the weight of a container, so you only measure the contents.

1. Place an empty container on the weighing platform.
2. Wait for the display to stabilize and show the container's weight.
3. Press the **TARE** button. The display will reset to '0.0' (or '0.00').
4. Now, add the items you wish to weigh into the container. The display will show only the net weight of the items.

4. Weighing Procedure

1. Turn on the scale and ensure it displays '0.0' (or '0.00') in your desired unit.
2. Carefully place the item(s) to be weighed onto the center of the weighing platform.
3. Wait for the display to stabilize. The reading shown is the weight of the item(s).



Image 4: The scale in operation, displaying a weight of 100.0 grams with a calibration weight placed on the platform.



Image 5: The scale shown with its clear protective cover, which can also serve as a weighing tray for loose items.

MAINTENANCE

1. Cleaning

Wipe the scale with a soft, damp cloth. Do not use abrasive cleaners or immerse the scale in water. For the stainless steel platform, a mild cleaner can be used, followed by drying with a soft cloth.

2. Storage

Store the scale in a clean, dry environment at room temperature. If not in use for an extended period, it is recommended to remove the batteries to prevent leakage.

3. Battery Replacement

When the battery indicator appears on the display, or if the scale fails to power on, replace the batteries following the installation steps in the Setup section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scale does not turn on	Low or dead batteries; incorrect battery installation	Replace batteries; ensure correct polarity
Inaccurate readings	Unstable surface; overloaded scale; interference	Place on a flat, stable surface; do not exceed 2000g; avoid strong electromagnetic fields
Display shows 'EEEE' or 'O_Ld'	Overload error	Remove item(s) immediately; ensure weight is within 2000g capacity

Problem	Possible Cause	Solution
Display shows 'Lo'	Low battery indicator	Replace batteries

SPECIFICATIONS

- **Model:** i3000
- **Brand:** ELUKHT
- **Capacity:** 2000g
- **Accuracy:** 0.1g
- **Units:** g, oz, ct, dwt, gn (may vary by model)
- **Display:** LCD with backlight
- **Power:** AAA Batteries (not always included)
- **Type:** Pocket Scale

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official ELUKHT website. Keep your purchase receipt as proof of purchase for any warranty claims.