#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Fantech /
- > Fantech REVOLVER II WGP12 Wireless Gamepad User Manual

#### Fantech WGP12

# Fantech REVOLVER II WGP12 Wireless Gamepad

USER INSTRUCTION MANUAL

#### 1. Product Overview

The Fantech REVOLVER II WGP12 is a versatile 2.4GHz wireless gamepad designed for an immersive gaming experience across multiple platforms, including PC, PlayStation 3, and Laptops. It features dual vibration motors for tactile feedback, a built-in rechargeable battery for extended play, and an ergonomic design for comfortable use.

- Universal Compatibility: Seamlessly connects with PC, PS3, and Laptops via a 2.4GHz wireless
  connection.
- Rechargeable Battery: Equipped with a built-in lithium battery for long-lasting wireless gameplay.
- Dual Vibration Motors: Provides immersive feedback that responds to in-game actions.







Image 1.1: Fantech REVOLVER II WGP12 Wireless Gamepad showcasing its key features including 2.4GHz wireless, familiar layout, pro rumble, and X-Input/D-Input compatibility.

# 2. Setup Guide

# 2.1 Package Contents

Before proceeding, please ensure all items are present:

- Fantech REVOLVER II WGP12 Wireless Gamepad
- USB 2.4GHz Wireless Dongle
- USB Charging Cable
- User Manual (this document)

#### 2.2 Connecting Wirelessly

- 1. Insert the USB 2.4GHz wireless dongle into an available USB port on your PC, PS3, or Laptop.
- 2. Turn on the Fantech REVOLVER II WGP12 Gamepad by pressing the central 'Fantech' logo button.
- 3. The gamepad will automatically connect to the dongle. The indicator lights on the gamepad will confirm a successful connection.

# SIZE:



# TECHNICAL SPECIFICATION

Wireless 2.4GHz gaming controller

Buttons: 17 pcs

Vibration: Yes

Battery: 600mAh

Wireless range: 7m-8m

Charging time: Approx 3 hours

Standby time: 10 hours

Weight: ±182gr

Image 2.1: The Fantech REVOLVER II WGP12 Gamepad and its 2.4 GHz wireless USB dongle, illustrating the wireless connection method.

# 2.3 Initial Charging

For optimal performance, it is recommended to fully charge the gamepad before its first use.

- 1. Connect the small end of the USB charging cable to the charging port on the gamepad.
- 2. Connect the larger end of the USB charging cable to a USB power source (e.g., computer USB port, USB wall adapter).
- 3. The indicator lights on the gamepad will show the charging status. A full charge typically takes approximately 3 hours.

# 3. Operating Instructions

# 3.1 Button Layout

The REVOLVER II WGP12 features a familiar console-like layout, designed for intuitive control and quick adaptation. It includes a D-pad, dual analog sticks, action buttons (A, B, X, Y), shoulder buttons, triggers, and dedicated Start/Select buttons.



Image 3.1: A user holding the Fantech REVOLVER II WGP12 Gamepad, demonstrating its familiar console-like button layout and ergonomic design.

#### 3.2 Dual Vibration Feedback

Experience enhanced immersion with the gamepad's dual vibration motors. These motors provide tactile feedback for in-game events such as collisions, explosions, and other actions, bringing a new level of realism to your gaming sessions. Ensure your game supports vibration feedback for this feature to function.



Image 3.2: Close-up of the Fantech REVOLVER II WGP12 Gamepad highlighting the dual vibration feedback motors, indicated by wave patterns.

#### 3.3 Wired and Wireless Modes

The REVOLVER II WGP12 supports both wireless and wired connectivity. For wireless play, use the 2.4GHz USB dongle. If you prefer a wired connection or need to charge while playing, simply connect the gamepad to your device using the USB charging cable. The gamepad will automatically switch to wired mode when connected via cable.



Image 3.3: Two Fantech REVOLVER II WGP12 Gamepads, one connected via cable (wired mode) and another with its USB dongle (wireless mode), illustrating dual connectivity options.

#### 4. Maintenance

#### 4.1 Battery Care

The gamepad features a built-in 600mAh rechargeable lithium-ion battery. To prolong battery life:

- · Avoid fully discharging the battery frequently.
- Charge the gamepad using the provided USB cable and a compatible power source.
- If storing the gamepad for an extended period, charge it to approximately 50% and store in a cool, dry place.
- A full charge provides approximately 10 hours of standby time.

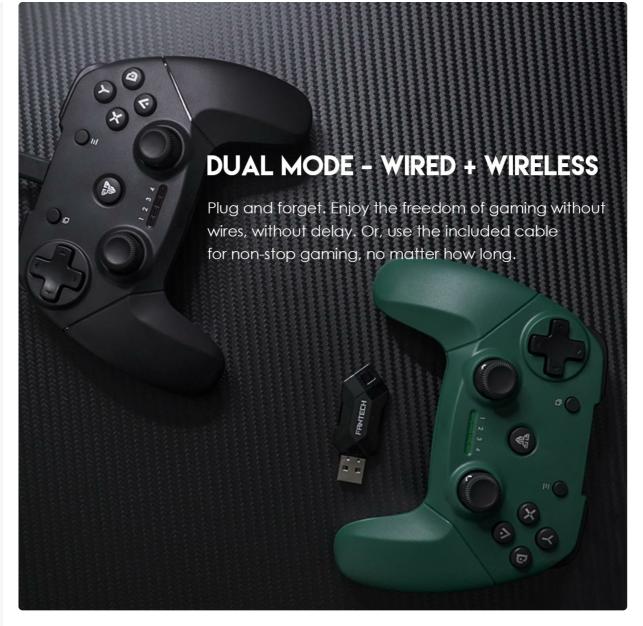


Image 4.1: The Fantech REVOLVER II WGP12 Gamepad with a battery icon, indicating its built-in rechargeable battery feature.

# 4.2 Cleaning

To clean your gamepad, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the surface and internal components.

# 4.3 Storage

Store the gamepad in a clean, dry environment away from direct sunlight, extreme temperatures, and excessive moisture. Keep it away from strong magnetic fields to prevent potential interference with its electronic components.

# 5. Troubleshooting

| Problem                   | Possible Cause           | Solution                                    |
|---------------------------|--------------------------|---|
| Gamepad does not turn on. | Low or depleted battery. | Charge the gamepad for at least 30 minutes. |

| Problem                              | Possible Cause  | Solution   |
|--------------------------------------|---|--|
| Gamepad does not connect wirelessly. | Dongle not properly inserted or not recognized. Gamepad out of range.         | Ensure the USB dongle is securely inserted. Try a different USB port. Move the gamepad closer to the dongle (within 7-8 meters). |
| Vibration feedback is not working.   | Game does not support vibration. Vibration feature disabled in game settings. | Check if the game supports vibration feedback. Verify vibration settings within the game.  |
| Input lag or dropped connection.     | Interference from other wireless devices. Low battery.                        | Move away from other 2.4GHz wireless devices. Charge the gamepad.  |

# 6. Technical Specifications

| Feature                      | Specification                               |
|------------------------------|---|
| Model Number                 | WGP12                                       |
| Connectivity                 | 2.4GHz Wireless / Wired (USB)               |
| Buttons                      | 17 pcs                                      |
| Vibration                    | Dual Vibration Motors                       |
| Battery                      | 600mAh Built-in Rechargeable Lithium-ion    |
| Wireless Range               | 7m - 8m                                     |
| Charging Time                | Approximately 3 hours                       |
| Standby Time                 | Approximately 10 hours                      |
| Product Dimensions (LxWxH)   | 16 x 5 x 11 cm                              |
| Controller Weight            | 182g (approx.)                              |
| Item Weight (with packaging) | 210g  |
| Country of Origin            | China                                       |
| Generic Name                 | Controller Joystick for PC and Play station |

# 2.4 GHZ WIRELESS CONNECTION

Plug and forget. Cut the cord and enjoy the freedom—gaming without wires. Simply insert the nano-receiver into a USB port for fast, 2.4 GHz data transmission with virtually no delays, dropouts or interference.



Image 6.1: Visual representation of the Fantech REVOLVER II WGP12 Gamepad's dimensions and a summary of its technical specifications.

# 7. Warranty and Support

For warranty information and customer support, please refer to the documentation provided at the point of purchase or contact your retailer. Manufacturer contact details may also be available on the product packaging or the official Fantech website.

# **Related Documents - WGP12**



#### Fantech Revolver II WGP12 Gaming Controller User Manual

User manual for the Fantech Revolver II WGP12 gaming controller, detailing its features, specifications, and connection instructions.



#### Fantech Revolver GP12 Gaming Controller User Manual

User manual for the Fantech Revolver GP12 gaming controller, covering setup, features, troubleshooting, and specifications for PC and PS3 gaming.



#### Fantech Revolver III WGP12S Multi-Platform Gamepad Quick Start Guide

A quick start guide for the Fantech Revolver III WGP12S gamepad, covering specifications, product tour, connection methods, LED indicators, and button functions like thumbstick circularity, calibration, XYAB/YXBA swap, D-pad swap, smart gyros, factory reset, combo swap, turbo, rumble, and macro functions.



#### FANTECH GO W607 Wireless Mouse: User Manual & Specifications

Comprehensive guide to the FANTECH GO W607 Wireless Mouse, covering features, technical specifications, button functions, setup instructions, and warranty information. Plug-and-play wireless technology for office use.



#### Fantech Revolver GP12 Gaming Controller User Manual

Comprehensive user manual for the Fantech Revolver GP12 gaming controller, detailing features, setup, and operation for PC and PS3.



#### Fantech GO W609 Wireless Mouse: User Manual and Specifications

Detailed guide for the Fantech GO W609 Wireless Mouse, including technical specifications, button functions, setup instructions, and warranty information. Learn how to connect and use your Fantech mouse.