

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY RM-L1030 Replacement Remote Control for Philips TV User Manual

ECONTROLLY RM-L1030

ECONTROLLY RM-L1030 Replacement Remote Control for Philips TV

USER MANUAL

1. Introduction

Welcome to your new ECONTROLLY RM-L1030 replacement remote control. This remote is designed to provide seamless control for various Philips TV models, offering a direct replacement experience without the need for complex programming. This manual will guide you through the setup, operation, and maintenance of your new remote control.

2. Safety Information

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Keep the remote control away from water or other liquids.
- Do not attempt to disassemble or modify the remote control.
- Dispose of used batteries responsibly according to local regulations.

3. Package Contents

- 1 x ECONTROLLY RM-L1030 Remote Control

4. Product Overview

The ECONTROLLY RM-L1030 remote control features a standard layout for easy navigation and control of your Philips TV. Below is an image illustrating the remote's design and key buttons.







Figure 1: Front view of the ECONTROLLY RM-L1030 remote control, displaying the power button, navigation pad, volume and channel controls, number pad, and colored function buttons.

The remote is constructed from durable ABS material and features soft silicone buttons for comfortable and reliable use. Its infrared technology ensures multi-angle induction, fast speed, sensitive response, and precise control over your television.

5. Setup

5.1 Battery Installation

The ECONTROLLY RM-L1030 remote control requires two AAA alkaline batteries (not included) for operation. No programming or setup is required; simply install the batteries, and the remote will be ready to use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Figure 2: Back view of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.





Figure 3: Back view of the remote control with the battery compartment cover closed, ready for use.

6. Operating Instructions

Once batteries are installed, point the remote control directly at your Philips TV and press the desired buttons. The remote operates using infrared technology, so ensure there are no obstructions between the remote and the TV's IR receiver.

- **Power Button ():** Press to turn the TV on or off.
- **Number Pad (0-9):** Use to directly enter channel numbers.
- **Channel Up/Down (CH+/CH-):** Press to change channels sequentially.
- **Volume Up/Down (VOL+/VOL-):** Press to adjust the volume level.
- **Mute Button ():** Press to mute or unmute the TV audio.
- **Navigation Pad (▲ ▼ ◀ ▶):** Use to navigate through menus and on-screen options.
- **OK Button:** Confirms selections within menus.

- **Back/Return Button** (↶): Returns to the previous screen or menu.
- **Home Button** (⌂): Accesses the TV's main home screen or smart TV interface.
- **Menu Button** (☰): Opens the TV's main menu.
- **Colored Buttons (Red, Green, Yellow, Blue)**: These buttons typically correspond to specific functions displayed on-screen within certain TV applications or menus.

7. Compatibility

The ECONTROLLY RM-L1030 remote control is a replacement for various Philips TV models and is compatible with the following original remote control models:

- RC2683203/01
- CRP605/01
- RC4498
- CRP600/01
- 242254990235
- 46PFL9705K/02

This remote is designed to work out of the box with these Philips TV models without any additional setup.

8. Troubleshooting

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective operating range (8-10 meters).
- **Specific buttons not working:**
 - This could indicate a low battery. Try replacing the batteries.
 - Ensure the button is not stuck or obstructed.
- **Short operating range:**
 - Replace the batteries.
 - Ensure the remote's infrared emitter and the TV's receiver are clean and unobstructed.

9. Specifications





Figure 4: Dimensions of the ECONTROLLY RM-L1030 remote control.

Feature	Detail
Model Number	RM-L1030

Material	ABS
Color	Black
Dimensions (L x W x H)	5 x 1 x 0.25 inches (approx. 12.7 x 2.54 x 0.635 cm)
Item Weight	2.3 ounces (approx. 65 grams)
Transmission Technology	Infrared
Operating Distance	8-10 meters (26-33 feet)
Batteries Required	2 x AAA (not included)
Special Feature	No programming needed

10. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage and store the remote in a cool, dry place.

11. Warranty and Support

For any questions, concerns, or support regarding your ECONTROLLY RM-L1030 remote control, please refer to the seller's contact information or the platform where the purchase was made. Please retain your proof of purchase for warranty claims, if applicable.

