

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [RK ROYAL KLUDGE](#) /
- › [RK ROYAL KLUDGE S85 Wireless Mechanical Keyboard User Manual](#)

RK ROYAL KLUDGE S85

RK ROYAL KLUDGE S85 Wireless Mechanical Keyboard User Manual

Model: S85

1. SETUP AND PACKAGE CONTENTS



Image: The RK ROYAL KLUDGE S85 keyboard shown with its included accessories: USB cable, keycap puller, replacement switches, and user manual.

What's in the Box

- S85 Wireless Mechanical Keyboard
- USB Cable
- Keycap Puller
- Replacement Switch (x4)
- Dust Cover (x1)

Initial Charging

The keyboard is equipped with a 7200mAh battery. For optimal performance, fully charge the keyboard before first use. Connect the provided USB-C cable to the keyboard's USB-C port and the other end to a power source (e.g., computer USB port, USB wall adapter).

Battery life: Up to 41 hours with RGB lighting, or up to 240 hours without RGB lighting.

2. CONNECTIVITY



Image: The RK ROYAL KLUDGE S85 keyboard demonstrating its triple-mode connectivity options: Type-C Wired, 2.4GHz Wireless, and Bluetooth 5.1.

The RK ROYAL KLUDGE S85 supports triple-mode connectivity, allowing seamless switching between up to 5 devices.

2.1. USB-C Wired Connection

- Connect the provided USB-C cable to the keyboard and your computer.
- The keyboard will automatically switch to wired mode.

2.2. 2.4GHz Wireless Connection

- Locate the 2.4GHz USB dongle (usually stored in a slot on the keyboard).
- Plug the dongle into an available USB port on your computer.
- Toggle the switch on the keyboard to 2.4GHz mode.
- The keyboard should connect automatically.

2.3. Bluetooth Connection

- Toggle the switch on the keyboard to Bluetooth mode.
- Press and hold **Fn + Q**, **Fn + W**, or **Fn + E** to select a Bluetooth channel (BT1, BT2, or BT3). The corresponding key will flash rapidly, indicating pairing mode.
- On your device (computer, tablet, smartphone), search for Bluetooth devices and select

