

Universal AC Remote Control

Instruction Manual

Remote Control for Portable AC Air Conditioners

Model Compatibility: ElectriQ Grade A2, Costway 24555US-WH-CYPE, ES10113US-WH, ES10113CA-WH, Dowell Portable Aircon PA-29K16, ElectriQ SILENT10

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your replacement remote control for various portable air conditioner models. Please read this manual thoroughly before use to ensure optimal performance and longevity of the device.

This remote control is designed as an infrared (IR) replacement for specific portable AC units. It is crucial to verify that your original remote control matches the appearance of this replacement unit for guaranteed compatibility.

PRODUCT OVERVIEW



Figure 1: Front view of the replacement remote control. It features a white body with a grey control panel containing several white buttons for various functions.



Figure 2: Angled view of the remote control, highlighting the layout of the buttons. The buttons include power, fan speed, temperature adjustment, and timer functions.

SETUP

1. Battery Installation

The remote control requires **2 AAA batteries** (not included) for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.

Note: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

2. Initial Pairing (Not Required for IR Remotes)

This is an infrared (IR) replacement remote control. It does not require any pairing or programming. Once batteries are installed, it should function directly with compatible air conditioner models.

Important: Ensure your air conditioner model is listed as compatible. If your original remote control looks different from this replacement, it may not be compatible.

OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your portable air conditioner unit. Ensure there are no obstructions between the remote and the AC unit.

Button Functions:

- **Power Button ()**: Turns the air conditioner ON or OFF.
- **Temperature Up (▲)**: Increases the set temperature.
- **Temperature Down (▼)**: Decreases the set temperature.
- **Mode Button (or similar icon)**: Cycles through operating modes (e.g., Cool, Fan, Dry, Heat - depending on AC unit).
- **Fan Speed Button (or similar fan icon)**: Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **Timer Button (or similar clock icon)**: Sets or cancels the timer function for delayed ON/OFF.
- **Sleep Mode Button (or similar crescent moon icon)**: Activates or deactivates sleep mode for quiet operation and energy saving.

Note: Specific button icons and their exact functions may vary slightly based on the air conditioner model. Refer to your air conditioner's original manual for detailed function descriptions.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote control's range decreases or it stops responding. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote control in a cool, dry place, away from direct sunlight, high temperatures, and humidity.
- **Avoid Drops:** Protect the remote control from physical shocks and drops, which can damage internal circuitry.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote control range is poor.	Weak batteries; Obstruction between remote and AC unit.	Replace batteries. Ensure clear line of sight to the AC unit's IR receiver.

Problem	Possible Cause	Solution
Some functions not working.	Remote not fully compatible with all AC unit functions; AC unit does not support the function.	This is a replacement remote; some advanced functions may not be supported. Verify your AC unit's capabilities.
Remote does not control the AC unit at all.	Incompatible remote control.	Ensure your original remote control matches the appearance of this replacement. If not, this remote may not be compatible with your specific AC model.

SPECIFICATIONS

- Product Type:** Infrared (IR) Replacement Remote Control
- Power Source:** 2 x AAA Batteries (not included)
- Color:** Grey / White
- Compatible Devices:** Portable Air Conditioners (Specific models: ElectriQ Grade A2, Costway 24555US-WH-CYPE, ES10113US-WH, ES10113CA-WH, Dowell Portable Aircon PA-29K16, ElectriQ SILENT10)
- Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

This product is an aftermarket replacement remote control. For specific warranty information, please refer to the seller's policy at the time of purchase. Typically, replacement parts may come with a limited warranty against manufacturing defects.

For technical support or inquiries regarding compatibility, please contact the seller directly through the platform where the purchase was made. It is recommended to provide your order number and a clear description of your issue.

Disclaimer: *This remote control is a replacement unit and may not offer all the exact functions or features of your original equipment manufacturer (OEM) remote. Compatibility is based on visual matching with the original remote and listed models.*