

26507950, 26506966, JHS-A019-07KR2/E, PPA9004J

Instruction Manual for Replacement AC Remote Control

Compatible with BAHAG ProKlima 26507950, 26506966, JHS-A019-07KR2/E & Premium PPA9004J Portable AC
Air Conditioners

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your replacement infrared (IR) remote control. This remote is designed to be compatible with specific BAHAG ProKlima and Premium portable air conditioner models, including 26507950, 26506966, JHS-A019-07KR2/E, and PPA9004J. Please ensure your original remote control matches the appearance of this replacement remote for full compatibility.



Figure 1: Front view of the replacement remote control. This image displays the overall design and button layout of the remote, which is crucial for verifying compatibility with your original unit.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect battery orientation can prevent the remote from functioning.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.



Figure 2: Angled view of the replacement remote control. This perspective highlights the ergonomic design and the placement of the battery compartment on the rear of the device.

2. Initial Use

As an infrared (IR) replacement remote, no complex pairing or programming is typically required. Once batteries are installed, point the remote control directly at the infrared receiver on your air conditioner unit and press the desired function button.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. The functions are generally indicated by icons or simple labels.

Table 1: Remote Control Button Functions

Button/Icon	Function	Description
(Power)	Power On/Off	Turns the air conditioner unit on or off.
* (Mode)	Mode Selection	Cycles through operating modes (e.g., Cool, Fan, Dry, Heat - depending on AC unit capabilities).
▲ (Up Arrow)	Temperature Up / Adjust Up	Increases the set temperature or adjusts other settings upwards.
▼ (Down Arrow)	Temperature Down / Adjust Down	Decreases the set temperature or adjusts other settings downwards.
⟳ (Fan)	Fan Speed	Adjusts the fan speed (e.g., Low, Medium, High, Auto).
(Timer On)	Timer On	Sets the time for the unit to turn on automatically.
(Timer Off)	Timer Off	Sets the time for the unit to turn off automatically.
(Sleep/Moon)	Sleep Mode	Activates or deactivates sleep mode, which typically adjusts temperature gradually for comfort during sleep.

Note: The exact functionality of each button may vary slightly depending on the specific model of your air conditioner unit. Refer to your air conditioner's original manual for detailed explanations of its features.

MAINTENANCE

1. Battery Replacement

Replace batteries when the remote's range decreases or it stops responding. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

2. Cleaning the Remote

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed immediately by a dry cloth. Do not use abrasive cleaners, solvents, or immerse the remote in water.

3. Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

• Remote not responding:

- Check if batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote's IR emitter and the AC unit's IR receiver.
- Verify you are within the effective range of the AC unit's IR receiver.

• Limited range or intermittent operation:

- Batteries may be low; replace them.
- Ensure the remote's IR emitter and the AC unit's receiver are clean and free of dust.
- Avoid strong light sources (like direct sunlight) that might interfere with the IR signal.

- **Some functions do not work:**

- This replacement remote is designed to mimic the original. However, some advanced or specific functions of your original AC unit might not be fully supported if they rely on unique codes not present in this replacement.
- Confirm that your AC unit model is listed as compatible. If your original remote was significantly different in appearance, full functionality may not be guaranteed.

SPECIFICATIONS

Attribute	Detail
Product Type	Replacement Infrared (IR) Remote Control
Compatible Devices	Portable Air Conditioners (BAHAG ProKlima 26507950, 26506966, JHS-A019-07KR2/E; Premium PPA9004J)
Power Source	2 x AAA Batteries (not included)
Color	Grey
Max Number of Supported Devices	1
Special Feature	Ergonomic design

SUPPORT INFORMATION

For any questions regarding the compatibility or functionality of this replacement remote control, please contact the seller directly through the platform where the purchase was made. It is recommended to provide your original air conditioner model number and, if possible, a picture of your original remote control for faster assistance.

This product is a replacement remote and may not offer all the exact same functions as your original remote. Please verify compatibility before purchase.