

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Meoilkolnm](#) /
- › [Meoilkolnm 128GB FHD 1080P Mini Body Camera User Manual](#)

Meoilkolnm H88 Black

Meoilkolnm 128GB FHD 1080P Mini Body Camera User Manual

Model: H88 Black

INTRODUCTION

Thank you for choosing the Meoilkolnm 128GB FHD 1080P Mini Body Camera. This compact and versatile device is designed for convenient, hands-free recording in various situations. Its small size and multiple mounting options make it an ideal companion for capturing moments during work, travel, or daily activities.

1.27 0Z
(35.95g)



Small & Lightweight

Tiny camera, huge potential, Mount it and take it anywhere, anytime!

The Meoilkolnm Mini Body Camera is designed to be small and lightweight, easily fitting in the palm of your hand for ultimate portability.

The camera features a simple one-button operation, making it user-friendly for both beginners and professionals. With its magnetic design and included accessories, you can achieve creative and unique film angles that might be challenging with other cameras.

The Action GH88 Camera

to film for a massive 180 minutes after fully charged (WI-FI OFF) !



The Action GH88 Camera offers up to 180 minutes of recording time when Wi-Fi is off, providing extended use on a single charge.

WHAT'S IN THE BOX

Upon opening your package, please ensure all the following items are included:

- 1 x 128GB Body Camera
- 1 x Magnet Pendant
- 1 x Safety Cord
- 1 x Portable Back Clip
- 1 x USB Cable



An overview of all components included with your Meoilkolnm Mini Body Camera, ensuring you have everything needed for operation.

SETUP

Charging the Camera

Before first use, fully charge the camera using the provided USB cable. Connect the small end of the USB cable to the camera's charging port and the other end to a USB power adapter (not included) or a computer USB port. The indicator light will show charging status.


Inserting the Memory Card

The camera comes with a 128GB Micro SD card. Locate the Micro SD card slot on the camera and gently insert the card until it clicks into place. Ensure the card is inserted correctly to avoid damage.

Connecting to the App

For live preview, playback, and downloading footage, connect the camera to your smartphone via the dedicated app. Download the app from your device's app store. Once installed, follow the in-app instructions to pair your camera. It is recommended to use the app within 32 feet (10 meters) for the

best connection.

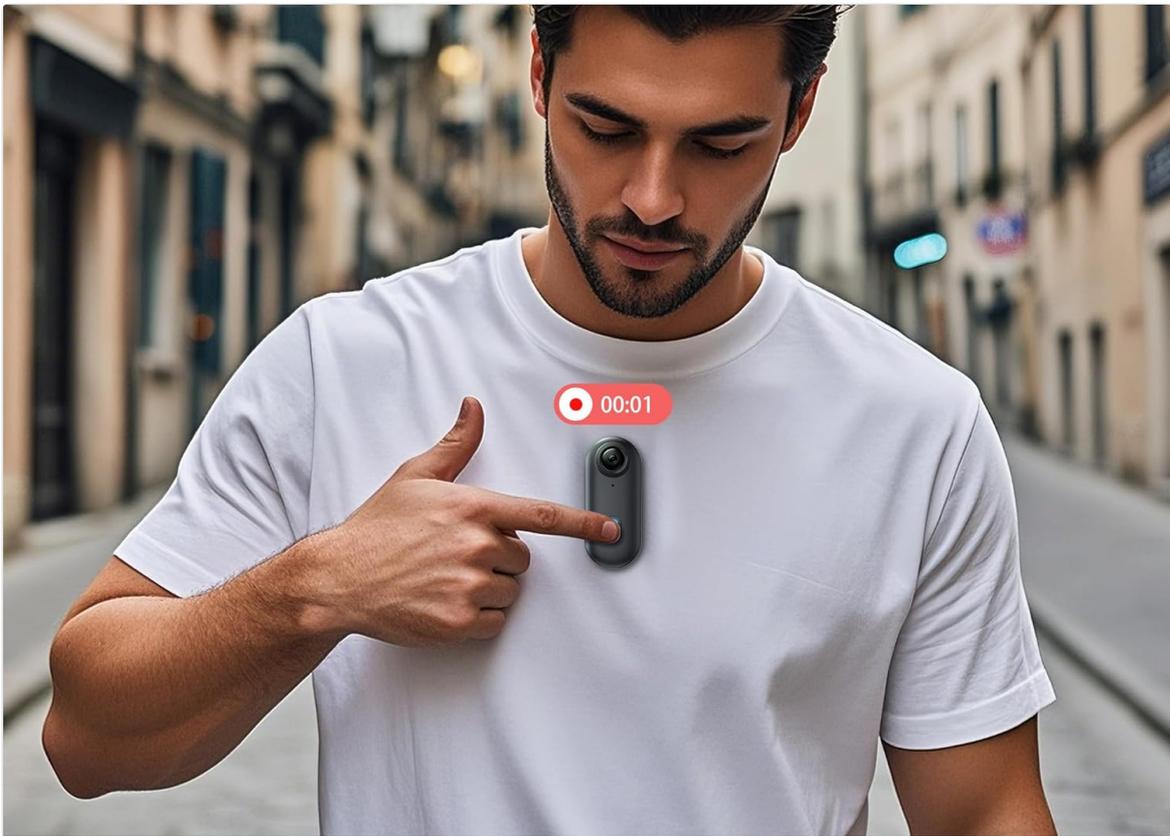

Quick Capture

Simply press the home button on the front of the mini camera to start / stop recording instantly, when it's on.

Utilize the companion app to preview your shots in real-time and manage recordings directly from your smartphone.

Mount it anywhere, take it everywhere.



Easily transfer videos and images from your camera to your phone or computer using the provided USB cable.

Your browser does not support the video tag.

Official product video demonstrating the tiny wearable camera's HD quality and app control features, provided by the seller.

OPERATING THE CAMERA

Power On/Off

To power on the camera, simply press the home button on the front for 3 seconds. The blue LED indicator will turn on. To power off, press the home button for 3 seconds again; the LED will turn off.



1 Power ON
Simply press the home button on the front of the mini camera for 3s to power on .
(Blue LED = ON)



2 Quick Capture
Simply press the home button to start / stop recording instantly, when it's on. (Blue LED = FLASH)



3 Power off
Simply press the home button on the front of the mini camera for 3s to power off . (LED = OFF)

Visual guide for powering on, initiating quick capture, and powering off the camera using the central button.

Quick Capture Recording

Once the camera is powered on (blue LED is solid), simply press the home button to start or stop recording instantly. The blue LED will flash during recording.



LIVE PREVIEW & Play Back & Download on App

Mount up the body cam and use App preview your shots and snap away like a pro. (Recommended to use within 32ft (10m))

Initiate or stop recording with a simple press of the home button for quick and convenient capture.

Mounting Options

The camera offers several versatile mounting options to suit your needs:

- **Magnetic Pendant:** Attach the camera to the magnetic pendant and wear it around your neck with the safety cord for dual protection and hands-free recording.
- **Portable Back Clip:** The back clip allows for 360° adjustable rotation, enabling you to easily change the recording angle. Clip it to your pocket, belt, or other surfaces.
- **Safety Cord:** Use the safety cord to secure the camera, especially when using the magnetic pendant, to prevent accidental loss.



A truly **no-hands camera**

Go completely hands-free and live in the moment! Set it and forget about it for easy, ultra-wide POV shots.

Experience truly hands-free recording, allowing you to capture moments without interruption.


Upload videos/images From the Camera to phone and Computer



Check the the files on Iphone/Android via Lighting to typs-c cable or type-c to type-c cable

Check the files on Computer via provided cable usb-a to type-c

Mount the camera anywhere and take it everywhere, thanks to its adaptable design.

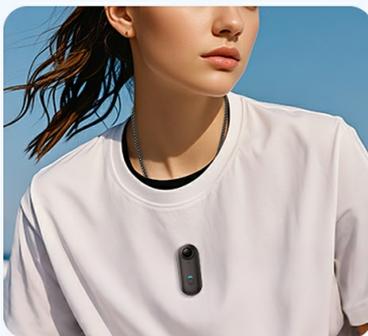

Magnect Pendant
Snap on for easy POV shots.



Easy Clip
Clip to your pocket, belt, cap or pet's collar for awesome angles.



Safety Cord
Keep GH88 Safety with Safety Cord.

Explore various wearing options including the magnetic pendant, easy clip, and safety cord for secure and versatile recording.

Proper maintenance will ensure the longevity and optimal performance of your Meoilkolnm Mini Body Camera:

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution to avoid scratches. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Battery Care:** To preserve battery life, avoid fully discharging the battery frequently. If storing for an extended period, charge the battery to about 50% every few months.
- **Firmware Updates:** Check the official Meoilkolnm website or app periodically for any available firmware updates to ensure your camera has the latest features and bug fixes.

TROUBLESHOOTING

If you encounter issues with your camera, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Camera overheats during use or playback.	Prolonged recording or high-resolution settings can cause heat. Ensure adequate ventilation. If overheating persists and affects performance, reduce recording duration or resolution. Allow the camera to cool down before continued use.
Cannot connect to phone via Wi-Fi.	Ensure the camera's Wi-Fi is enabled and you are within the recommended 32ft (10m) range. Restart both the camera and your phone. Check app permissions on your phone. Some environments may have Wi-Fi interference.
Video quality drops or recording stops unexpectedly.	This can be related to overheating. Ensure the memory card has sufficient free space and is properly formatted. Use a high-speed Micro SD card (Class 10 or higher).
Recordings are split into shorter files.	This is a common feature in many cameras to prevent file corruption in case of power loss and to make file management easier. This is normal operation and not a defect.
Poor audio quality, especially outdoors.	The microphone may pick up wind noise or background sounds. Consider using the camera in less windy conditions or in quieter environments for better audio.

If these solutions do not resolve your issue, please contact Meoilkolnm customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	0.12 x 0.1 x 0.23 inches (approx. 3 x 2.5 x 5.8 mm)
Item Weight	5.9 ounces (approx. 167 grams)
Item Model Number	H88 Black
Batteries	1 A battery required (included)
Photo Sensor Technology	CMOS
Video Capture Resolution	1080p
Maximum Focal Length	5 Millimeters
Maximum Aperture	1 f
Flash Memory Type	Micro SD
Video Capture Format	AVI
Supported Audio Format	MP4
Connectivity Technology	Wi-Fi
Color	Black
Manufacturer	Meoilkolnm
Country of Origin	China

WARRANTY AND SUPPORT

Meoilkolnm is committed to providing high-quality products. For information regarding warranty coverage, returns, or technical support, please refer to the product listing page on Amazon or contact Meoilkolnm customer service directly through the retailer's platform. Please retain your proof of purchase for any warranty claims.