

[Manuals.plus](#) /

> [White Point](#) /

> White Point No Frost Refrigerator WPR343B User Manual

## White Point WPR343B

# White Point No Frost Refrigerator WPR343B User Manual

Model: WPR343B | Capacity: 310 Liters | Color: Black

## 1. INTRODUCTION

---

Thank you for choosing the White Point No Frost Refrigerator WPR343B. This appliance is designed to provide efficient and reliable food storage with advanced features for your convenience. This manual provides essential information for the safe installation, operation, and maintenance of your refrigerator. Please read it thoroughly before use and keep it for future reference.

## 2. SAFETY INFORMATION

---

To ensure safe operation, please observe the following precautions:

- Ensure the refrigerator is connected to a grounded power outlet with the correct voltage (220 Volts).
- Do not place flammable, explosive, or volatile materials inside the refrigerator.
- Keep ventilation openings clear of obstruction.
- Do not damage the refrigerant circuit.
- Supervise children to ensure they do not play with the appliance.
- Unplug the appliance before cleaning or performing any maintenance.

## 3. SETUP AND INSTALLATION

---

### 3.1 Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Inspect the refrigerator for any damage during transit. Keep packaging materials out of reach of children.

### 3.2 Placement

Place the refrigerator on a firm, level surface away from direct sunlight, heat sources (e.g., stoves, radiators), and moisture. Ensure adequate air circulation around the appliance. Maintain a minimum clearance of 10 cm (4 inches) from the back and

sides for proper ventilation.





*Image: Front view of the White Point No Frost Refrigerator WPR343B, showcasing its sleek black finish and two-door design.*

### **3.3 Leveling**

Adjust the leveling feet at the bottom of the refrigerator to ensure it is stable and level. This prevents vibrations and ensures proper door sealing.

### **3.4 Electrical Connection**

Plug the refrigerator into a dedicated 220V, 50Hz grounded power outlet. Do not use extension cords or multi-plugs. Allow the refrigerator to stand for at least 2-4 hours before plugging it in to allow refrigerants to settle.

### **3.5 Initial Cleaning**

Before storing food, clean the interior and exterior of the refrigerator with a soft cloth and mild detergent. Wipe dry thoroughly.

## **4. OPERATING INSTRUCTIONS**

---

### **4.1 Temperature Control**

The refrigerator features internal temperature control. Locate the thermostat dial or electronic control panel inside the fresh food compartment. Adjust the setting according to your needs. A medium setting is generally recommended for optimal performance and energy efficiency.

### **4.2 Food Storage Guidelines**

This 310-liter No Frost refrigerator is designed to keep your food fresh and organized. It includes adjustable tempered glass shelves, a vegetable crisper drawer, and door shelves.



*Image: Interior view of the White Point No Frost Refrigerator WPR343B with both doors open, showing the adjustable glass shelves, crispener drawer, and door storage compartments.*

- **Fresh Food Compartment:** Store fruits, vegetables, dairy products, and cooked foods. Utilize the adjustable shelves to accommodate items of various sizes. The vegetable crispener drawer is ideal for maintaining the freshness of produce.
- **Freezer Compartment:** Suitable for long-term storage of frozen foods. Ensure packages are sealed to prevent

freezer burn.

- **Door Shelves:** Convenient for bottles, jars, and smaller items. The reversible door design allows for flexible opening from either the left or right side.

### 4.3 Multi-Air Flow System

The integrated multi-air flow system ensures even cooling throughout both the refrigerator and freezer sections, maintaining consistent temperatures and preserving food quality.

## 5. MAINTENANCE

---

### 5.1 Cleaning the Interior

Regularly clean the interior with a solution of mild detergent and warm water. Remove shelves and drawers for thorough cleaning. Rinse and dry completely before returning them to the refrigerator. Do not use abrasive cleaners or harsh chemicals.

### 5.2 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. For stubborn stains, use a mild, non-abrasive cleaner. Keep the door seals clean to ensure a tight seal and efficient operation.

### 5.3 Defrosting

This is a No Frost refrigerator, meaning it automatically prevents ice buildup in both the freezer and fresh food compartments. Manual defrosting is not required.

### 5.4 Power Saving Tips

- Avoid opening the doors frequently or for extended periods.
- Allow hot foods to cool before placing them in the refrigerator.
- Ensure the door seals are clean and intact.
- Do not overload the refrigerator, as this can impede air circulation.

## 6. TROUBLESHOOTING

---

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
Refrigerator is not cooling	Power cord unplugged; thermostat set too high; poor ventilation.	Check power connection; adjust thermostat to a lower setting; ensure adequate clearance around the unit.
Unusual noises	Refrigerator not level; items vibrating inside; compressor noise (normal).	Adjust leveling feet; rearrange items; normal compressor sounds are expected.
Water on floor/inside	Drain tube blocked; door not closing properly.	Clear drain tube; check door seals and ensure door is fully closed.
Door not closing completely	Door seals dirty or damaged; refrigerator not level; items obstructing closure.	Clean or replace door seals; level the refrigerator; remove obstructions.

## 7. SPECIFICATIONS

---

<b>Brand Name</b>	White Point
<b>Model Information</b>	WPR343B
<b>Product Dimensions (D x W x H)</b>	65 x 60 x 172 cm
<b>Item Weight</b>	35 kg
<b>Efficiency Rating</b>	A+
<b>Total Capacity</b>	310 Liters
<b>Fresh Food Capacity</b>	310 Liters
<b>Freezer Capacity</b>	31 Liters
<b>Annual Energy Consumption</b>	550 kWh per year
<b>Special Features</b>	No Frost
<b>Color</b>	Black
<b>Voltage</b>	220 Volts
<b>Vegetable/Crisper Drawers</b>	1
<b>Number of Shelves</b>	3
<b>Door Hinges</b>	Right (Reversible)

## 8. WARRANTY AND SUPPORT

---

Your White Point Refrigerator WPR343B comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical assistance, spare parts, or to schedule a service appointment, please contact White Point customer support through their official website or the contact information provided in your warranty documentation.