

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VONYX](#) /

› [VONYX Megaphone Loudhailer with Siren 40W User Manual](#)

VONYX 40W

VONYX Megaphone Loudhailer with Siren 40W User Manual

Model: 40W

1. INTRODUCTION

Thank you for choosing the VONYX 40W Megaphone Loudhailer with Siren. This powerful and versatile device is designed for clear and effective voice amplification in various settings, including public events, emergencies, crowd control, and outdoor activities. Its robust construction and intuitive controls ensure reliable performance when you need to be heard. This manual provides essential information for the safe and efficient operation of your megaphone.

2. SAFETY INFORMATION

- Do not expose the megaphone to rain or moisture to prevent electric shock or damage.
- Avoid prolonged exposure to extremely loud sounds, as this may cause hearing damage.
- Ensure correct battery polarity when installing batteries.
- Remove batteries if the megaphone will not be used for an extended period.
- Keep out of reach of children.
- Do not attempt to disassemble or repair the unit yourself. Refer all servicing to qualified personnel.

3. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- VONYX 40W Megaphone Loudhailer Unit
- Removable Handheld Microphone
- Adjustable Carrying Strap

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your VONYX Megaphone:



Figure 4.1: VONYX 40W Megaphone with detachable microphone and carrying strap.



Figure 4.2: Side view of the VONYX 40W Megaphone.



Figure 4.3: Detachable microphone and siren function.



Figure 4.4: Protective rubber edge on the megaphone horn.

- **Horn/Speaker:** The main sound output component.
- **Handle:** Ergonomically designed for comfortable grip.
- **Battery Compartment:** Located at the rear, for battery installation.
- **Detachable Microphone:** For clear voice input, with volume and record controls.
- **Control Panel:** Typically on the microphone or handle, includes power, volume, siren, and record/playback buttons.
- **Carrying Strap:** For easy portability.

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment at the rear of the megaphone.
2. Twist or slide the cover to open the compartment.
3. Insert 6 x D-type batteries, ensuring correct polarity (+/-) as indicated inside the compartment.

4. Close the battery compartment cover securely.



Figure 5.1: Quick reload battery compartment.

5.2 Microphone Connection

If your model includes a detachable microphone, plug its coiled cable into the designated port on the megaphone handle. Ensure it clicks securely into place.

5.3 Strap Attachment

Attach the provided carrying strap to the designated loops on the megaphone for convenient portability. Adjust the strap length for comfortable carrying.

STRAP INCLUDED

EASY TO TAKE WITH YOU



Figure 5.2: Megaphone with attached carrying strap.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off

Locate the power switch, usually on the handle or microphone. Slide it to the 'ON' position to activate the megaphone. Slide to 'OFF' when not in use to conserve battery life.

6.2 Adjusting Volume

Use the volume control knob or slider, typically found on the microphone or handle, to adjust the loudness of your voice. Start with a lower volume and gradually increase it to avoid feedback.

6.3 Using the Microphone

Hold the microphone approximately 2-5 cm (1-2 inches) from your mouth for optimal clarity. Speak clearly and directly into the microphone. The megaphone is designed for exceptional sound dispersion, reaching distances up to 1000 meters.



LET YOUR VOICE
BE HEARD
AT EVENTS, GATHERINGS,
PARTYS, EVERYWHERE...

×

×



VONYX

Figure 6.1: Using the megaphone in a crowd.

LOUD & CLEAR VOICE

POWERFUL INTEGRATED AMPLIFIER

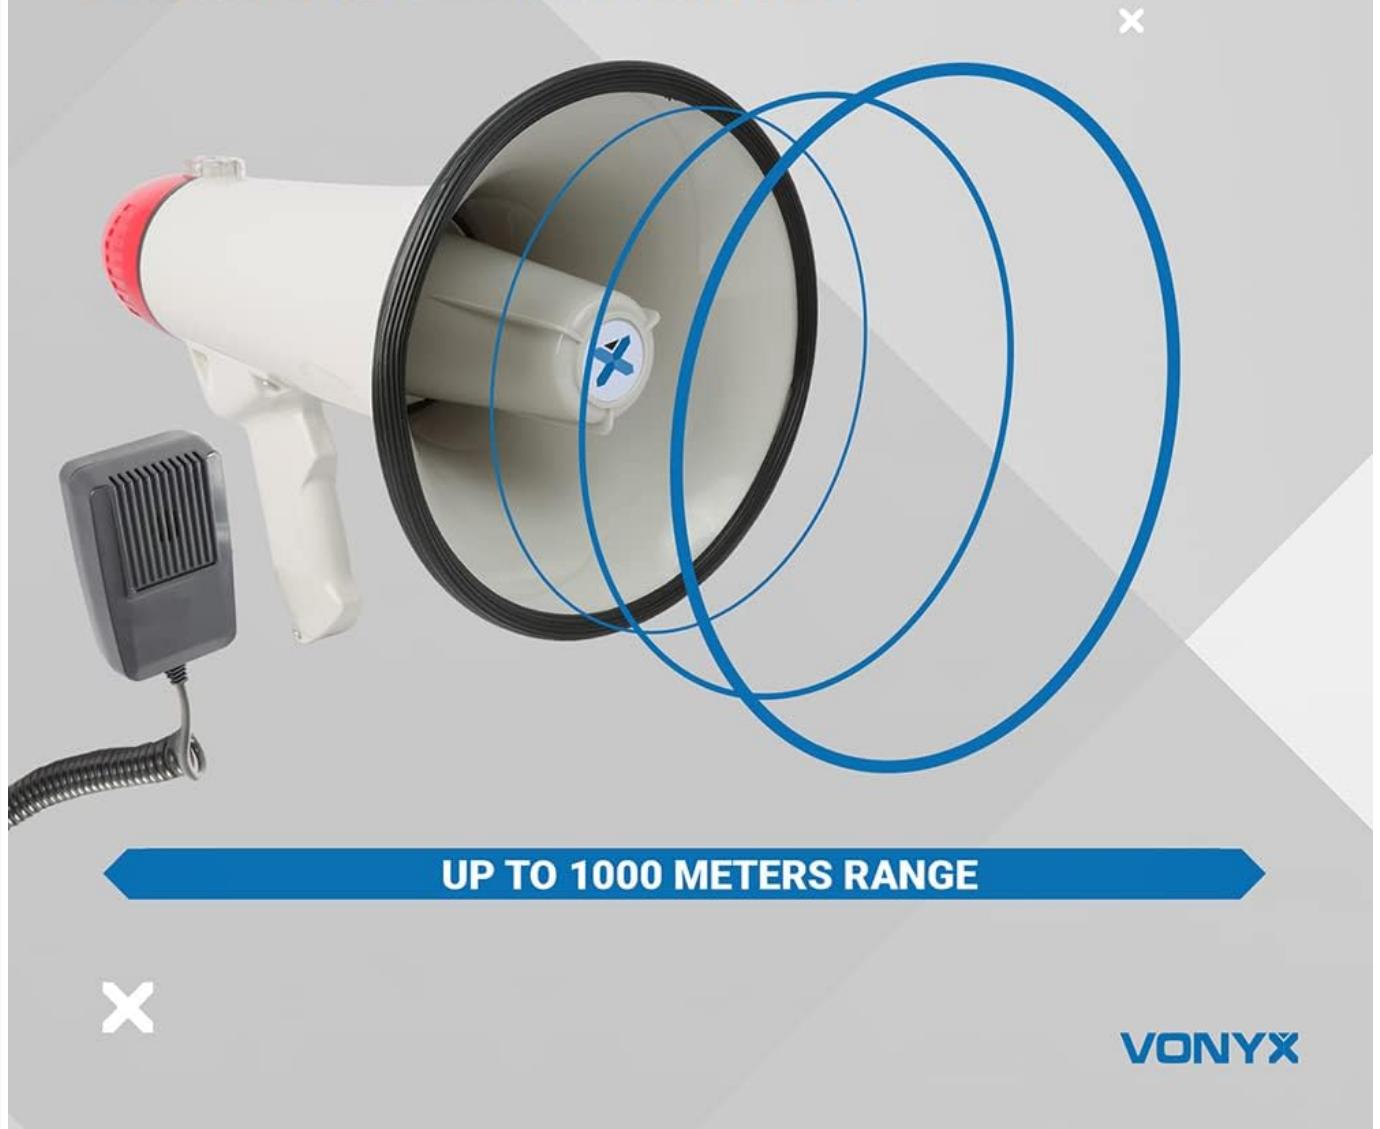


Figure 6.2: Megaphone range up to 1000 meters.

6.4 Siren Function

Press the dedicated 'Siren' button to activate a loud, attention-grabbing siren sound. Press it again to turn off the siren. This feature is useful for emergencies or to quickly get attention.

6.5 Record and Playback Function

Some models feature a record function. To record, press the 'Record' button and speak your message. Press 'Record' again to stop. To play back your recorded message, press the 'Play' button. This is ideal for repetitive announcements.

7. MAINTENANCE

- **Cleaning:** Wipe the megaphone's exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** Always remove batteries if the megaphone will not be used for an extended period (e.g., more than a month) to prevent battery leakage and damage to the unit.

- Storage:** Store the megaphone in a cool, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or very low volume.	Batteries are dead or incorrectly installed. Volume is too low. Microphone not connected properly.	Replace batteries, ensuring correct polarity. Increase volume. Reconnect microphone securely.
Siren not working.	Batteries are low. Siren button is faulty.	Replace batteries. If problem persists, contact support.
Distorted sound or feedback.	Microphone too close to speaker. Volume too high.	Increase distance between microphone and megaphone. Reduce volume.
Record function not working.	Not pressing 'Record' button correctly. Unit not powered on.	Ensure megaphone is on. Press 'Record' button firmly to start/stop recording.

9. SPECIFICATIONS

Feature	Detail
Power Output	40W
Dimensions (L x W x H)	20.5 x 23.5 x 33 cm
Weight	1 kg (without batteries)
Power Supply	6 x D-type batteries (not included)
Effective Range	Up to 1000 meters (1 km)
Manufacturer Reference	952.007

10. WARRANTY AND SUPPORT

VONYX products are manufactured to high quality standards. In the unlikely event of a problem with your product, please contact your retailer or the VONYX customer support for assistance. Keep your proof of purchase for warranty claims. For the most up-to-date support information and product registration, please visit the official VONYX website.