

[Manuals.plus](#) /

› [Livoo](#) /

› Livoo RV152N Digital LED Alarm Clock User Manual

Livoo RV152N

Livoo RV152N Digital LED Alarm Clock User Manual

Model: RV152N | Brand: Livoo

INTRODUCTION

Thank you for choosing the Livoo RV152N Digital LED Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Please read this guide carefully to ensure proper use and to fully benefit from all its features. Keep this manual for future reference.

PRODUCT OVERVIEW

The Livoo RV152N is a versatile digital alarm clock featuring a large LED display, a single alarm with a snooze function, and the ability to show time, date, and temperature. Its compact design and battery operation make it suitable for any bedside table.

Key Features:

- Large 9 x 5 cm LED display with backlight for optimal visibility.
- 12/24 hour time format selection.
- Single alarm with a 5-minute snooze function.
- Displays current time, date (month/day), and temperature (°C or °F).
- Anti-slip feet for stability.
- Battery-powered for portability (2x AA batteries, not included).

Clock Components:

Familiarize yourself with the main components of your alarm clock:



Image 1: Front View. This image shows the clock's front with its large LED display. The display clearly shows the current time (12:01 AM), the set alarm time (7:00 AM), the date (January 1st), and the temperature (22.8°C). The 'SNOOZE/LIGHT' button is visible on top.



Image 2: Back View. This image displays the back of the alarm clock, highlighting the control buttons: 'SET', 'ALARM', 'WAVE/UP', and 'DOWN'. The battery compartment cover is also visible, along with a 'DC' port which may be for an optional power adapter.

- **Front Display:** Shows time, alarm time, date, and temperature.
- **SNOOZE/LIGHT Button (Top):** Activates snooze during an alarm or temporarily illuminates the display.
- **SET Button (Back):** Used to enter and confirm settings for time, date, and other parameters.
- **ALARM Button (Back):** Used to set and activate/deactivate the alarm.
- **WAVE/UP Button (Back):** Used to increase values during setting, or to cycle through display modes/units.
- **DOWN Button (Back):** Used to decrease values during setting.
- **Battery Compartment (Back):** Holds 2x AA batteries.
- **DC Port (Back):** For optional external power adapter (not included).

SETUP

1. Battery Installation:

1. Locate the battery compartment cover on the back of the alarm clock.
2. Slide or unclip the cover to open it.
3. Insert 2 new AA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

The clock will power on automatically once batteries are inserted. The display may flash or show a default time.

OPERATING INSTRUCTIONS

Setting the Time:

1. Press and hold the **SET** button for a few seconds until the time display starts flashing.
2. Use the **WAVE/UP** or **DOWN** buttons to adjust the hour.
3. Press **SET** again to confirm the hour and move to the minute setting.
4. Use the **WAVE/UP** or **DOWN** buttons to adjust the minutes.
5. Press **SET** again to confirm the minutes.
6. The display will now show the 12/24 hour format setting. Use **WAVE/UP** or **DOWN** to select either '12H' or '24H'.
7. Press **SET** to exit time setting mode.

Setting the Date:

1. From normal time display, press the **SET** button once (do not hold). The year may flash or the display will move to date setting.
2. Use the **WAVE/UP** or **DOWN** buttons to adjust the year (if applicable). Press **SET** to confirm.
3. The month display will flash. Use **WAVE/UP** or **DOWN** to adjust the month.
4. Press **SET** to confirm the month and move to the day setting.
5. Use the **WAVE/UP** or **DOWN** buttons to adjust the day.
6. Press **SET** to exit date setting mode.

Setting the Alarm:

1. Press and hold the **ALARM** button for a few seconds until the alarm time display starts flashing.
2. Use the **WAVE/UP** or **DOWN** buttons to adjust the alarm hour.
3. Press **ALARM** again to confirm the hour and move to the alarm minute setting.
4. Use the **WAVE/UP** or **DOWN** buttons to adjust the alarm minutes.
5. Press **ALARM** again to confirm the alarm time.

6. To activate or deactivate the alarm, press the **ALARM** button once (do not hold) during normal time display. An alarm icon (e.g., a bell) will appear on the display when the alarm is active.

Snooze Function:

When the alarm sounds, press the **SNOOZE/LIGHT** button located on the top of the clock. The alarm will pause for approximately 5 minutes and then sound again. You can repeat this function multiple times.

Backlight:

Press the **SNOOZE/LIGHT** button on the top of the clock to temporarily illuminate the display for a few seconds, making it easier to read in low light conditions.

Temperature Unit Selection (°C/°F):

In normal time display mode, press the **WAVE/UP** button once (do not hold) to switch between Celsius (°C) and Fahrenheit (°F) temperature units.

MAINTENANCE

Cleaning:

- Wipe the clock with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the surface and electronic components.

Battery Replacement:

When the display becomes dim or the clock functions erratically, it is time to replace the batteries. Follow the battery installation steps in the 'Setup' section. Always replace both batteries at the same time with new AA batteries.

TROUBLESHOOTING

- **Display is blank or dim:**
Ensure batteries are correctly installed with proper polarity. Replace old batteries with new ones.
- **Alarm does not sound:**
Check if the alarm is activated (look for the alarm icon on the display). Ensure the alarm time is set correctly.
- **Incorrect time/date:**
Follow the 'Setting the Time' and 'Setting the Date' instructions to reset. If the issue persists after battery replacement, ensure new batteries are used.
- **Temperature reading seems inaccurate:**
Ensure the clock is placed in a location away from direct heat sources or drafts that could affect its internal sensor.

SPECIFICATIONS

Model:	RV152N
Brand:	Livoo
Display Type:	Digital LED
Display Size:	9 x 5 cm (approx.)

Time Format:	12H / 24H selectable
Alarm:	1 alarm with 5-minute snooze
Functions:	Time, Date (Month/Day), Temperature (°C/°F)
Power Source:	2 x AA batteries (not included)
Material:	Plastic
Mounting Type:	Table Mount

WARRANTY AND SUPPORT

Livoo products are designed for reliability and performance. For specific warranty information, please refer to the documentation provided with your purchase or contact your retailer. For additional support or frequently asked questions, you may visit the manufacturer's support page or scan the QR code below:

[Livoo Support Link](#)

Scan this QR code for additional product information or support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question