

SIS BF-960

User Manual: SIS BF-960 Foldable Electronic Piano

Model: BF-960

Brand: SIS

INTRODUCTION

This manual provides instructions for the safe and effective use of your SIS BF-960 Foldable Electronic Piano. Please read this manual thoroughly before operating the device and keep it for future reference.

The SIS BF-960 is a lightweight and compact 61-key electronic piano designed for portability and ease of use. It features a foldable design, rechargeable battery, and various functions to enhance your playing experience.



Image: The SIS BF-960 Foldable Electronic Piano shown unfolded, alongside its dedicated carrying case and USB charging cable. The piano is also depicted in its folded state.

PACKAGE CONTENTS

Please ensure all items are present in the package:

- SIS BF-960 Foldable Electronic Piano (61 keys)
- USB Charging Cable
- Dedicated Soft Case

商品詳細

展開時



折りたたみ時



厚み
4.5cm

厚み
2.4cm

付属品



USB充電
ケーブル

専用ソフトケース

重量：792g
鍵盤数：61鍵
充電時間：4時間
音量：0～16
テンポ：32セクション
トーン：16種類
リズム：100種類
デモ曲：25曲
トランスポーズ：-6～+6
材質：ABS、HIPS、シリコン

※ 自社計測のため、実際の製品と若干の誤差が生じる場合がございます。予めご了承ください。

Image: A visual representation of the product package contents, including the unfolded piano, USB charging cable, and the dedicated soft case.

SETUP

Unfolding the Piano

The SIS BF-960 features a simple folding mechanism.

1. Place the folded piano on a flat, stable surface.
2. Gently hold both ends of the piano.
3. Carefully unfold the piano until it lies flat and the two sections are securely connected by the three metal hinges.

Caution:

- Be careful not to pinch your fingers in the folding mechanism.
- Ensure the piano is fully unfolded and stable before use.



ヘッドフォンジャック

ヘッドフォンを
接続することで
時間や場所を
気にせず練習
できます。



簡単折りたたみ

両端をもって机に広げる
だけの簡単折りたたみ式。

三つの金具でしっかりと
繋がれています。

※折りたたみ部で指を挟まないように
注意してください。

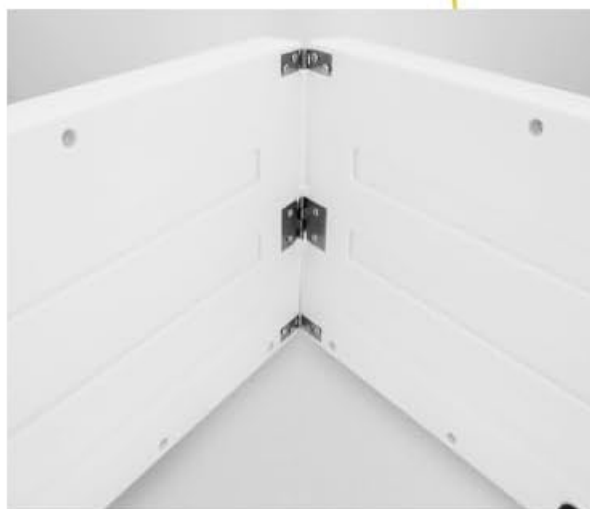


Image: A close-up view demonstrating the simple folding mechanism and the headphone jack.

Charging the Battery

The piano has a built-in rechargeable battery.

1. Locate the DC 5V charging port on the side of the piano.
2. Connect the provided USB charging cable to the charging port.
3. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
4. The charging indicator light will illuminate.
5. A full charge takes approximately 4 hours.

Note:

- The piano can be used while charging.
- For optimal battery life, avoid completely draining the battery before recharging.

バッテリー内蔵でどこでも使える



好きな時に好きな場所でピアノの練習ができる充電式電子ピアノ。
初心者にはもちろん、経験者の練習用にもオススメです。



Image: A visual guide showing the DC 5V charging port on the side of the piano and the included USB charging cable.

OPERATING INSTRUCTIONS

Power On/Off

- To power on, press the **ON/OFF** button.
- To power off, press the **ON/OFF** button again.

Basic Playback

Simply press the keys to play notes. The keyboard is designed for a natural and light touch.



Image: Hands demonstrating playing on the keyboard, highlighting its light touch and ease of play for both children and adults.

Control Panel Functions

The control panel allows you to adjust various settings and access different features.

誰でも簡単に使える機能満載

経験者に嬉しいトランスポーズやリズム、メトロノーム機能から
初心者に嬉しいティーチング機能まで、様々な機能が搭載されています。

- **VOLUME** : 音量を調節(0~16)
- **TEMPO** : DEMO曲、メトロノーム、リズムの再生テンポを調節(0~31/32セクション)
- **TRANPOSE** :
曲の各音の相対的な音程を保ったまま
全体の音の高さを調節(-6~P6)
- **TONE** : トーン(音色)を変更
(16種類のトーン内蔵)
- **RHYTHM** : 内蔵されているリズムを再生
(100種類のリズム内蔵)
- **TEACHING** : DEMO曲の弾き方を液晶に
表示
- **REC/PLAY** : 自分の演奏を録音/再生
- **ON/OFF** : 電源のON/OFF
- **DEMO** : 内蔵されているDEMO曲を再生
(25曲のDEMO曲内蔵)
- **DRUM** : 鍵盤をそれぞれ5種類の
パーカッションのサウンドに変換
- **BEAT** : メトロノーム(ビート)を再生
(1/4拍子, 2/4拍子, 3/4拍子, 4/4拍子)
- **▶/■** : DEMO曲、リズムを再生/一時停止
- **CHOICE/1~0** : DEMO曲、トーン、リズムを
選択する際に使用



Image: A detailed view of the control panel, showing buttons for Volume, Tempo, Transpose, Tone, Rhythm, Teaching, Recording, Demo, Drum, Beat, ON/OFF, and numerical keys.

- **VOLUME:** Adjusts the sound volume (0-16 levels).
- **TEMPO:** Adjusts the playback tempo for demo songs, metronome, and rhythms (0-32 sections).
- **TONE:** Selects from 16 different instrument tones.
- **RHYTHM:** Selects from 100 built-in rhythm patterns.
- **DEMO:** Plays one of the 25 built-in demo songs.
- **TRANPOSE:** Adjusts the pitch of the entire keyboard from -6 to +6 semitones.
- **TEACHING:** Activates the teaching function, displaying the notes of demo songs on the LCD.
- **REC/PLAY:** Records your own performance or plays back a recorded performance.
- **DRUM:** Changes the sound of each of the 5 drum keys.
- **BEAT:** Plays the metronome (beat) in various time signatures (e.g., 1/4, 2/4, 3/4, 4/4).
- **CHOICE/1~0:** Used to select demo songs, tones, or rhythms.

Using Headphones

To practice without disturbing others, connect headphones to the headphone jack on the side of the piano.

- Locate the headphone jack (3.5mm stereo) on the side of the piano.
- Insert your headphones into the jack.
- The internal speaker will automatically mute when headphones are connected.



ヘッドフォンジャック

ヘッドフォンを
接続することで
時間や場所を
気にせず練習
できます。



簡単折りたたみ

両端をもって机に広げる
だけの簡単折りたたみ式。
三つの金具でしっかりと
繋がれています。

※折りたたみ部で指を挟まないように
注意してください。

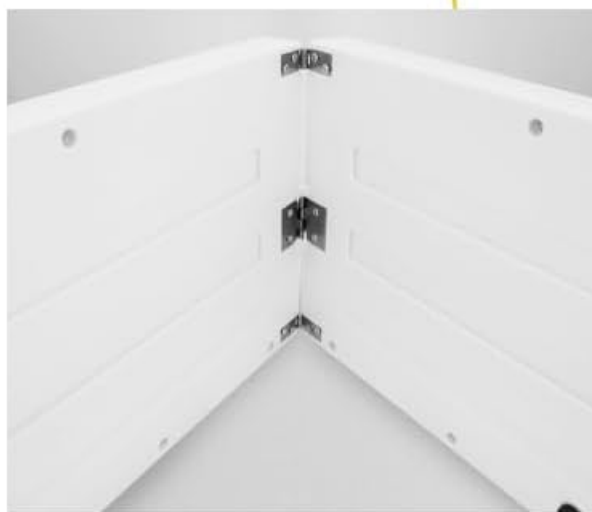


Image: A close-up view of the headphone jack on the side of the piano, with an illustration of headphones.

MAINTENANCE

Cleaning

- Always power off the piano before cleaning.
- Use a soft, dry cloth to wipe the surface of the piano.
- For stubborn dirt, slightly dampen the cloth with water and a mild detergent, then wipe dry immediately.
- Do not use abrasive cleaners, solvents, or chemical sprays, as they may damage the finish.

Storage

- When not in use, fold the piano and store it in its dedicated soft case to protect it from dust and scratches.
- Store the piano in a cool, dry place, away from direct sunlight, extreme temperatures, and high humidity.
- Avoid placing heavy objects on top of the piano.

持ち運びに便利な専用ケース

使用しない時はコンパクトに収納できる便利な専用ケース付き。
軽量なので持ち運びもラクラクです。



Image: The SIS BF-960 Foldable Electronic Piano being carried in its dedicated soft case, emphasizing its portability and lightweight design (792g).

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound	Power is off; Volume is too low; Headphones are connected; Speaker malfunction.	Press ON/OFF button; Increase volume; Disconnect headphones; Contact customer support.
Keys not responding	Piano not fully unfolded; Internal issue.	Ensure piano is fully unfolded and locked; Power off and on again; Contact customer support.
Battery not charging	USB cable not connected properly; Faulty USB cable/adaptor; Battery issue.	Reconnect USB cable; Try a different USB cable/adaptor; Contact customer support.
Distorted sound	Volume too high; Low battery; External interference.	Decrease volume; Charge battery; Move away from other electronic devices.

SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Model	BF-960
Number of Keys	61 keys
Dimensions (Unfolded)	Approx. 940 x 24 x 135 mm
Dimensions (Folded)	Approx. 470 x 45 x 135 mm
Weight	Approx. 792 g
Charging Time	Approx. 4 hours
Volume Levels	0-16
Tempo Sections	32
Tones	16 types
Rhythms	100 types
Demo Songs	25 songs
Transpose Range	-6 to +6 semitones
Materials	ABS, HIPS, Silicone
Accessories	USB Charging Cable, Dedicated Soft Case

Note: Product size, weight, and contents are based on internal measurements. Slight errors may occur.

コンパクトなのにちゃんとピアノ

94cm



こんなにコンパクト！



47cm

61鍵

録音
機能

充電式

デモ演奏
25曲

音色/リズム
100

トランスポーズ
-6~+6

わずか
792g



※本体のみ

Image: A diagram illustrating the unfolded and folded dimensions of the piano, along with key features like 61 keys, recording function, rechargeable battery, weight (792g), number of demo songs (25), rhythms (100), and transpose range.

商品詳細

展開時



折りたたみ時



厚み
4.5cm

厚み
2.4cm

付属品



重量：792g
鍵盤数：61鍵
充電時間：4時間
音量：0～16
テンポ：32セクション
トーン：16種類
リズム：100種類
デモ曲：25曲
トランスポーズ：-6～+6
材質：ABS、HIPS、シリコン

※ 自社計測のため、実際の製品と若干の誤差が生じる場合がございます。予めご了承ください。

Image: A comprehensive overview of the product's detailed specifications, including dimensions, weight, key count, charging time, volume, tempo, tones, rhythms, demo songs, transpose, materials, and included accessories (USB charging cable, dedicated soft case).

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the retailer or manufacturer's official website. Keep your purchase receipt as proof of purchase.

For further assistance, please contact SIS customer service.

© 2024 SIS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question