

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Saachi](#) /
- › [Saachi Coffee Grinder NL-CG-4971 User Manual](#)

Saachi NL-CG-4971

Saachi Coffee Grinder NL-CG-4971 User Manual

Model: NL-CG-4971 | Brand: Saachi

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Saachi Coffee Grinder, model NL-CG-4971. Please read these instructions thoroughly before first use and retain them for future reference.



Figure 1: Saachi Coffee Grinder NL-CG-4971 product packaging.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not immerse the motor base in water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- This appliance is for household use only.
- Close supervision is necessary when any appliance is used by or near children.

PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your Saachi Coffee Grinder:



Figure 2: Front view of the Saachi Coffee Grinder, showing the bean hopper at the top and the ground coffee container at the bottom.

1. **Bean Hopper:** Top container for whole coffee beans (210g capacity).
2. **Grind Setting Dial:** Adjusts the fineness of the grind (34 settings).
3. **Control Panel:** Buttons for cup selection, time selection, and start/stop.
4. **Grinding Chamber:** Houses the stainless steel blades and motor.
5. **Removable Grinding Cup/Ground Coffee Jar:** Collects ground coffee (100g capacity).
6. **Lid:** Transparent lid for the grinding cup.
7. **Power Cord:** Connects the grinder to an electrical outlet.



Figure 3: Detailed view of the internal grinding mechanism, showing the burr and blade components.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
 2. **Cleaning:** Before first use, wipe the exterior of the grinder with a damp cloth. Wash the removable grinding cup and its lid with warm, soapy water. Rinse thoroughly and dry completely. Do not immerse the main motor unit in water.
 3. **Assembly:**
 - Ensure the grinding cup is clean and dry.
 - Place the grinding cup securely into its designated slot on the grinder base.
 - Ensure the bean hopper is properly seated on top of the grinding chamber.
 4. **Placement:** Place the grinder on a stable, flat, and dry surface. Ensure it is away from heat sources and direct sunlight.
 5. **Power Connection:** Plug the power cord into a standard electrical outlet.
-

OPERATING INSTRUCTIONS

1. Adding Coffee Beans

Open the lid of the bean hopper and pour whole coffee beans into the hopper. The maximum capacity is 210g. Do not overfill.



Figure 4: The coffee grinder ready for operation, with whole beans in the top hopper and ground coffee in the lower container.

2. Selecting Grind Setting

Rotate the grind setting dial to choose your desired fineness. The grinder offers 34 grind settings, ranging from fine to coarse:

- **Fine:** Suitable for Espresso machines and Moka pots.
- **Medium:** Ideal for Drip coffee makers and Pour-over methods.
- **Coarse:** Best for French Press and Cold Brew.



Figure 5: Close-up of the grinder's top section, highlighting the grind setting dial.

3. Selecting Quantity

Use the control panel to select the desired number of cups or grinding time. Refer to the display for current selection.

4. Starting the Grinder

Press the Start/Stop button to begin the grinding process. The grinder will automatically stop once the selected quantity is reached.

5. After Grinding

Once grinding is complete, carefully remove the ground coffee jar. The transparent lid allows you to monitor the grinding process and the amount of ground coffee.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee grinder.

1. **Unplug:** Always unplug the grinder from the power outlet before cleaning.
2. **Empty:** Remove any remaining whole beans from the hopper and ground coffee from the collection jar.
3. **Removable Parts:** The grinding cup and its lid are dishwasher safe or can be washed by hand with warm, soapy water. Rinse thoroughly and dry completely before reassembling.
4. **Grinding Chamber:** Use a small brush (often included with grinders, or a stiff-bristled brush) to remove coffee grounds from the grinding chamber and burrs. Do not use water or liquids directly on the grinding mechanism.
5. **Exterior:** Wipe the exterior of the motor base with a damp cloth. Do not use abrasive cleaners or scourers.
6. **Storage:** Store the grinder in a cool, dry place when not in use.

TROUBLESHOOTING

If you encounter issues with your Saachi Coffee Grinder, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Grinder does not turn on.	Not plugged in; power outage; safety interlock not engaged.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker. Ensure the bean hopper and grinding cup are correctly assembled and seated.
Grinder stops during operation.	Overheating; motor overload; insufficient beans.	Unplug the grinder and let it cool down for 30 minutes. Reduce the amount of beans if overfilled. Ensure the grinding mechanism is not jammed.
Inconsistent grind.	Grinding mechanism clogged; incorrect grind setting.	Clean the grinding chamber and burrs thoroughly. Adjust the grind setting to a finer or coarser option as needed.
Beans not feeding into grinder.	Hopper empty; beans stuck.	Add more beans. Gently shake the grinder to dislodge stuck beans (ensure power is off first).

If the problem persists after attempting these solutions, please contact Saachi customer support.

PRODUCT SPECIFICATIONS

Brand	Saachi
Model	NL-CG-4971
Color	Silver
Material	Stainless Steel
Power / Wattage	200 watts
Bean Hopper Capacity	210 Grams
Ground Coffee Jar Capacity	100 Grams

Grind Settings	34
Motor Speed	500 RPM
Item Weight	1 Kilogram
Package Dimensions	15 x 10 x 10 cm

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Saachi website. Keep your purchase receipt as proof of purchase.
No official product videos were found for this model from the seller.
