

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic NA-149MR2L01 Front Load Washing Machine User Manual](#)

Panasonic NA-149MR2L01

Panasonic NA-149MR2L01 Front Loading Washing Machine User Manual

Model: NA-149MR2L01 | Capacity: 9 kg

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Panasonic NA-149MR2L01 9 kg Fully Automatic Front Loading Washing Machine. Please read these instructions thoroughly before using the appliance and retain them for future reference.



Figure 1.1: Front view of the Panasonic NA-149MR2L01 washing machine with the door closed.

2. SAFETY INFORMATION

To prevent injury to yourself and others, and to avoid damage to the appliance, observe the following safety precautions:

- **Electrical Safety:** Ensure the power supply matches the rating on the appliance. Do not use extension cords. Always unplug the machine before cleaning or maintenance.
- **Water Connection:** Use new hose sets provided with the appliance. Do not reuse old hose sets. Ensure all connections are secure to prevent leaks.
- **Child Safety:** Keep children away from the appliance during operation. Enable the Child Lock feature to prevent unintended use.
- **Installation:** The appliance must be installed on a firm, level surface. Remove all transit bolts before operation.
- **Flammable Materials:** Do not wash items that have been cleaned, washed, soaked, or spotted with

combustible or explosive substances.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage. Keep packaging materials out of reach of children.

3.2 Location Requirements

Place the washing machine on a solid, level floor. Ensure there is adequate space for ventilation and access to water and drain connections. Avoid direct sunlight or extreme temperatures.

3.3 Removing Transit Bolts

Before operating the machine, **all transit bolts must be removed**. These bolts secure the drum during transport. Failure to remove them will cause severe vibration and damage to the machine.



Figure 3.1: Rear view of the washing machine, indicating transit bolt positions and hose connections.

3.4 Water and Drain Connection

Connect the water inlet hose to a cold water tap and the machine's inlet valve. Ensure the drain hose is properly secured to a standpipe or laundry tub, preventing kinks or blockages. The included rat cover should be installed as per instructions to prevent rodent entry.

3.5 Power Connection

Plug the power cord into a grounded electrical outlet. Do not use adapters or extension cords.

4. OPERATING INSTRUCTIONS

4.1 Loading Laundry

Open the door and load items loosely into the drum. Do not overload the machine. For optimal washing, ensure items can move freely.



Figure 4.1: Front view of the washing machine with the door open, ready for loading.

4.2 Adding Detergent and Additives

Add the appropriate amount of detergent to the main wash compartment of the dispenser drawer. Fabric softener or other additives should be placed in their designated compartments.

4.3 Selecting a Wash Program

Turn the program selector dial to choose one of the 15 available wash programs. Refer to Section 5 for details on each program. The display will show the default settings for the selected program.

4.4 Starting a Cycle

Press the 'Start/Pause' button to begin the wash cycle. The door will lock, and the machine will start filling with water.

4.5 Special Features

- **Pause & Add Garment:** Press 'Start/Pause' during the initial stages of a cycle to add forgotten items. Wait for the door to unlock before opening.
- **Child Lock:** Activate this feature to prevent children from changing settings or operating the machine. Refer to the control panel instructions for activation.
- **Auto Restart:** In case of a power outage, the machine will automatically resume the cycle from where it left off once power is restored.

5. WASH PROGRAMS

Your Panasonic NA-149MR2L01 offers 15 wash programs designed for various fabric types and soil levels. Some key programs include:

- **Rapid 45' min wash:** For lightly soiled items requiring a quick wash.
- **Quick 15 min wash:** An ultra-fast cycle for very small loads or refreshing clothes.
- **Bulky Wash:** Optimized for larger items like blankets or duvets.
- **Delicate Wash:** Gentle cycle for fragile garments.
- **Eco Wash:** Energy-efficient program for normal soiled cottons.
- **Dynamic Spin:** A dedicated spin-only cycle to reduce moisture content, aiding faster drying.
- **Built-In Heater Programs:** Utilize the integrated heater for intensive stain removal and sanitization.

6. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and longevity of your washing machine.

6.1 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent residue buildup.

6.2 Cleaning the Drum

Run a maintenance wash (e.g., a hot cycle with no laundry and a drum cleaner) regularly to keep the stainless steel drum clean and odor-free.



Figure 6.1: Close-up of the stainless steel drum, designed for efficient washing.

6.3 Cleaning the Anti Bacterial Door Gasket

Wipe the door gasket after each wash to remove moisture and lint. This helps maintain its anti-bacterial properties and prevents mold growth.

6.4 Cleaning the Filter

Locate and clean the drain pump filter periodically to remove lint, coins, or other small objects that may obstruct drainage.

6.5 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting service, refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, 'Start/Pause' not pressed.	Check power connection, ensure door is latched, press 'Start/Pause'.
Excessive vibration/noise	Transit bolts not removed, machine not level, uneven load.	Remove transit bolts, adjust leveling feet, redistribute laundry.
Water leakage	Loose hose connections, clogged drain filter, excessive detergent.	Tighten hoses, clean drain filter, use recommended detergent amount.
Water not draining	Drain hose kinked or blocked, drain pump filter clogged.	Straighten drain hose, clean drain pump filter.

8. SPECIFICATIONS

Feature	Specification
Model Number	NA-149MR2L01
Capacity	9 Kilograms
Energy Rating	5 Star
Spin Speed	1400 RPM
Wash Programs	15
Drum Material	Stainless Steel
Dimensions (LxWxH)	56.5D x 59.5W x 85H Centimeters
Item Weight	71 Kilograms
Voltage	230 Volts
Special Features	Auto Restart, Child Lock, High Efficiency, Inbuilt Heater

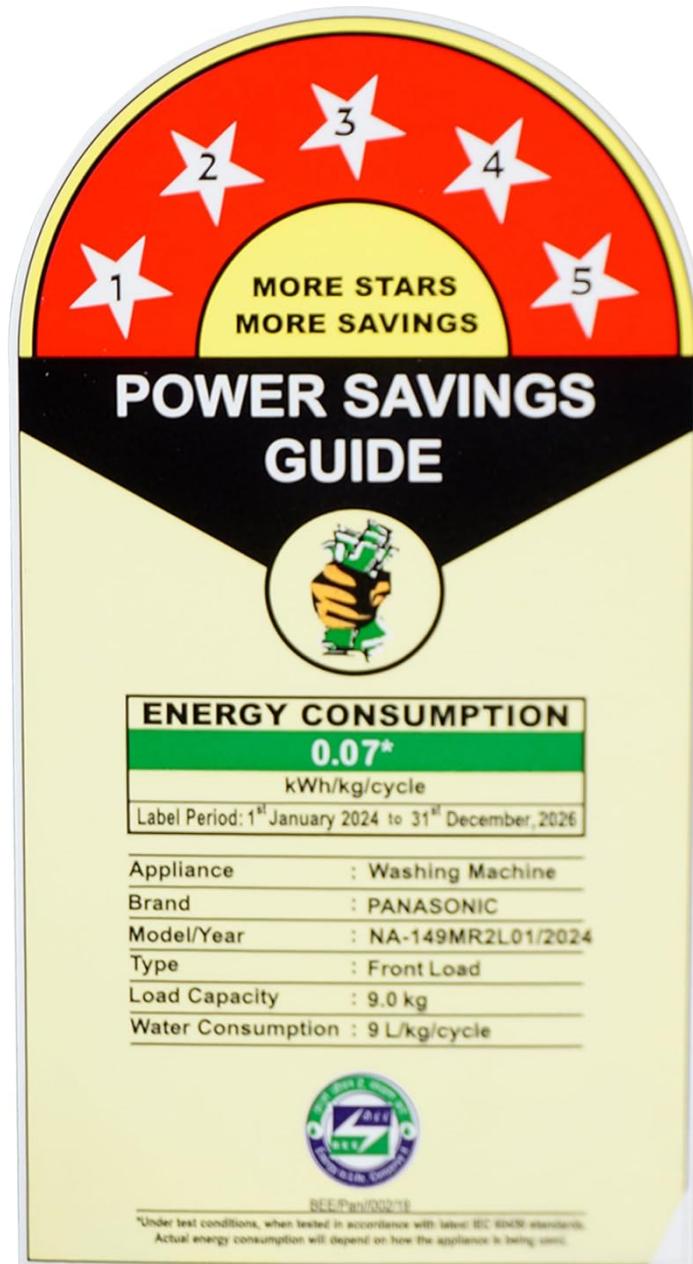


Figure 8.1: Energy Power Savings Guide for the NA-149MR2L01 model.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Your Panasonic NA-149MR2L01 washing machine comes with a **2 Year Comprehensive Warranty** on the appliance and a **10 Year Motor Warranty** from the date of purchase. Please retain your purchase receipt for warranty claims.

9.2 Customer Support

For technical assistance, service requests, or any queries regarding your appliance, please contact Panasonic Life Solutions India Private Limited customer support:

Helpline Numbers: 1800 108 1333 and 1800 103 1333

Manufacturer Address: Panasonic Life Solutions India Private Limited Unit D, Village Bid Dadri, Tehsil and District: Jhajjar-124103, Haryana, India

© 2024 Panasonic Life Solutions India Private Limited. All rights reserved.