

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GAMEON](#) /

› [GAMEON GOPS27180VA Pro Series 27-inch FHD 180Hz Gaming Monitor User Manual](#)

GAMEON GOPS27180VA

GAMEON GOPS27180VA Pro Series 27-inch FHD 180Hz Gaming Monitor User Manual

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your GAMEON GOPS27180VA Pro Series 27-inch FHD 180Hz Gaming Monitor. Please read this manual thoroughly before using the product to ensure optimal performance and safety.

2. SAFETY INFORMATION

- Always disconnect the power cable from the wall outlet before cleaning or if the monitor will not be used for an extended period.
- Do not expose the monitor to rain or moisture to prevent fire or electric shock hazards.
- Do not open the monitor casing. There are no user-serviceable parts inside. Refer all servicing to qualified service personnel.
- Place the monitor on a stable, flat surface to prevent it from falling.
- Ensure proper ventilation around the monitor. Do not block ventilation openings.
- Use only the power adapter and cables supplied with the monitor.

3. PACKAGE CONTENTS

Verify that all items are present in your product package. If any items are missing or damaged, contact your retailer.

- GAMEON GOPS27180VA 27-inch Gaming Monitor
- Monitor Stand (Base and Neck)
- Power Adapter and Power Cable
- HDMI Cable
- User Manual
- Screws for Stand Assembly



Image: Retail packaging for the GAMEON GOPS27180VA monitor, highlighting key specifications and quick installation features.

4. SETUP

4.1 Assembling the Stand

1. Carefully remove the monitor and stand components from the packaging.
2. Attach the stand neck to the monitor panel using the provided screws.
3. Secure the stand base to the stand neck. Ensure all connections are firm.

4.2 Connecting Cables

- **Power Connection:** Connect the power cable to the monitor's power input, then plug the other end into a power outlet.
- **Video Connection:** Connect one end of the HDMI cable to the HDMI port on your computer's graphics card and the other end to the HDMI port on the monitor.

0.5ms Response time with 180HZ resolution, low input lag reduces the delay between the controller input and the action on the screen. Bringing you a brand new gaming experience!



Image: A user engaged in gaming on the GAMEON GOPS27180VA monitor, demonstrating its visual performance and connectivity in a typical setup.

4.3 Initial Power-On

Press the power button located on the monitor. The power indicator light will illuminate, and the display will turn on. If no image appears, ensure all cables are securely connected and your computer is powered on.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the power button to turn the monitor on or off. The power indicator light will show the monitor's status.

5.2 On-Screen Display (OSD) Menu

Use the control buttons (usually located on the back or bottom of the monitor) to navigate the OSD menu. The OSD allows you to adjust various display settings.

5.3 Adjusting Display Settings

- **Brightness/Contrast:** Adjust these settings to optimize image visibility.
- **Color Settings:** Modify color temperature, hue, and saturation to suit your preference.
- **Input Source:** Manually select the input source (e.g., HDMI) if the monitor does not auto-detect.
- **Refresh Rate:** Ensure your computer's display settings are configured to utilize the monitor's 180Hz refresh rate for smooth motion.
- **Response Time:** The monitor features a 0.5ms response time, which can be optimized through OSD settings for competitive gaming.

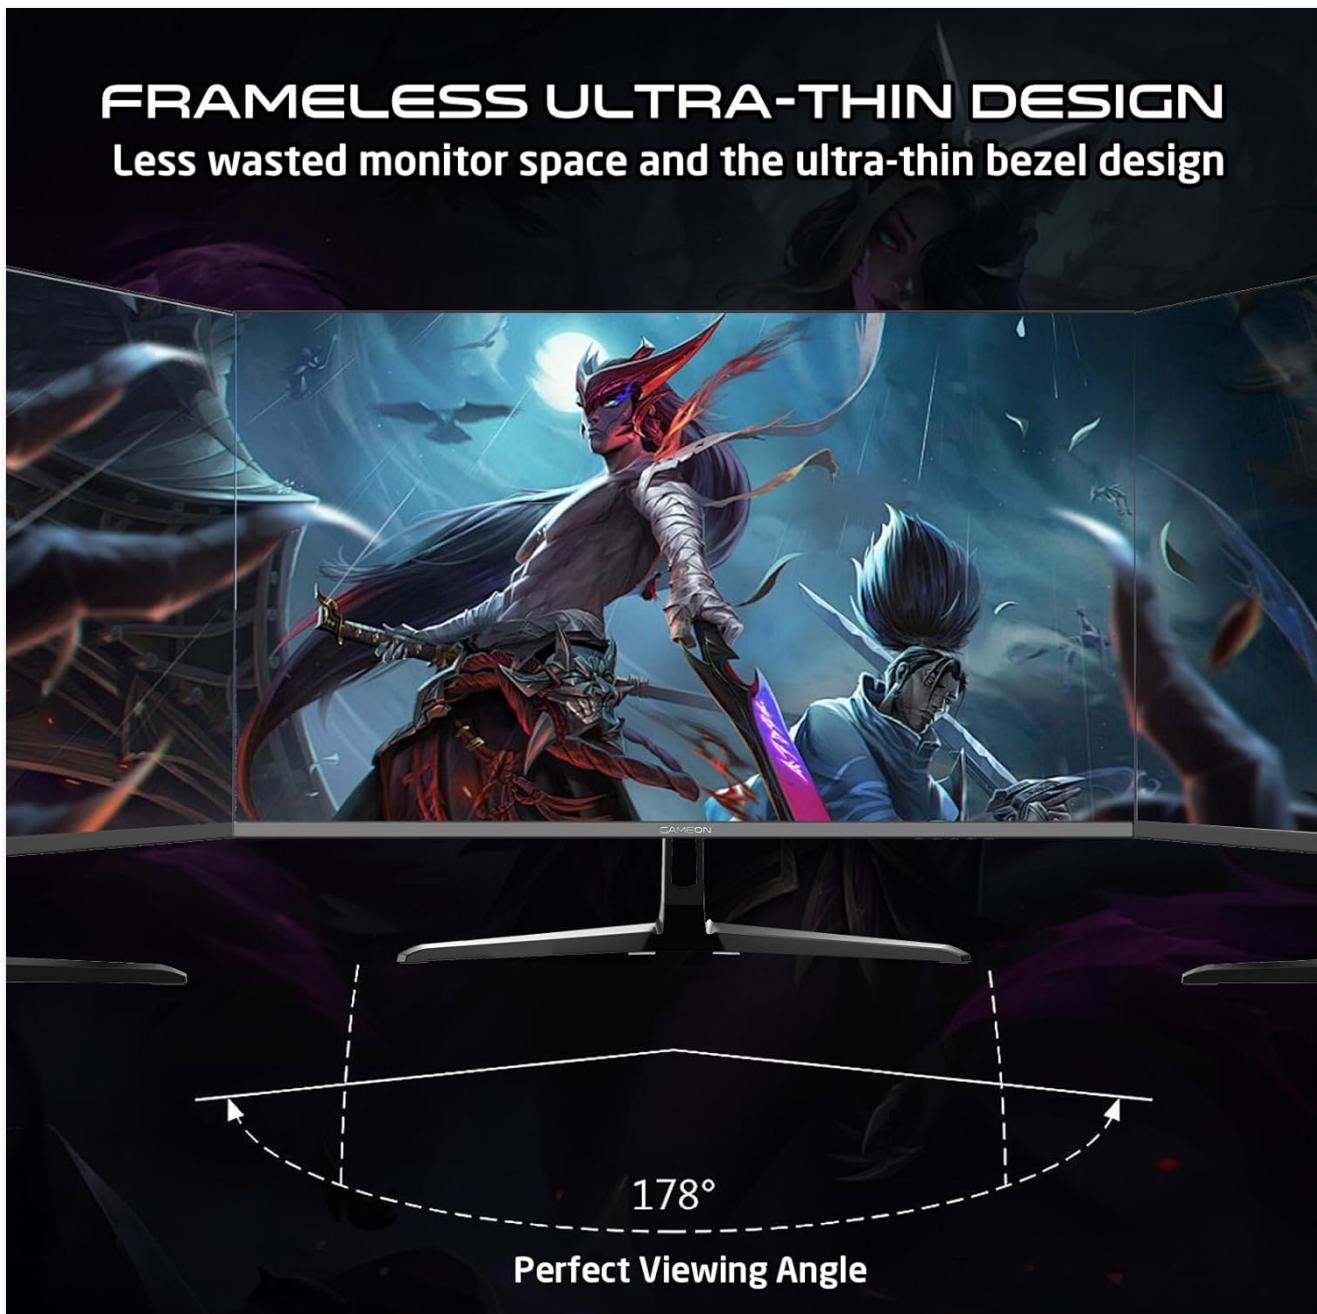


Image: The GAMEON GOPS27180VA monitor highlighting its frameless, ultra-thin design and wide 178-degree viewing angle, enhancing immersive gaming experiences.

6. MAINTENANCE

6.1 Cleaning the Monitor

- Always unplug the monitor before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a non-abrasive screen cleaner.
- Do not spray cleaner directly onto the screen. Apply it to the cloth first.
- Avoid using harsh chemicals or abrasive materials, as they can damage the screen surface.

6.2 General Care

- Keep the monitor away from direct sunlight and heat sources.
- Avoid placing heavy objects on the monitor or its cables.
- Do not block the ventilation slots on the monitor.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No image on screen	Power cable disconnected, video cable loose, incorrect input source.	Check power and video cable connections. Select correct input source via OSD. Ensure computer is on.
Image flickering	Loose video cable, incorrect refresh rate setting, interference.	Secure video cable. Adjust refresh rate in computer display settings. Move away from other electronic devices.
Colors appear incorrect	Color settings misconfigured, faulty video cable.	Adjust color settings in OSD. Try a different video cable.
Monitor not turning on	Power cable not connected, power outlet issue.	Ensure power cable is firmly connected to monitor and outlet. Test outlet with another device.

8. SPECIFICATIONS

Feature	Specification
Brand	GAMEON
Model Number	GOPS27180VA
Display Screen Size	27 inches
Panel Type	VA
Resolution	1920 x 1080 (FHD)
Refresh Rate	180 Hz
Response Time	0.5 ms
Aspect Ratio	16:9
Screen Surface Description	Matte

Feature	Specification
Connectivity Technology	HDMI (1 port)
Product Dimensions	68 x 45 x 10 cm
Item Weight	4.7 Kilograms
Special Feature	High Refresh Rate (180Hz) and Fast Response Time (0.5ms) for Gaming

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official GAMEON website. Keep your purchase receipt as proof of purchase for warranty claims.