

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Finlux](#) /

› [Finlux MH24F 32 inch HD Ready Smart Fire TV User Manual](#)

Finlux 32MH24F

Finlux MH24F 32 inch HD Ready Smart Fire TV User Manual

Model: 32MH24F | Brand: Finlux

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Finlux MH24F 32 inch HD Ready Smart Fire TV. Please read this manual thoroughly before using your television and retain it for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury to persons. This includes, but is not limited to:

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings.
- Ensure the power cord is not walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel.

3. WHAT'S IN THE Box

Verify that all components are present:

- Finlux MH24F 32 inch HD Ready Smart Fire TV
- Remote Control
- Power Cable
- TV Stand (2 pieces)
- Screws for TV Stand
- User Guide (this document)

4. SETUP

4.1 Unpacking

Carefully remove the TV from its packaging. It is recommended to keep the original packaging for future transport or servicing needs.

4.2 Attaching the Stand

Place the TV screen-down on a soft, flat surface to prevent scratches. Align the stand pieces with the corresponding slots on the bottom of the TV and secure them with the provided screws.



Image: Front view of the Finlux MH24F 32 inch Smart Fire TV with its stand attached, showcasing the Fire TV interface on screen.

4.3 Connecting Peripherals

Connect your external devices to the TV using the available ports. Common connections include HDMI for media players, game consoles, and set-top boxes; USB for external storage; and an antenna for Freeview channels.

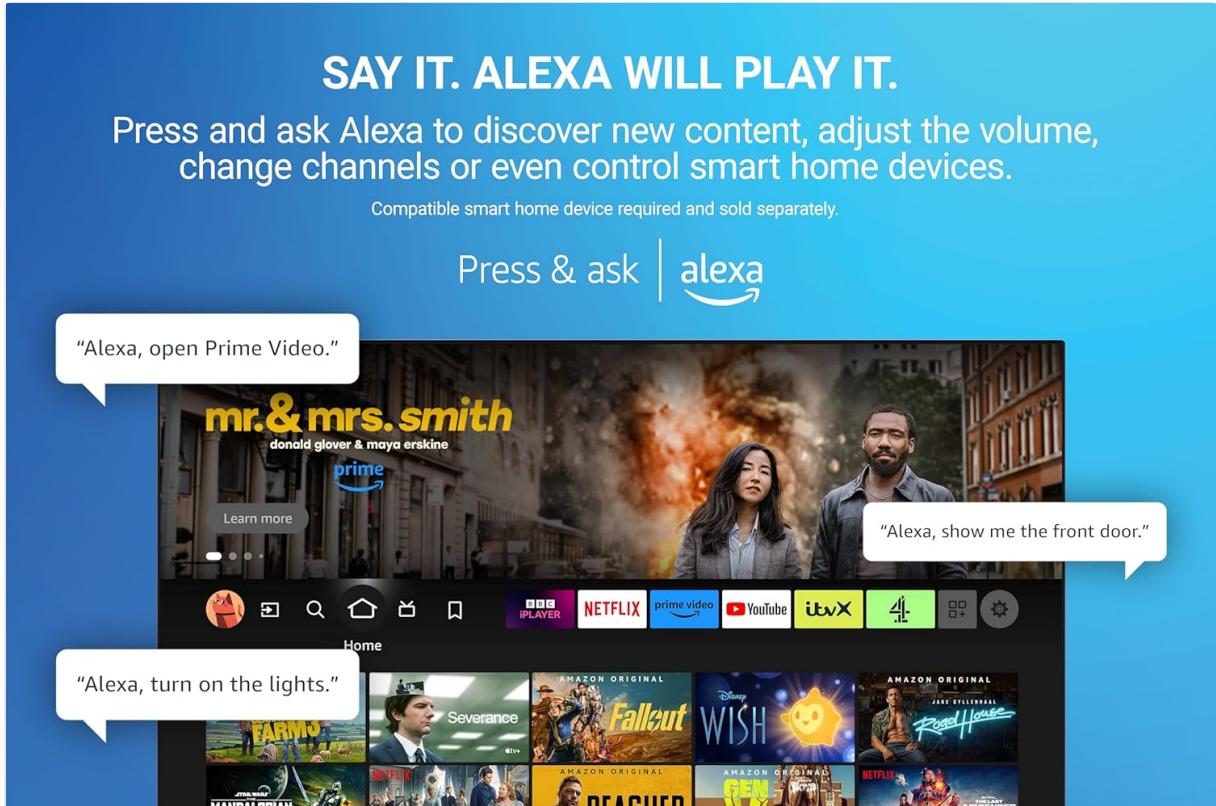


Image: A detailed view of the rear input ports on the Finlux MH24F television, highlighting HDMI, USB, and antenna connections for external devices.



Image: A close-up of the side input ports on the Finlux MH24F television, providing additional HDMI and USB connectivity options.

4.4 Initial Power On & First-Time Setup

Plug the power cable into the TV and a wall outlet. Press the power button on the remote control. Follow the on-screen instructions to complete the initial setup, which includes connecting to Wi-Fi, signing into your Amazon account for Fire TV, and scanning for Freeview channels.

5. OPERATING THE TV

5.1 Remote Control Overview

The remote control allows you to navigate the TV's features. Familiarize yourself with the power button, volume controls, channel selection, and dedicated app buttons.

5.2 Smart TV Features (Fire TV)

Your Finlux TV comes with Fire TV built-in, providing access to a wide range of streaming services and apps. The home screen displays personalized recommendations and quick access to your favorite content.



Image: A screenshot of the Fire TV interface on the Finlux television, illustrating the variety of streaming application icons available, including Netflix, Prime Video, YouTube, and Disney+.

5.3 Picture Settings

Adjust picture settings to optimize your viewing experience. Navigate to the Picture menu to select modes like Standard, Cinema, Dynamic, or adjust individual settings such as brightness, contrast, and color saturation. The TV supports HDR10 for enhanced contrast and a broader color spectrum.

5.4 Sound Settings

Access the Sound menu to customize audio output. Features include Dolby Audio for clear, rich sound and DTS Virtual:X with DTS-HD technology for a cinematic surround sound experience.

5.5 Voice Control with Alexa

Use the built-in Alexa voice assistant by pressing the microphone button on your remote. You can search for content, adjust volume, change channels, and even control compatible smart home devices with voice commands.



Image: A screenshot of the Fire TV interface demonstrating Alexa voice commands, with examples such as "Alexa, open Prime Video" and "Alexa, turn on the lights" appearing on screen.

5.6 Freeview Play

Access Freeview Play to enjoy a wide range of live and catch-up TV services from major UK broadcasters without a subscription.

6. MAINTENANCE

6.1 Cleaning Your TV

Unplug the TV before cleaning. Use a soft, dry cloth to wipe the screen and cabinet. Do not use liquid cleaners or aerosol sprays directly on the TV.

6.2 Software Updates

Your Fire TV will automatically check for and install software updates when connected to the internet. Ensure your TV is connected to Wi-Fi for optimal performance and access to the latest features.

7. TROUBLESHOOTING

If you encounter issues, try the following common solutions:

- No Power:** Check the power cable connection and wall outlet.
- No Picture/Sound:** Verify input source, cable connections, and volume settings.
- Remote Not Working:** Replace batteries, ensure no obstructions between remote and TV.
- Wi-Fi Connection Issues:** Restart your router and TV. Re-enter Wi-Fi password.
- Slow Performance:** Ensure TV software is up to date. Close unused apps.

8. SPECIFICATIONS

Feature	Specification
Model Number	32MH24F
Screen Size	32 inches
Resolution	HD Ready
Display Technology	LCD
Refresh Rate	60 Hz
Special Features	HDR10, Dolby Audio, DTS Virtual:X, Smart TV with Fire TV
Connectivity	Wi-Fi, HDMI, USB
Product Dimensions	79D x 12W x 52H centimetres
Weight	5.06 kg

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Finlux website. Keep your proof of purchase for warranty claims.