

[Manuals.plus](#) /

> [Corberó](#) /

> Corberó CLVM605W Dishwasher User Manual - 12 Place Settings, 6 Programs, LED Indicators

Corberó CLVM605W

Corberó CLVM605W Dishwasher User Manual

Model: CLVM605W

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Corberó CLVM605W Dishwasher. Please read it thoroughly before installation, first use, and maintenance. Keep this manual for future reference.

The Corberó CLVM605W is designed to provide efficient dishwashing with a capacity for 12 place settings, offering 6 wash programs and 4 temperature settings. Key features include a delayed start function, half-load option, and LED indicators for ease of use.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged. Contact authorized service personnel.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not open the door during operation, especially during the hot wash or drying cycle.
- Sharp items should be loaded with points down to prevent injury.

3. INSTALLATION

Proper installation is crucial for the performance and safety of your dishwasher. It is recommended that installation be performed by a qualified technician.

3.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage during transit. Report any damage to your retailer immediately.

3.2 Positioning

Place the dishwasher on a flat, stable surface. Ensure there is adequate space for opening the door and for water and electrical connections. The dimensions of the unit are approximately 85 cm (height) x 60 cm (width) x 61 cm (depth).



Image 1: Corberó CLVM605W Dishwasher in a kitchen setting. This image illustrates the typical placement of the dishwasher, showing its white exterior and control panel integrated into a modern kitchen environment.

3.3 Water Connection

- Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa.
- Connect the drain hose to a suitable drain pipe, ensuring it is securely fastened and free from kinks.

3.4 Electrical Connection

- Ensure the power supply voltage (220V) matches the rating plate on the dishwasher.
- The appliance must be properly grounded. Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

4.1 Loading the Dishwasher

For optimal cleaning results, load dishes correctly. Scrape off large food particles before loading. Avoid overcrowding.



- Inicio diferido
- Cesta Superior Regulable
- 49 Db

Image 2: Interior view of the dishwasher showing loaded dishes, including plates, cutlery, and a pot. This image highlights the adjustable upper basket and the cutlery basket, demonstrating how items can be arranged for effective washing.

- Place larger, heavily soiled items in the lower basket.
- Smaller items, glasses, and cups go in the upper basket. The upper basket is adjustable.
- Cutlery should be placed in the cutlery basket with handles down, except for knives and other sharp objects which should be placed points down.

- 12 cubiertos
- 6 programas
- Programa ECO

Corbero



Image 3: A hand placing a pan into the lower basket of the dishwasher. This demonstrates the capacity and flexibility for loading larger items like pots and pans.

4.2 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Add rinse aid to its dispenser for improved drying and shine.

- 12 cubiertos
- 6 programas
- Programa ECO

Corbero



Image 4: Close-up of the detergent and rinse aid dispenser inside the dishwasher door. This image shows the compartments for adding washing agents.

4.3 Selecting a Program

Your dishwasher offers 6 wash programs and 4 temperature settings. Refer to the control panel for program selection.

Corberó

- Media carga
- Cesta regulable



Image 5: A hand interacting with the control panel of the dishwasher. This close-up shows the LED indicators and push-button controls for selecting programs and functions like delayed start and half load.

Available Programs:

- **ECO Program:** An energy-efficient program suitable for normally soiled daily dishes.
- *Other programs (refer to appliance panel for specific icons and descriptions).*

4.4 Special Functions

- **Delayed Start:** Allows you to postpone the start of a wash cycle by 2, 4, 6, or 8 hours. Press the corresponding button to select the desired delay.

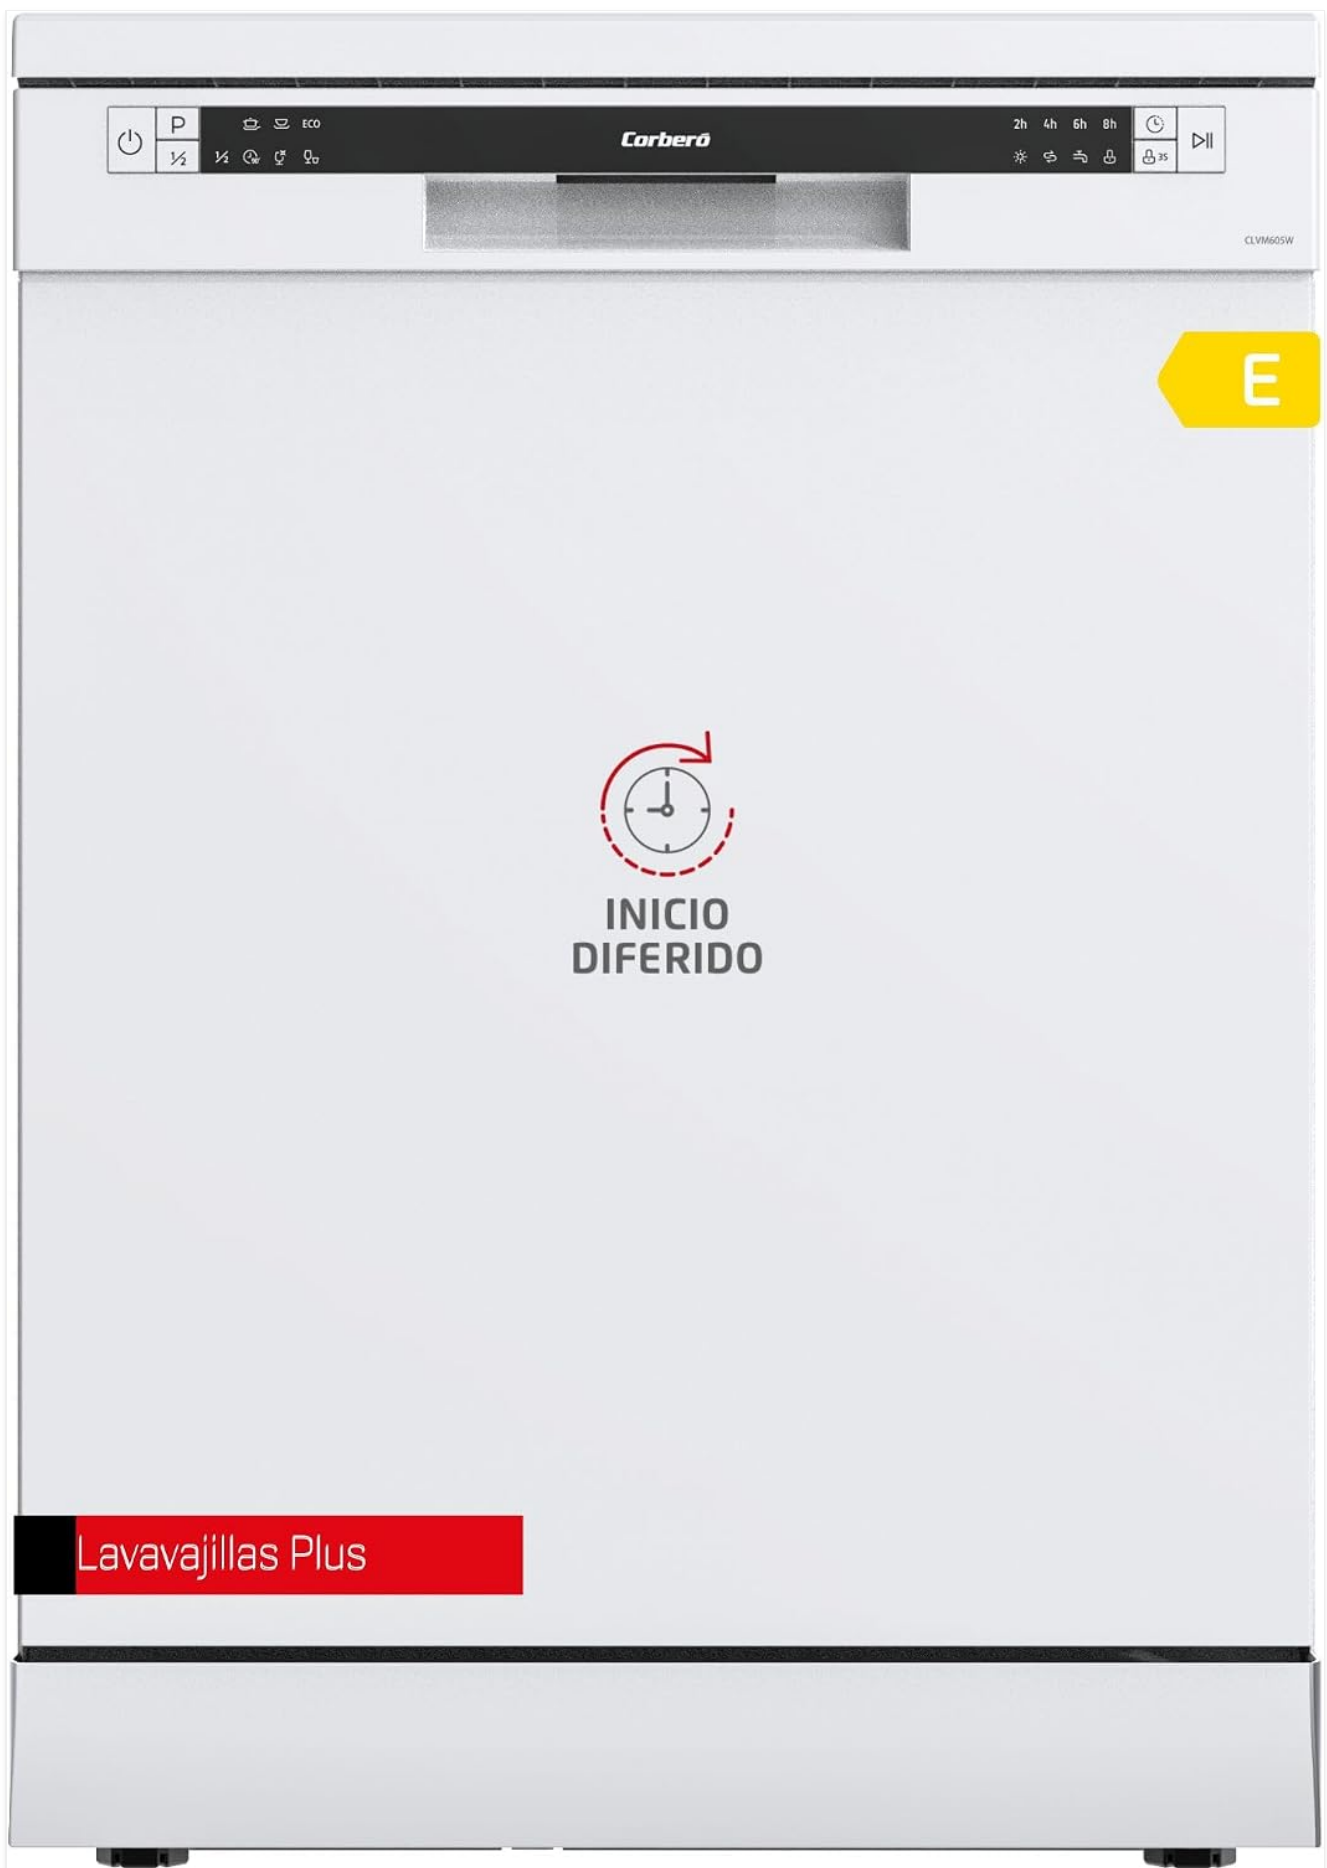


Image 6: Front view of the Corberó CLVM605W Dishwasher, with a graphic indicating the "Inicio Diferido" (Delayed Start) function. This image shows the overall design and the location of the control panel.

- **Half Load:** Use this function when the dishwasher is not fully loaded to save water and energy.
- **Pause Function:** Allows you to temporarily stop a cycle. Press the Start/Pause button.

4.5 Starting a Wash Cycle

Close the dishwasher door firmly. Press the Power button, then select your desired program and any special functions. Press the Start/Pause button to begin the cycle. LED indicators will show the program status.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your dishwasher.

5.1 Cleaning the Filters

The filter system prevents larger food particles from reaching the pump. Clean the filters regularly (weekly or bi-weekly) to prevent blockages and ensure efficient washing.

1. Turn off and unplug the dishwasher.
2. Remove the lower basket.
3. Twist and lift out the coarse filter, then remove the fine filter.
4. Rinse all filter components under running water to remove food residues.
5. Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked.

5.2 Cleaning the Spray Arms

Check the spray arm nozzles for blockages. If necessary, remove the spray arms and clean the holes with a thin wire.

5.3 Exterior and Interior Cleaning

- Wipe the exterior with a damp cloth and mild detergent.
- Clean the interior with a dishwasher cleaner or a mixture of vinegar and baking soda periodically to remove grease and odors.

6. TROUBLESHOOTING

Before contacting service, consult the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; door not closed properly; fuse blown.	Check power connection; ensure door is latched; check household fuse/circuit breaker.
Dishes not clean	Improper loading; insufficient detergent; clogged spray arms; dirty filters.	Reload dishes correctly; add more detergent; clean spray arms; clean filters.
Water not draining	Clogged drain hose; dirty filters; drain pump malfunction.	Check and clear drain hose; clean filters; contact service if pump is faulty.
Excessive noise	Dishes rattling; foreign object in pump; improper installation.	Rearrange dishes; check for foreign objects; ensure proper leveling.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model	CLVM605W
Brand	Corberó
Capacity	12 Place Settings
Programs	6
Temperatures	4
Noise Level	49 dB
Water Consumption (per cycle)	10 Liters
Dimensions (H x W x D)	85 cm x 60 cm x 61 cm
Weight	40 kg
Voltage	220V
Energy Efficiency Class	E

8. WARRANTY AND SUPPORT

Your Corberó CLVM605W Dishwasher comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, spare parts, or service requests, please contact Corberó customer support. Contact details can typically be found on the manufacturer's website or in your purchase documentation.

When contacting support, please have your model number (CLVM605W) and serial number ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DH8LSJ4N>

More documents and user manuals: <https://manuals.plus/>