

[Manuals.plus](#) /

> [AENO](#) /

> AENO Main Brush for Robot Vacuum Cleaner RC4S, RC7S, RC8S Instruction Manual

AENO ARCMB4

AENO Main Brush for Robot Vacuum Cleaner

Model: ARCMB4

Brand: AENO

INTRODUCTION

This document provides essential information regarding the AENO ARCMB4 main brush, a replacement component designed for specific AENO robot vacuum cleaner models. It covers compatibility, installation guidelines, maintenance procedures, and product specifications to ensure optimal performance and longevity of your robot vacuum cleaner.

COMPATIBILITY

The AENO ARCMB4 main brush is specifically designed for use with the following AENO robot vacuum cleaner models:

- AENO RC4S
- AENO RC7S
- AENO RC8S

Using this brush with incompatible models may result in reduced cleaning efficiency or damage to the device.

PACKAGE CONTENTS

Upon opening the package, verify that all components are present and undamaged:

- 1 x AENO ARCMB4 Main Brush

INSTALLATION INSTRUCTIONS

Follow these steps to properly install the main brush into your AENO robot vacuum cleaner:

1. **Power Off:** Ensure your robot vacuum cleaner is powered off and disconnected from its charging base before beginning installation.
2. **Access Brush Compartment:** Turn the robot vacuum cleaner upside down. Locate the main brush compartment cover, typically secured by latches or screws.

3. **Remove Old Brush:** Open the compartment cover. Carefully lift out the old main brush. Note its orientation for correct installation of the new brush.
4. **Clean Compartment:** Remove any accumulated dust, hair, or debris from the brush compartment and the brush ends.
5. **Install New Brush:** Insert the new AENO ARCMB4 main brush into the compartment, ensuring the ends align correctly with the designated slots. The brush should fit snugly.
6. **Secure Cover:** Close the main brush compartment cover and ensure it is securely latched or screwed into place.
7. **Power On:** Turn on your robot vacuum cleaner.

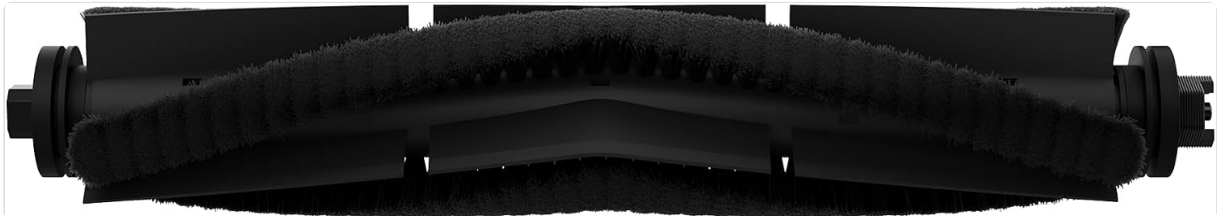


Image: The AENO ARCMB4 main brush, showing its bristles and end caps. This brush is designed for effective debris collection in compatible robot vacuum models.

OPERATING GUIDELINES

Once installed, the main brush operates automatically with your robot vacuum cleaner. For optimal cleaning performance, ensure the brush is free from obstructions. The brush's design, featuring high-quality polypropylene (PP), polybutylene terephthalate (PBT), and stainless steel components, contributes to efficient dirt and debris collection.

MAINTENANCE

Regular maintenance of the main brush is crucial for maintaining your robot vacuum cleaner's cleaning efficiency and extending the brush's lifespan. Perform these steps periodically:

1. **Frequency:** Inspect the main brush weekly, or more frequently if you have pets or long hair in your home.
2. **Removal:** Power off the robot vacuum and remove the main brush as described in the installation steps.
3. **Clean Hair and Debris:** Use a cleaning tool (often provided with the vacuum) or scissors to carefully cut and remove any hair, string, or fibers tangled around the brush bristles and ends.
4. **Wipe Down:** Use a dry cloth to wipe down the brush and its compartment, removing any dust or fine particles. Avoid using water directly on the brush unless specified by the vacuum cleaner's manual.
5. **Reinstall:** Reinstall the clean main brush, ensuring it is properly seated and the compartment cover is secured.

Note: Replace the main brush every 6-12 months, or sooner if visible wear and tear (e.g., bent or missing bristles) affects cleaning performance.

TROUBLESHOOTING

If you encounter issues related to the main brush, consider the following:

- **Reduced Cleaning Performance:**
 - Check if the brush is tangled with hair or debris. Clean it thoroughly.

- Ensure the brush is installed correctly and spinning freely.
- If the bristles are worn, replace the brush.
- **Unusual Noises:**
 - Remove the brush and inspect for any foreign objects lodged in the brush or compartment.
 - Ensure the brush ends are properly seated in their bearings.
- **Brush Not Spinning:**
 - Verify the brush is installed correctly and the compartment cover is closed.
 - Check for any blockages preventing rotation.
 - Consult your robot vacuum cleaner's main manual for specific error codes or brush motor issues.

SPECIFICATIONS

Model Number	ARCMB4
Brand	AENO
Compatible Models	AENO RC4S, RC7S, RC8S
Materials	Polypropylene (PP), Polybutylene Terephthalate (PBT), Stainless Steel
Color	Black
Product Dimensions (L x W x H)	17.9 x 3.9 x 4.9 cm
Item Weight	60 g

WARRANTY AND SUPPORT

For warranty information or technical support regarding your AENO ARCMB4 main brush, please refer to the documentation provided with your AENO robot vacuum cleaner or visit the official AENO website. Specific warranty terms may vary by region and retailer.