

[Manuals.plus](#) /

> [EconoHome](#) /

> EconoHome Hanging Egg Chair with Stand Instruction Manual

EconoHome Hanging Egg Chair with Stand

EconoHome Hanging Egg Chair with Stand Instruction Manual

Model: Hanging Egg Chair with Stand

IMPORTANT SAFETY INFORMATION

WARNING: Maximum weight capacity 350 lbs. Securely anchor hammock to stable supports. Follow assembly instructions for safe use.

Always ensure the chair is placed on a stable, level surface. Do not exceed the maximum weight capacity. Regularly inspect all components for wear or damage. Keep children and pets away from the chair during assembly and ensure proper supervision during use.

PRODUCT OVERVIEW

The EconoHome Hanging Egg Chair with Stand is designed for comfortable relaxation in various indoor and outdoor settings. It features a durable frame, plush cushions, and a stable stand.



Image: The EconoHome Hanging Egg Chair with Stand in light green, featuring a woven egg-shaped basket, plush

cushions, and a sturdy metal stand.

SETUP INSTRUCTIONS

Follow these steps for proper assembly of your EconoHome Hanging Egg Chair with Stand:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in the parts list are present.
2. **Assemble the Base:** Connect the base components to form a stable X-stand. Ensure all connections are secure.
3. **Attach the Upright Stand:** Secure the curved upright stand to the assembled base.
4. **Hang the Egg Chair:** Attach the egg-shaped chair basket to the hook on the upright stand using the provided chain and spring. Adjust the chain length to your desired height.
5. **Install Cushions:** Place the seat cushion and headrest inside the egg chair. Secure them using any attached ties or straps to prevent shifting.
6. **Final Check:** Before use, gently test the chair's stability and ensure all connections are tight.

Your browser does not support the video tag.

Video: A 3D animation demonstrating the assembly process of the EconoHome Hanging Egg Chair with Stand, showing how to connect the base, attach the stand, and hang the chair.



Image: Close-up view of the chair's components, highlighting the sturdy hanging chain, weather-resistant rattan weaving, and the robust aluminum-steel frame.

OPERATING INSTRUCTIONS

To use your EconoHome Hanging Egg Chair:

- **Seating:** Gently sit into the chair, ensuring your weight is centered.
- **Swinging Motion:** The chair is designed for a gentle swinging motion. Avoid excessive force or sudden movements.
- **Adjusting Height:** The suspension chain allows for height adjustment. Ensure the chair is empty and stable before making any adjustments.
- **Placement:** Suitable for indoor and outdoor use. For outdoor use, consider placing it in a shaded area to prolong the life of the cushions and frame.

Your browser does not support the video tag.

Video: A demonstration of the EconoHome Hanging Egg Chair in use, showcasing its gentle swing and comfortable seating.



Image: Diagram illustrating the dimensions of the hanging egg chair and its stand, emphasizing its roomy yet compact design.

MAINTENANCE

Proper maintenance ensures the longevity and appearance of your chair:

- **Cushion Care:** The seat cushion and headrest are made from 100% polyester and soft cotton. They are removable for easy washing. Follow care instructions on the cushion labels for best results.
- **Frame Cleaning:** Wipe the aluminum and steel frame with a damp cloth and mild soap. Avoid harsh chemicals that may damage the finish.
- **Rattan Care:** The weather-resistant rattan can be cleaned with a soft brush and water.
- **Storage:** For prolonged periods of non-use or during harsh weather, store the chair indoors or cover it with a protective cover to prevent wear and tear.
- **Inspection:** Periodically check all bolts, nuts, and connections to ensure they remain tight and secure.

LUXURIOUS SOFTNESS

Cozy, Machine-Washable
Cushion



Cotton
Filling

Waterproof
Polyester

Image: Detail of the cloud-soft cushions, highlighting the cotton filling and waterproof polyester material for comfort and easy maintenance.

TROUBLESHOOTING

Common issues and their solutions:

- **Chair feels unstable:**
 - Ensure the base is fully extended and placed on a flat, level surface.
 - Check all assembly bolts and nuts for tightness.
- **Squeaking noise during swinging:**
 - Apply a small amount of lubricant to the spring and chain connections.
 - Inspect for any loose parts that might be rubbing.
- **Cushions sliding:**
 - Ensure all cushion ties or straps are securely fastened to the chair frame.

SPECIFICATIONS

Feature	Detail
Brand	EconoHome
Model	Hanging Egg Chair with Stand
Product Dimensions	37.4"L x 37.4"W x 78"H (approximate total height)
Item Weight	48 pounds
Maximum Weight Capacity	350 lbs
Materials	Aluminum, Steel (frame), Polyester, Cotton (cushions)
Usage	Indoor/Outdoor

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your EconoHome Hanging Egg Chair with Stand, please contact EconoHome customer service. While specific warranty details are not provided in this manual, please refer to your purchase documentation or the manufacturer's website for warranty information.

Manufacturer: EconoHome

For assistance, visit the [EconoHome Store on Amazon](#).