

## Conair 890

# Conair Infiniti Pro Performa Series Hair Dryer Instruction Manual

Model: 890

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** Always unplug the hair dryer immediately after use.
- **WARNING:** Keep the hair dryer away from water. Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- Keep the power plug and cord away from heated surfaces.
- Always turn off the hair dryer before placing it down.
- Keep out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been dropped or damaged in any manner.
- Do not use an extension cord with this appliance.

This appliance is intended for household use only. Use only as directed in this manual. Do not use attachments not recommended by the manufacturer.

## PRODUCT OVERVIEW

---

The Conair Infiniti Pro Performa Series Hair Dryer is designed for professional-level performance, offering fast drying and reduced frizz. It features advanced ionic and ceramic technologies to protect hair from heat damage and enhance shine.



Image: Conair Infiniti Pro Performa Series Hair Dryer shown with its three included attachments: diffuser, concentrator, and thermal pik.

## SETUP AND ATTACHMENTS

---

Your Infiniti Pro hair dryer comes with three specialized attachments to customize your styling experience:

- **Concentrator:** Provides concentrated airflow for precise styling and smooth, sleek results.
- **Diffuser:** Delivers gentle, even airflow to enhance natural curls and waves, reducing frizz.
- **Thermal Pik:** Features a dual-row comb design to detangle hair and add lift and volume during drying.

### Attaching/Detaching Accessories:

1. Ensure the hair dryer is turned off and unplugged before attaching or detaching accessories.
2. Align the desired attachment with the nozzle of the hair dryer.
3. Gently push the attachment onto the nozzle until it clicks securely into place. Some force may be required to ensure a snug fit.
4. To remove, firmly grasp the attachment and pull it straight off the nozzle.

Designed to  
enhance your  
styling experience

3

### ATTACHMENTS

customize  
airflow &  
style



**CONCENTRATOR**  
concentrated airflow  
for precision styling



**THERMAL PIK**  
dual-row comb  
detangles & adds lift



**DIFFUSER**  
gentle airflow for  
frizz-free curls  
& waves

Image: The three styling attachments (concentrator, diffuser, thermal pik) provided with the hair dryer.

## OPERATING INSTRUCTIONS

### Power and Settings:

The hair dryer features intuitive controls for heat and speed, allowing you to customize your drying experience.

- **Speed Settings (High/Low/Off):** Use the top switch to select between High (fast airflow), Low (gentle airflow), or Off.
- **Heat Settings (Hot/Warm/Cool):** Use the middle switch to choose your desired temperature: Hot for quick drying, Warm for general drying, or Cool for setting styles.
- **Cold Shot Button:** Press and hold the blue button on the handle to instantly deliver a burst of cool air. This helps to set your style and add shine.



Image: Detailed view of the hair dryer's control panel, highlighting the speed, heat, and cold shot button.

## General Drying Tips:

1. Towel-dry hair to remove excess moisture before blow-drying.
2. For faster drying, use the High speed and Hot heat setting.
3. For styling, use the Low speed and Warm heat setting.
4. Finish with the Cold Shot button to lock in your style and add shine.

## MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your hair dryer.

### Cleaning the Rear Filter:

1. Ensure the hair dryer is unplugged and completely cool.
2. Grasp the rear filter cover and twist it counter-clockwise to unlock.
3. Remove the filter cover and gently clean any accumulated lint or dust with a soft brush or vacuum cleaner.
4. Replace the filter cover by aligning it and twisting clockwise until it locks securely.



Image: The rear of the hair dryer, illustrating the removable filter for cleaning.

## General Care:

- Do not wrap the power cord around the hair dryer. This can damage the cord.
- Store the hair dryer in a safe, dry location when not in use. The included drawstring pouch is ideal for this.
- Avoid dropping or subjecting the appliance to strong impacts.

## TROUBLESHOOTING

---

If your hair dryer is not operating as expected, please refer to the following common issues and solutions:

- **Dryer does not turn on:**
  - Check if the power cord is securely plugged into a working electrical outlet.
  - Verify that the ON/OFF switch is in the "ON" position.
  - Ensure the test/reset button on the plug has been pressed if it tripped.
- **Airflow is weak or inconsistent:**
  - The rear filter may be clogged with lint or dust. Refer to the "Maintenance" section for cleaning

instructions.

- Ensure no objects are obstructing the air intake or outlet.

- **Attachments are difficult to put on/take off:**

- Ensure the attachment is correctly aligned with the dryer nozzle.
- Apply firm, even pressure when attaching. Some attachments are designed for a tight fit to prevent accidental detachment during use.

If the problem persists after trying these steps, please contact customer support.

## SPECIFICATIONS

---

<b>Model Name:</b>	Performa Series Hair Dryer
<b>Item Model Number:</b>	890
<b>Brand:</b>	Conair
<b>Wattage:</b>	1875 watts
<b>Power Source:</b>	Corded Electric
<b>Hair Type:</b>	All
<b>Number of Speeds:</b>	2
<b>Number of Heat Settings:</b>	3
<b>Special Features:</b>	Ionic Technology, Ceramic Technology
<b>Included Components:</b>	Concentrator, Diffuser, Thermal Pik, Drawstring Storage Bag
<b>Item Weight:</b>	1.5 Pounds
<b>Product Dimensions:</b>	8 x 3.6 x 11 inches

## WARRANTY AND SUPPORT

---

This Conair Infiniti Pro Hair Dryer is covered by a **Limited 2 Year Warranty** from the date of purchase. For warranty claims or technical support, please refer to the contact information provided in your product packaging or visit the official Conair website.

Please retain your proof of purchase for any warranty claims.