

[Manuals.plus](#) /

› [OMOTON](#) /

› OMOTON Large Print Wired Keyboard User Manual

OMOTON B0DHC2Z62F

OMOTON Large Print Wired Keyboard User Manual

Model: B0DHC2Z62F

INTRODUCTION

Thank you for choosing the OMOTON Large Print Wired Keyboard. This keyboard is designed to provide an enhanced typing experience with its oversized, backlit keys, making it ideal for users with visual impairments, students, office workers, and the elderly. Its dual interface ensures broad compatibility with various devices. This manual provides detailed instructions on setting up, operating, maintaining, and troubleshooting your new keyboard.



Figure 1: OMOTON Large Print Wired Keyboard overview.

KEY FEATURES

- **Large Print Keys:** Features oversized font keys, approximately 4 times larger than standard keyboards, to significantly improve visibility and reduce typing errors, especially beneficial for the visually impaired.
- **Dual Interface Connectivity:** Equipped with both Type-C and USB-A interfaces, allowing seamless connection to a wide range of devices including Windows PCs, laptops, tablets, and smartphones.



Figure 2: The keyboard's dual Type-C and USB-A interface for versatile connectivity.

- **White LED Backlight:** Soft and comfortable white LED backlighting enhances key visibility in low-light conditions and helps reduce eye strain during prolonged use.
- **Ergonomic Design:** Features an 8-degree adjustable tilt stand to provide an optimal wrist angle for comfortable and efficient typing, minimizing fatigue.

FOLDABLE STAND

Adjust the typing angle as needed



Figure 3: Adjustable foldable stand for ergonomic typing angles.

- **Full-Size Layout with Numeric Keypad:** Includes a complete set of keys, including a dedicated numeric keypad and multi-function media keys, for convenient and faster data entry and control.

FULL-SIZE KEYBOARD WITH NUMERIC PAD

Makes number entry and basic calculations much easier.
You also can click **NL** to close the numeric pad if needed.



Figure 4: Full-size layout with integrated numeric keypad for efficient data entry.

- **Plug and Play:** Offers instant and stable wired connection without the need for drivers, charging, or batteries.

SETUP

The OMOTON Large Print Wired Keyboard is designed for simple plug-and-play operation. Follow these steps to connect your keyboard:

1. **Identify the Correct Port:** Your keyboard comes with a dual interface cable, featuring both a USB-A connector and a Type-C connector.
2. **Connect to Your Device:**
 - If your device has a **USB-A port**, plug the USB-A connector directly into the port. Ensure the Type-C connector is securely plugged into the USB-A connector's integrated Type-C port.
 - If your device has a **Type-C port**, plug the Type-C connector directly into the port.
3. **Verify Connection:** Once connected, your operating system should automatically detect and install the necessary drivers. The keyboard's backlight will illuminate, indicating a successful connection.

ONE KEYBOARD FOR YOUR ALL DEVICES

Stable dual-interface wired plug, simply plud it in to either a Type-C or USB port.



Figure 5: The keyboard's compatibility with various devices using its dual interface.

OPERATING INSTRUCTIONS

Backlight Control

The keyboard features adjustable white LED backlighting to suit your preference and environment.

- **Brightness Adjustment:** Use the dedicated brightness control keys (usually located near the function keys, often marked with sun icons or similar) to increase or decrease the backlight intensity. The keyboard supports multiple brightness levels.
- **Backlight Modes:** Some models may offer different backlight modes (e.g., solid, breathing, reactive). Cycle through these modes using the designated backlight mode key if available. To turn off the backlight, continue cycling through the brightness levels until it deactivates.



Figure 6: Backlight brightness adjustment keys.

Multimedia and Function Keys

The keyboard includes a row of function keys (F1-F12) that also serve as multimedia controls. These functions are typically accessed by pressing the **Fn** key simultaneously with the desired function key.

Table 1: Multimedia and Function Key Overview

Key Combination	Function
Fn + F1	Music Play
Fn + F2	Play/Pause
Fn + F3	Mute
Fn + F4	Volume Down
Fn + F5	Volume Up
Fn + F6	Home Page
Fn + F7	Return to Previous Folder
Fn + F8	Go to Next Folder
Fn + F9	Backlight Brightness -
Fn + F10	Backlight Brightness +
Fn + F11	My Computer
Fn + F12	Calculator
PrtSc	Search
ScrLK	Refresh
Pause/Break	Sleep

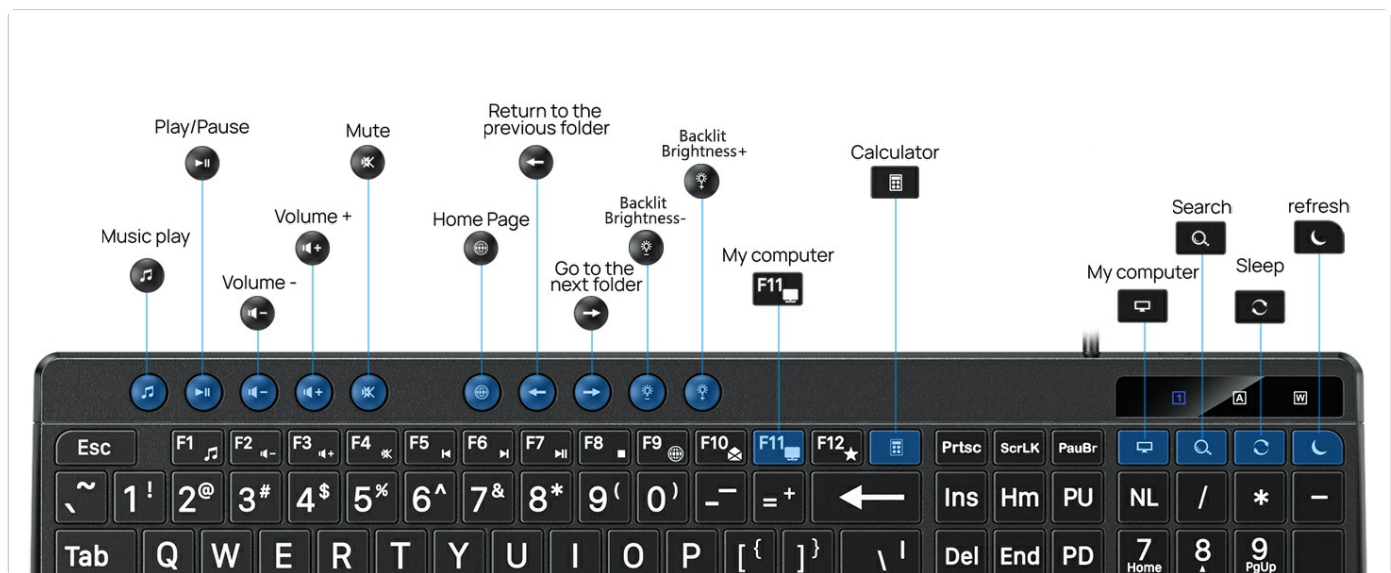


Figure 7: Multimedia and function key layout.

MAINTENANCE

Proper maintenance will ensure the longevity and optimal performance of your OMOTON Large Print Wired Keyboard.

• Cleaning:

- Disconnect the keyboard from your device before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild, non-abrasive cleaning solution to wipe the keycaps and surface.
- For dust and debris between keys, use compressed air or a small brush.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the keyboard's finish or key legends.

- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Handling:** Avoid dropping the keyboard or exposing it to excessive force, which can damage internal components or keys.

TROUBLESHOOTING

If you encounter issues with your OMOTON Large Print Wired Keyboard, refer to the following common troubleshooting steps:

• Keyboard Not Responding:

- Ensure the USB or Type-C cable is securely plugged into the correct port on your computer.
- Try plugging the keyboard into a different USB or Type-C port on your device.
- Test the keyboard on another computer to determine if the issue is with the keyboard or your device.
- Restart your computer.

• Backlight Not Working or Dim:

- Use the backlight brightness control keys (Fn + F9/F10 or dedicated keys) to increase the brightness.
- Ensure the keyboard is properly connected and receiving power.

• Keys Not Registering or Sticking:

- Clean the affected keys using compressed air to remove any debris that might be causing sticking.
- Ensure the keyboard is on a flat, stable surface.
- **Incorrect Characters Typed:**
 - Check your operating system's keyboard language settings to ensure they match your physical keyboard layout (e.g., US English).
 - Restart your computer.

If these steps do not resolve the issue, please contact OMOTON customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	OMOTON
Model	B0DHC2Z62F
Connectivity Technology	Wired (USB-A, Type-C Dual Interface)
Number of Keys	104
Keyboard Description	Computer Keyboard
Special Features	Large Print Keys, White LED Backlight, Ergonomic Design, Multimedia Keys
Color	Black
Compatible Devices	PC, Laptop, Tablet, Phone (Windows compatible)
Item Weight	1.48 pounds (approx. 0.67 kg)
Package Dimensions	17.52 x 6.73 x 1.22 inches (approx. 44.5 x 17.1 x 3.1 cm)
Included Components	1 x Large Print Wired Keyboard (with Dual Interface), 1 x User Manual



Figure 8: Keyboard dimensions.

WARRANTY AND SUPPORT

OMOTON products are designed for reliability and performance. For specific warranty information regarding your Large Print Wired Keyboard, please refer to the warranty card included in your product packaging or visit the official OMOTON website.

If you require technical assistance, have questions about product features, or need to report an issue, please contact OMOTON customer support through their official channels. Details for contacting support can typically be found on the OMOTON website or in the product packaging.

For the latest information and support resources, please visit: [OMOTON Official Store on Amazon](#)

© 2025 OMOTON. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I turn off the backlight on the OMOTON B0DHC2Z62F Large Print Wired Keyboard when it is not in use?

To turn off the backlight on your OMOTON B0DHC2Z62F Large Print Wired Keyboard, you can use the brightness control shortcuts. Follow these steps: Decrease Brightness: Press the Fn + F9 keys simultaneously. Deactivate: Continue pressing Fn...

[Read full answer](#)