

## Generic BT4

# Pro 4 TWS Wireless Headphones User Manual

Model: BT4 | Brand: Generic

## PRODUCT OVERVIEW

The Pro 4 TWS Wireless Headphones are designed to provide a high-quality audio experience with the convenience of wireless technology. These earbuds feature Bluetooth 5.0 for stable connectivity, an IPX7 waterproof rating for durability, and a built-in microphone for clear calls. The ergonomic design ensures a comfortable and secure fit for extended use.



Image: The black protective storage case included with the Pro 4 TWS Wireless Headphones. This compact case helps protect your earbuds when not in use.



Image: The Pro 4 TWS Wireless Earbuds resting inside their open charging case. The earbuds are white with black tips, and the case is also white.

## WHAT'S INCLUDED

- Pro 4 TWS Wireless Earbuds (Left and Right)
- Charging Case
- Protective Case (Black, as shown in product images)

- User Manual (this document)
- Charging Cable (not explicitly mentioned but standard for earbuds)



Image: A visual representation of the protective storage case with its dimensions: approximately 11cm in height, 7.5cm in width, and 4cm in depth. This illustrates the compact size of the included accessory.

## SETUP GUIDE

### 1. Initial Charging

Before first use, ensure both the earbuds and the charging case are fully charged. Place the earbuds into the charging case and connect the charging case to a power source using the provided charging cable. The indicator light on the case will show charging status.

### 2. Pairing with a Device

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, laptop), go to the Bluetooth settings.
3. Search for available devices and select "Pro 4 TWS" (or similar name) from the list.
4. Once connected, a voice prompt will confirm successful pairing.

*Note: If pairing fails, ensure the earbuds are charged and within range of your device. You may need to "forget" previous pairings on your device and try again.*



Image: The Pro 4 TWS earbuds shown with a smartphone, illustrating the touch control feature for connection. A blue light effect indicates active connection or touch interaction.

## OPERATING INSTRUCTIONS

### Touch Controls

The Pro 4 TWS headphones feature intuitive touch controls on each earbud. Specific functions may vary slightly, but common controls include:

- **Single Tap:** Play/Pause music, Answer/End call.
- **Double Tap (Left Earbud):** Previous track.
- **Double Tap (Right Earbud):** Next track.
- **Triple Tap:** Activate voice assistant (Siri, Google Assistant).
- **Long Press:** Reject call.

### Wearing the Earbuds

Gently insert each earbud into your ear canal. Rotate slightly until you achieve a comfortable and secure fit. The ergonomic design is intended to keep them stable during various activities.



Image: A woman wearing the Pro 4 TWS earbuds, highlighting their ergonomic design and comfortable fit within the ear. The image emphasizes that the earbuds are designed to stay securely in place.

### MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use harsh chemicals or abrasive materials.
- **Water Resistance:** The earbuds have an IPX7 waterproof rating, meaning they are resistant to sweat and rain. Do not submerge them in water or expose them to strong jets of water. Ensure they are dry before placing them back in the charging case.
- **Storage:** When not in use, store the earbuds in their charging case, preferably within the included protective case, to prevent damage and keep them clean.
- **Battery Care:** To prolong battery life, avoid fully discharging the earbuds and charging case frequently. Charge them regularly, even if not in constant use.

### TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Earbuds not pairing	Ensure earbuds and case are charged. Turn off and on Bluetooth on your device. "Forget" the device in your Bluetooth settings and re-pair. Reset the earbuds (refer to specific reset instructions if available, otherwise try placing them back in the case and taking them out).
No sound from one earbud	Check if both earbuds are charged. Place both earbuds back in the case, close it, then open it again. Try re-pairing the earbuds.
Poor sound quality	Ensure earbuds are clean and free of debris. Check the audio source device's volume and settings. Move closer to your device to avoid interference.
Charging issues	Verify the charging cable and adapter are working. Ensure the charging contacts on the earbuds and case are clean. Try a different power source.

## SPECIFICATIONS

Feature	Detail
Model Number	BT4
Connectivity Technology	Wireless, Bluetooth
Bluetooth Version	5.0
Wireless Range	Up to 33 feet (approx. 10 meters)
Water Resistance	IPX7 (Resistant to sweat and rain)
Microphone	Built-in, High-Quality
Control Method	Remote (Touch Controls)
Ear Placement	In Ear
Material	Silicone, Plastic
Included Components	Protective Case
Compatible Devices	Smartphones, Tablets, Laptops, Desktops, Smart Speakers, Cars (with Bluetooth capabilities)



Image: A diagram highlighting the upgraded Bluetooth 5.0 chip, emphasizing features like HD Voice, Quick Connect, and Stable Reception, which contribute to high-fidelity sound quality and anti-interference.



Image: An exploded view of the earbud's internal components, specifically showcasing the high-quality dynamic unit and balanced adjustment technology designed to deliver rich sound effects.

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact the seller directly. The product is manufactured by "wireless earphone".

For further assistance, you may also visit the product page on Amazon: [Pro 4 TWS Wireless Headphones on Amazon](#).