

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CCGIRU](#) /

› [CCGIRU Oil Filled Radiator Heater OH907R Instruction Manual](#)

CCGIRU OH907R

CCGIRU Oil Filled Radiator Heater (Model OH907R) Instruction Manual

Comprehensive guide for setup, operation, and maintenance of your CCGIRU Electric Radiant Heater.

PRODUCT OVERVIEW

The CCGIRU Oil Filled Radiator Heater, Model OH907R, is an electric radiant heater designed for indoor use in large rooms. It features three heat settings, an adjustable thermostat, and a remote control for convenient operation. This heater provides efficient and quiet warmth, making it suitable for various home and office environments.

Comprehensive Safety

Long

14.96 Inch

Wide

10.63 Inch

High

25.2 Inch



Image: CCGIRU Oil Filled Radiator Heater, showcasing its sleek black design, control panel, and included remote control and user manual.

Key Features:

- Efficient Heating:** Offers three heat settings (600W, 900W, 1500W) and an adjustable thermostat from 59°F to 95°F for customized warmth.
- Smart Control:** Features an LED smart touch panel and a remote control for easy operation from a distance.

- **Safety First:** Equipped with advanced overheat and tip-over protection, automatically shutting off to prevent hazards.
- **Portable Design:** Includes casters and handles for easy movement between rooms, along with a wrapped wire storage mode.
- **Quiet Operation:** Designed for minimal noise, ensuring a peaceful environment suitable for sleeping or working.
- **Wide Coverage:** Capable of heating areas up to 300 sq ft.
- **12-Hour Timer:** Allows for pre-setting operation times for convenience.

IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before using this electric heater to reduce the risk of fire, electric shock, and injury to persons.

- **CAUTION: Risk of Electric Shock.** Do not open or attempt to repair the heater yourself.
- **Hot Surface:** The heater may get hot when in use. To avoid burns, **DO NOT** allow bare skin to touch hot surfaces. If provided, use handles or wheels when moving this heater.
- **Placement:** **DO NOT** place the heater against walls, furniture, bedding, paper, clothes, or curtains. Keep combustible materials at least 3 feet (0.9 meters) from the front, sides, and rear of the heater.
- **DO NOT** place towels or other objects on the heater.
- **DO NOT** operate any heater with a damaged cord or after the heater malfunctions, has been dropped, or damaged in any manner. Return heater to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
- This heater is not intended for use in bathrooms, laundry areas, or similar indoor locations. **NEVER** locate heater where it may fall into a bathtub or other water container.
- To protect against electrical hazards, **DO NOT** immerse in water or other liquids.
- **DO NOT** touch the control panel or plug with a wet hand.
- **DO NOT** run cord under carpeting. **DO NOT** cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- **DO NOT** operate this heater without casters attached. Ensure the heater is on a flat and stable surface.
- **Tip-Over Protection:** The heater is equipped with a safety switch that automatically turns off the unit if it tips over or is at an angle greater than 45 degrees.
- **Overheat Protection:** The heater will automatically shut off if it overheats.



Image: Dimensions of the CCGIRU Oil Filled Radiator Heater, showing its compact size for easy placement.

Ideal Temperature is Within Your Control



45° Tip-over Protection

V-0 Flame Retardant Material

Enhanced Safety Plug

ETL Listed

Image: Visual representation of the heater's safety features, including tip-over protection, flame retardant materials, and ETL certification.

SETUP INSTRUCTIONS

Before operating the heater, ensure all components are correctly assembled and placed. The heater is shipped with the wheels and U-shape brackets detached for safe transport.

1. Carefully remove your heater from its packaging box. The packaging can be reused for off-season storage.
2. Turn the heater upside down.
3. Attach the U-shape brackets to the base of the heater, aligning them with the designated holes.
4. Insert the rolling casters into the U-shape brackets. Secure them with the provided wing nuts.
5. Turn the heater upright. Ensure it is on a flat, stable, and level surface.
6. Plug the power cord into a well-grounded AC electrical outlet. Ensure the outlet matches the voltage requirements (120V AC).
7. Locate the main power switch on the side of the heater and turn it to the "ON" position.

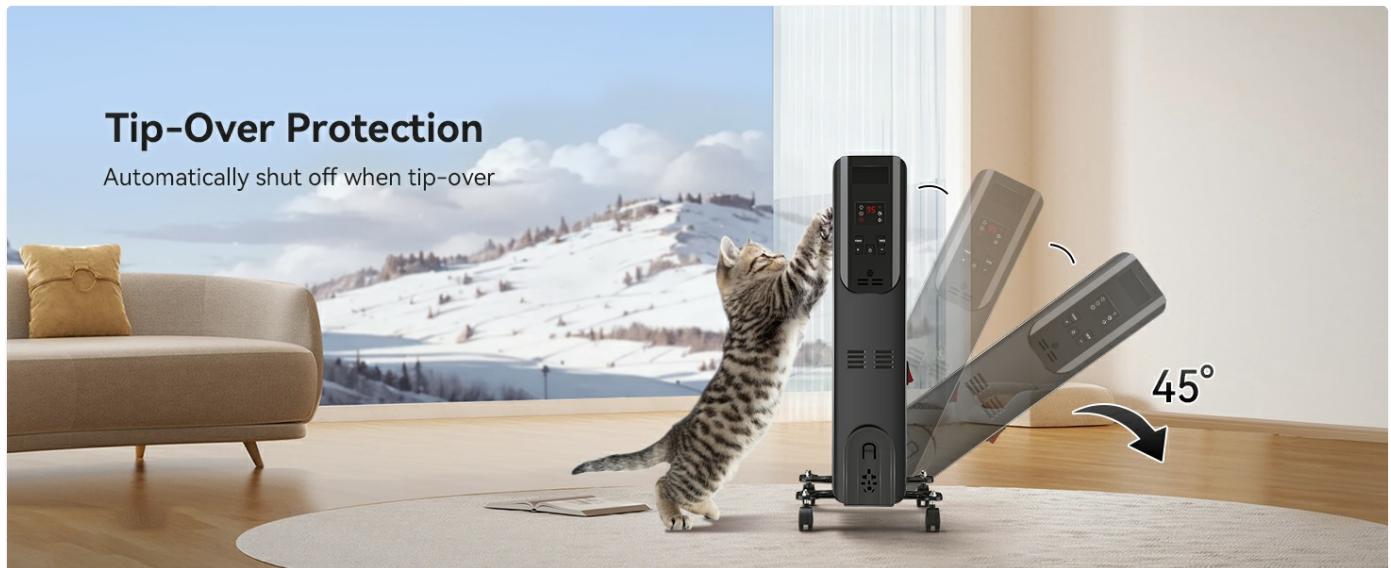


Image: Assembly instructions for attaching the wheels and U-shape brackets to the heater base.

OPERATING INSTRUCTIONS

Control Panel and Remote Control

The CCGIRU Oil Filled Radiator Heater can be operated using the integrated LED smart touch panel or the included remote control. The remote control requires 2 AAA batteries (not included).

Multiple Safety Protection



Overheat Protection



Tip-over Sensor



Anti-frost Function



ETL Certification



Image: Detailed view of the heater's control panel with LED display and buttons for power, timer, and temperature settings.

- **Power Button ():** Press to turn the heater ON or OFF.
- **Power Level Buttons (*, **, ***):** Cycle through Low (600W), Medium (900W), and High (1500W) heat settings.
- **Temperature Adjustment Buttons (+/-):** Adjust the desired temperature between 59°F and 95°F. The heater will

maintain the set temperature.

- **Timer Button (⌚):** Set the operating time up to 12 hours. The heater will automatically turn off after the set time.

Setting the Temperature

Once the heater is powered on, use the '+' or '-' buttons on the control panel or remote to set your desired room temperature. The LED display will show the current temperature and then flash the desired temperature. Once the desired temperature is set, the display will revert to showing the current room temperature. The heater will cycle on and off to maintain the set temperature.

Using the Timer Function

Press the timer button on the control panel or remote. Use the '+' or '-' buttons to set the desired number of hours (1-12) for the heater to operate before automatically turning off. The timer indicator will illuminate when the timer is active.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater. Always unplug the heater and allow it to cool completely before cleaning or storing.

- **Cleaning:** Use a soft, slightly damp cloth to wipe the outer surfaces of the heater. Do not use abrasive cleaners, solvents, or chemicals as they may damage the finish.
- **Storage:** Store the heater in a cool, dry location when not in use. Wrap the power cord around the designated storage area on the heater to prevent damage.
- **DO NOT** attempt to open or refill the oil fins. The oil is permanently sealed and does not require refilling or changing.

TROUBLESHOOTING

If your heater is not operating correctly, refer to the following common issues and solutions:

- **Heater does not turn on:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check if the main power switch on the side of the heater is in the "ON" position.
 - Verify that the room temperature is below the set temperature.
 - Check for tip-over or overheat protection activation. If activated, place the heater upright on a flat surface and allow it to cool if it was overheated.
- **Heater is not heating effectively:**
 - Ensure the desired temperature is set higher than the current room temperature.
 - Check the selected power level (Low, Medium, High) and adjust as needed for more heat.
 - Ensure no objects are blocking the heat fins or covering the heater.
- **Error Message on Display:**
 - An error message (e.g., "E3") often indicates the tip-over protection has been activated. Place the heater upright on a flat, stable surface. If the error persists, unplug the unit and contact support.
- **Remote Control Not Working:**
 - Ensure the remote control has fresh AAA batteries installed correctly.
 - Point the remote directly at the heater's control panel.

SPECIFICATIONS

Feature	Detail
Brand	CCGIRU
Model Number	OH907R
Special Feature	Electronic Thermostat
Color	Black
Form Factor	Pedestal
Indoor/Outdoor Usage	Indoor
Product Dimensions	1"D x 1"W x 1"H
Recommended Uses	Home
Mounting Type	Floor Mount
Room Type	Dining Room, Living Room
Heating Coverage	300 sq ft
Fuel Type	Electric
Number of Heat Settings	3 (600W, 900W, 1500W)
Voltage	120 Volts (AC)
Item Weight	16.66 pounds

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact details provided in your product packaging or visit the official CCGIRU website. Do not attempt to repair the unit yourself, as this may void the warranty and pose safety risks.

