



Manuals.plus /

› Leebein /

› Leebein Electric Spin Scrubber Model YMG-825 Instruction Manual

Leebein YMG-825

Leebein Electric Spin Scrubber Model YMG-825 Instruction Manual

BRAND: LEEBEIN | MODEL: YMG-825

1. Introduction

The Leebein Electric Spin Scrubber Model YMG-825 is a cordless, electric cleaning device designed to simplify various household cleaning tasks. It features an extendable handle, multiple interchangeable brush heads, and two operating speeds, making it suitable for cleaning bathrooms, floors, and other surfaces. The device is IPX7 waterproof, allowing for direct rinsing of brush heads.

Key Features:

- **Durable Bristles and IPX7 Waterproof Protection:** Constructed with high-quality PP bristles, designed for effective stain removal without surface damage. The IPX7 waterproof rating ensures the device can be rinsed directly under water.
- **Adjustable & Lightweight Design:** The stainless-steel handle extends from 12 to 50 inches, facilitating access to high or low areas. Weighing approximately 1 lb, it is designed for ease of use.
- **Long Battery Life and Cordless Operation:** Equipped with a rechargeable battery providing up to 90 minutes of runtime after a 3-hour charge. The cordless design offers unrestricted movement during cleaning.
- **Two Speed Settings:** Allows selection between two speeds for different cleaning requirements.

2. Product Overview & Components

The Leebein Electric Spin Scrubber comes with the main unit, an extendable handle, a charging cable, and 7 interchangeable brush heads.



Figure 1: Leebein Electric Spin Scrubber with all included components.

Included Components:

- Main Scrubber Unit (with 2 speeds and battery indicator)
- Extendable Long Handle (Stainless Steel)
- USB-C Charging Cable
- **7 Brush Heads:**
 - Large Flat Brush
 - Small Flat Brush
 - Corner Brush (pointed)
 - Cloth Brush
 - Sponge Brush
 - Faux Fur Brush
 - Scouring Pad Brush

12-50in Adjustable Length

Battery and Speed Display



Figure 2: The extendable handle allows for adjustable length from 12 to 50 inches.



Figure 3: A selection of brush heads and their recommended uses for different surfaces.

3. Setup

3.1 Assembling the Handle:

1. Connect the main scrubber unit to the extendable stainless-steel handle. Ensure it clicks securely into place.
2. To adjust the length, twist the locking mechanism on the handle, extend or retract to the desired length (12 to 50 inches), and then twist the mechanism back to lock.

3.2 Attaching Brush Heads:

1. Select the appropriate brush head for your cleaning task.
2. Align the brush head with the attachment point on the main scrubber unit.
3. Press firmly until the brush head clicks into place.

Easy Detach & Restore Brush Heads

Boiling water can restore the squished bristle



Figure 4: Brush heads are designed for easy attachment and detachment.

3.3 Initial Charging:

1. Before first use, fully charge the scrubber.
2. Locate the USB-C charging port on the main unit.
3. Connect the provided USB-C charging cable to the port and plug the other end into a compatible USB power adapter (not included).
4. A full charge typically takes approximately 3 hours, providing up to 90 minutes of runtime.

4. Operating Instructions

4.1 Powering On/Off and Speed Selection:

1. Press the power button once to turn on the scrubber at the default speed.
2. Press the power button a second time to switch to the higher speed setting.
3. Press the power button a third time to turn off the scrubber.

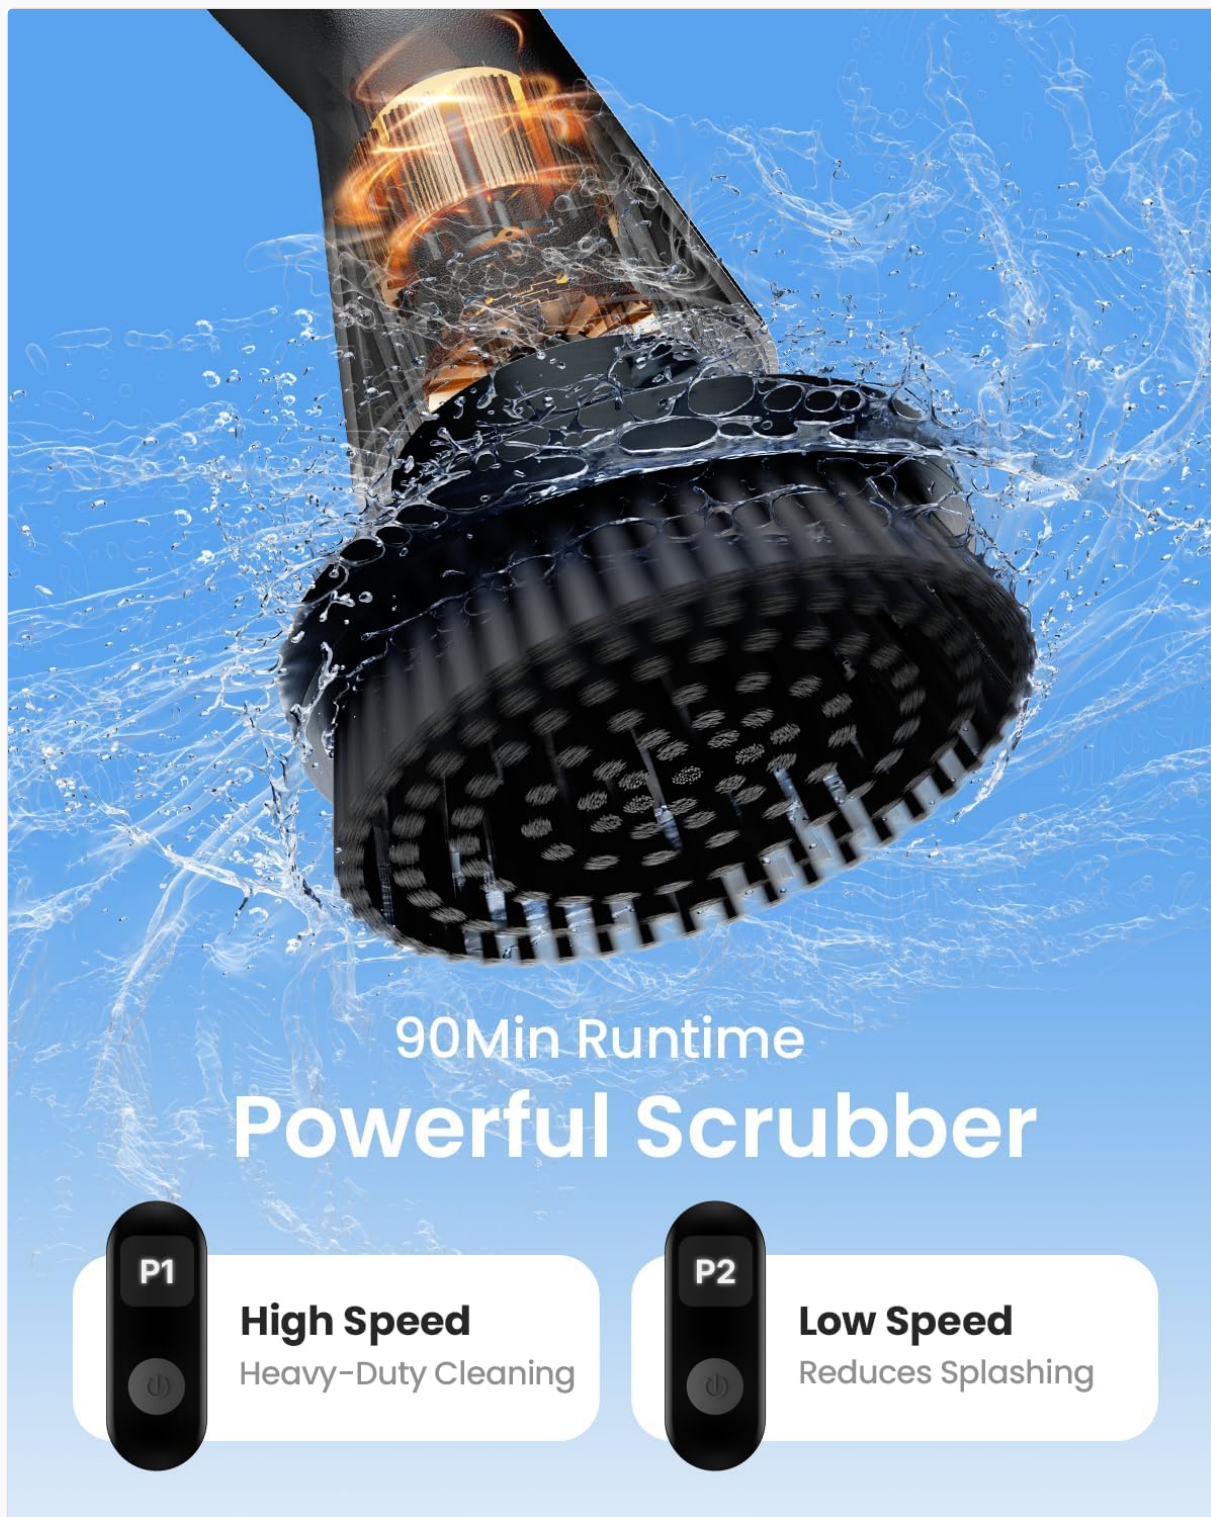


Figure 5: The scrubber features two speed settings for varied cleaning intensity.

4.2 Using Different Brush Heads:

- **Large Flat Brush:** Ideal for broad, flat surfaces like floors, large wall tiles, and bathtub bases.
- **Small Flat Brush:** Suitable for smaller flat areas, sinks, and countertops.
- **Corner Brush:** Designed with a pointed shape to effectively clean grout lines, corners, and tight spaces.
- **Cloth Brush, Sponge Brush, Faux Fur Brush, Scouring Pad Brush:** These specialized pads can be attached via Velcro to the appropriate base for tasks such as polishing, gentle scrubbing, or heavy-duty stain removal on various surfaces.



Figure 6: Different brush heads are provided for specific cleaning applications.

5. Maintenance

5.1 Cleaning Brush Heads:

1. After each use, detach the brush head from the main unit.
2. Rinse the brush head directly under running water.
3. For squished bristles, immerse the brush head in boiling water for a short period to help restore their shape.

5.2 Charging the Unit:

1. Recharge the unit when the battery indicator shows low power.
2. Use the provided USB-C cable. A full charge takes approximately 3 hours.

5.3 Storage:

- Store the scrubber and its accessories in a dry place.
- The extendable handle can be collapsed for compact storage.

6. Troubleshooting

If the Leebein Electric Spin Scrubber does not power on or operate as expected, please check the following:

- **Battery Level:** Ensure the unit is fully charged. A 3-hour charge provides up to 90 minutes of operation.
- **Brush Head Attachment:** Verify that the brush head is securely attached to the main unit.
- **Water Exposure:** While the brush heads are IPX7 waterproof, avoid submerging the entire main unit in water to prevent damage to internal components.

7. Specifications

Feature	Detail
Brand	Leebein
Model Number	YMG-825
Color	Black
Handle Material	Stainless Steel
Product Dimensions	7"L x 3"W x 15"H
Material	Plastic
Special Feature	Extendable
Number of Items	1
Item Weight	2.51 pounds (1.14 Kilograms)
Batteries	1 Lithium Ion batteries required.
UPC	652726711793

8. Warranty & Support

Leebein offers a **2-Year Quality Assurance** for this electric cleaning brush. If you have any questions or encounter issues, please feel free to contact Leebein support via email or visit their official website. They aim to resolve issues within 24 hours.