

Leebein YMG-820

Leebein ANS-8050 Electric Spin Scrubber Replacement Brush Heads

User Manual for Model YMG-820

INTRODUCTION

This manual provides instructions for the proper use and maintenance of your Leebein ANS-8050 Electric Spin Scrubber Replacement Brush Heads. This 7-piece accessory kit is designed to enhance the cleaning capabilities of your Leebein ANS-8050 electric cleaning brush (scrubber not included). Please read these instructions carefully before use to ensure optimal performance and longevity of the brush heads.

PACKAGE CONTENTS

Your Leebein ANS-8050 Replacement Brush Heads kit includes the following 7 brush accessories:

- 1 x Large Flat Brush
- 1 x Small Flat Brush
- 1 x Pointed Brush
- 1 x Scouring Brush
- 1 x Sponge Brush
- 1 x Wool-like Brush
- 1 x Small Cloth Brush (4 inches)



Image: The Leebein 7-in-1 Cleaning Brush Head kit packaging, showing the box and the seven distinct brush heads included in the package.

SETUP AND INSTALLATION

Attaching and removing the brush heads from your Leebein ANS-8050 electric spin scrubber is a simple process.

1. **To Install:** Hold the main body of the electric scrubber firmly. Align the new brush head with the attachment point on the scrubber. Insert the brush head and turn it clockwise until it clicks securely into place.
2. **To Remove:** Hold the scrubber firmly. Grasp the brush head and pull it directly outwards from the scrubber.

EASY TO INSTALL AND REMOVE

Installation: Hold the scrubber and put the brush on



Removal: Pull the brush heads off

Image: A four-panel illustration demonstrating the installation and removal process of the brush heads. The top row shows inserting and twisting the brush head for installation, and the bottom row shows pulling the brush head off for removal.

OPERATING AND USAGE

Each brush head is designed for specific cleaning tasks. Select the appropriate brush head for the surface and type of dirt you intend to clean.

Big Flat Brush

Ideal for large, flat surfaces such as floors, walls, and wide tile areas. Its broad coverage helps clean efficiently.

Small Flat Brush

Suitable for smaller flat surfaces like sinks, shower bases, and countertops. Provides focused cleaning in compact areas.

Pointed Brush

Designed for cleaning corners, grout lines, and other narrow or hard-to-reach spaces. Its conical shape allows for precise

scrubbing.

Scouring Brush

Effective for tackling oily areas, stubborn grime, and tough stains on surfaces like stovetops or oven interiors. Use with appropriate cleaning agents.

Sponge Brush

Excellent for glass cleaning, waxing, and polishing delicate surfaces. Provides a gentle yet effective cleaning action.

Wool-like Brush

Primarily used for car polishing and other applications requiring a soft, non-abrasive finish. Helps achieve a smooth, shiny surface.

Small Cloth Brush (4 inches)

Suitable for cleaning leather, upholstery, or windows. Its soft texture is gentle on sensitive materials while effectively removing dirt.



Big Flat Brush

For flat floors



Small Flat Brush

For small flat



Pointed Brush

For corners and narrow space



Scouring Brush

For oily areas



Image: A collage showing the Big Flat Brush, Small Flat Brush, Pointed Brush, and Scouring Brush in use for different cleaning tasks such as floors, sinks, stovetops, and corners.



Sponge Brush
For glass cleaning, waxing



Wool-like Brush
For car polishing



4 inches
Small Cloth Brush
For leather or window cleaning



Image: A collage showing the Sponge Brush, Wool-like Brush, and Small Cloth Brush in use for tasks such as glass cleaning, car polishing, and leather/window cleaning.

MAINTENANCE

To ensure the longevity and effectiveness of your replacement brush heads, follow these maintenance guidelines:

- **Cleaning:** After each use, rinse the brush heads thoroughly under running water to remove any dirt, debris, or

cleaning solution residue.

- **Drying:** Allow the brush heads to air dry completely before storing them. Do not store wet brush heads, as this can lead to mildew or damage.
- **Storage:** Store the brush heads in a clean, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect brush heads for wear and tear. Replace them when bristles become flattened, damaged, or less effective.

TROUBLESHOOTING

If you encounter issues with your replacement brush heads, consider the following:

- **Brush head not attaching securely:** Ensure the brush head is correctly aligned and twisted clockwise until it clicks into place. Check for any obstructions in the attachment mechanism.
- **Reduced cleaning performance:** The brush head may be worn out and require replacement. Ensure you are using the correct brush head for the specific cleaning task and surface.
- **Unusual noise during operation:** Verify that the brush head is securely attached and not loose. If the issue persists, inspect the main electric scrubber unit for any problems (refer to your scrubber’s manual).

SPECIFICATIONS

Attribute	Detail
Brand	Leebein
Model Number (Kit)	YMG-820
Compatible Scrubber Model	Leebein ANS-8050 (also ANS-8051, ANS-8052)
Number of Items	7 (brush heads)
Material Type	Plastic, Nylon (handle)
Product Dimensions	3"L x 3"W x 3"H (approximate, for individual heads)
Surface Recommendation	Floor, Grout, Metal, Tile, Wood, Bathroom, Furniture, Sink, Window
Product Firmness	Medium

WARRANTY AND SUPPORT

This product is a set of replacement brush heads. For specific warranty information regarding these accessories, please refer to the original purchase documentation or contact Leebein customer support directly. General support for Leebein products can be found by visiting the official Leebein store online or contacting their customer service department. For further assistance, please visit the [Leebein Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question