

H.Koenig FRY900

H.Koenig FRY900 Dual Basket 9L Air Fryer Instruction Manual

1. INTRODUCTION

Thank you for choosing the H.Koenig FRY900 Dual Basket 9L Air Fryer. This appliance is designed to provide a healthier alternative to traditional frying methods, utilizing hot air to cook your favorite foods with less oil. With its dual 4.5-liter baskets, intuitive touch control panel, and 8 pre-set programs, you can prepare a variety of meals efficiently. Please read this manual thoroughly before first use to ensure safe operation, optimal performance, and proper maintenance of your air fryer. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow adequate air circulation.
- Never fill the baskets with oil. This appliance operates using hot air.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

3. PRODUCT OVERVIEW

The H.Koenig FRY900 features a sleek design with two independent cooking zones, allowing for versatile meal preparation.

3.1 Components

- Main Unit with Control Panel
- Two 4.5L Cooking Baskets
- Two Removable Crisper Plates/Grills



Figure 1: Front view of the H.Koenig FRY900 Dual Basket Air Fryer, showcasing its two independent cooking baskets and central

digital control panel.

3.2 Control Panel

The intuitive touch control panel allows for easy adjustment of settings and selection of cooking programs.



Figure 2: Close-up of the digital touch control panel, displaying temperature and time settings for each basket, along with program icons and power button.

- **Power Button:** Turns the appliance on/off.
- **Temperature/Time Adjustment:** Use the '+' and '-' buttons to adjust cooking temperature (80-200°C) and time (up to 60 minutes).
- **Program Icons:** Select from 8 pre-set cooking programs.
- **Basket Selectors (1 & 2):** Choose which basket to control.
- **Start/Pause Button:** Initiates or pauses the cooking cycle.

- **Smart Finish Function:** Synchronizes cooking times for both baskets to finish simultaneously.
 - **Match Cook Function:** Applies the same settings to both baskets.
-

4. SETUP

4.1 Unpacking

1. Carefully remove the air fryer and all packaging materials from the box.
2. Remove any stickers or labels from the appliance.
3. Retain packaging for storage or disposal according to local regulations.

4.2 Initial Cleaning

1. Wash the cooking baskets and crisper plates with hot water, dish soap, and a non-abrasive sponge.
2. Rinse thoroughly and dry completely.
3. Wipe the inside and outside of the main unit with a damp cloth. Never immerse the main unit in water.

4.3 Placement

Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance to allow for proper air circulation.

4.4 First Use

Before cooking food, it is recommended to run the air fryer empty for a short period to eliminate any manufacturing odors.

1. Insert the crisper plates into the baskets and slide the baskets into the main unit.
2. Plug the power cord into a grounded wall outlet.
3. Press the Power button.
4. Set the temperature to 200°C and the time to 10 minutes for both baskets.
5. Press Start/Pause. A slight odor may be present, which is normal.
6. Once the cycle is complete, allow the appliance to cool down completely before proceeding.



Figure 3: Top view of the air fryer with both baskets removed, showing the crisper plates inside, ready for initial setup or cleaning.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. Place the crisper plates into the cooking baskets.
2. Place ingredients into the baskets. Do not overfill.
3. Slide the baskets into the main unit.
4. Plug the appliance into a grounded outlet. The Power button will illuminate.
5. Press the Power button to turn on the display.
6. Select Basket 1 or Basket 2.
7. Adjust the temperature using the '+' and '-' buttons (80-200°C).
8. Adjust the cooking time using the '+' and '-' buttons (1-60 minutes).
9. Press the Start/Pause button to begin cooking.
10. During cooking, you can pull out a basket to shake or check food. The appliance will pause automatically. Reinsert the basket to resume.

11. A beep will sound when the cooking cycle is complete. The appliance will automatically shut off.

5.2 Pre-set Programs

The H.Koenig FRY900 includes 8 pre-set programs for common food items. To use a pre-set program:

1. Follow steps 1-5 from Basic Operation.
2. Select Basket 1 or Basket 2.
3. Press the Program icon repeatedly until the desired program is selected. The default temperature and time for that program will display.
4. You can adjust the temperature and time manually if needed.
5. Press Start/Pause to begin.

5.3 Dual Zone Cooking (Smart Finish & Match Cook)

The dual basket design allows for cooking two different foods simultaneously or the same food in larger quantities.

- **Independent Cooking:** Set different temperatures and times for Basket 1 and Basket 2.
- **Match Cook:** If you want both baskets to cook with the exact same settings, set Basket 1, then press the 'Match Cook' button. The settings will be copied to Basket 2.
- **Smart Finish:** If you are cooking two different foods with different cooking times, use 'Smart Finish'. Set the desired temperature and time for each basket. Press 'Smart Finish', and the air fryer will automatically adjust the start times so both baskets finish cooking at the same moment.



Figure 4: The H.Koenig FRY900 in operation, demonstrating one basket filled with mixed vegetables and the other with french fries, highlighting its dual cooking capability.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

6.1 Cleaning After Each Use

1. Unplug the air fryer from the wall outlet and allow it to cool down completely before cleaning.
2. Remove the cooking baskets and crisper plates.
3. The baskets and crisper plates are dishwasher safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge.
4. For stubborn food residue, soak the baskets in hot water with dish soap for about 10 minutes.
5. Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the main unit in

water.

6. Clean the interior of the appliance with a damp cloth and mild detergent if necessary.

6.2 Storage

Ensure the appliance is clean and completely dry before storing. Store the air fryer in a cool, dry place.

7. TROUBLESHOOTING

If you encounter any issues with your H.Koenig FRY900 Air Fryer, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power button not pressed; Power outage.	Ensure the power cord is securely plugged into a grounded outlet. Press the Power button. Check your household's power supply.
Food is not cooked evenly.	Baskets are overfilled; Food not shaken/flipped.	Do not overfill baskets. Shake or flip food halfway through cooking for best results.
White smoke coming from the appliance.	Grease residue from previous use; Fatty ingredients.	Clean baskets and crisper plates thoroughly after each use. For fatty foods, ensure crisper plate is in place to drain fat.
Food is not crispy.	Too much moisture; Not enough oil (for certain foods).	Pat food dry before air frying. For some foods, a light spray of oil can enhance crispiness.

If the problem persists after checking these solutions, please contact customer support.

8. SPECIFICATIONS

Technical details for the H.Koenig FRY900 Dual Basket Air Fryer:

- **Model Number:** FRY900
- **Power:** 2400 Watts
- **Voltage:** 220 Volts (AC)
- **Capacity:** 9 Liters (2 x 4.5 Liters)
- **Temperature Range:** 80°C - 200°C
- **Timer:** Up to 60 minutes
- **Dimensions (L x W x H):** 35 x 39 x 30 cm
- **Weight:** 7.6 Kilograms
- **Material:** Stainless Steel
- **Special Features:** Dual capacity, 8 pre-set cooking programs, touch control panel, automatic shut-off function.

9. WARRANTY AND SUPPORT

The H.Koenig FRY900 Dual Basket 9L Air Fryer comes with a **2-year extended warranty**. This warranty covers manufacturing defects and ensures reliable long-term use of your appliance.

For warranty claims, technical support, or spare parts availability, please contact H.Koenig customer service. Please have your model number (FRY900) and proof of purchase ready when contacting support.

For service and support in Germany, please refer to the provided contact information in your product packaging or visit the official H.Koenig website.