

[Manuals.plus](#) /

› [OSHPRO](#) /

› OSHPRO 22 Inch HD Small TV User Manual

OSHPRO B0DHCQJF42

OSHPRO 22 Inch HD Small TV User Manual

Model: B0DHCQJF42

PRODUCT OVERVIEW

The OSHPRO 22-inch HD Small TV is a versatile entertainment solution designed for various environments such as homes, kitchens, RVs, and offices. It features a 1080P HD screen for crisp visuals, a built-in digital ATSC tuner for free local channels, and multiple input ports for broad connectivity. Its compact design and adjustable stand make it highly adaptable.



Figure 1: OSHPRO 22 Inch HD Small TV with included remote control. The TV features a sleek design with a foldable stand for easy placement.

SETUP GUIDE

1. Unpacking and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in the packing list are present and undamaged. Retain the packaging for future transport or storage.

2. Positioning the TV

The TV is equipped with a built-in stand that can be adjusted up to 180 degrees. Place the TV on a stable, flat surface such as a countertop, desk, or table. Adjust the stand to achieve your desired viewing angle.



Figure 2: The OSHPRO TV offers flexible mounting options, including its integrated adjustable stand and compatibility with VESA mounts (mount not included). The stand allows for up to 180-degree adjustment.

3. Connecting Power

Connect the provided AC adapter to the DC 12V input port on the TV. Plug the other end of the adapter into a standard electrical outlet.

4. Connecting the TV Antenna

For receiving free local channels, connect the included TV antenna to the "TV Antenna" input port on the television. Position the antenna for optimal signal reception.

Freeview LCD TV with ATSC Turner

Come with TV antenna. Never pay your cable fee for television again.



Figure 3: The TV comes with a built-in digital tuner and antenna, enabling access to free local channels without a separate set-top box.

5. Connecting External Devices

The TV features multiple input ports for connecting various devices:

- **HDMI Input:** Connect devices such as laptops, gaming consoles (Xbox, PlayStation, Switch), TV sticks (Fire Stick), or Raspberry Pi using an HDMI cable (not included). This port supports up to 1080P video input.
- **AV Composite Audio/Video (3.5mm):** Connect older devices using the provided AV cable.
- **USB Port:** For media playback from USB drives.
- **Headphone Port (3.5mm):** For private listening.

INPUTS/OUTPUTS INTERFACE



HEADPHONE PORT
(3.5mm)



USB



input connections
HDMI 1.4



DC 12V



TV Antenna



AV Composite audio
/video(3.5mm)



Power ON/OFF



Figure 4: Detailed view of the TV's input/output interface, including Headphone Port, USB, HDMI 1.4, DC 12V, TV Antenna, and AV Composite audio/video ports.

HDMI Input -Screen Mirroring

Sync up to 1080P video to the TV via(HDMI Cable included)



Kindle Fire



Computer



Xbox



Switch



Fire stick



Play Station



Phone



Raspberry Pi



Tips:1.Only support HDMI input,not output.
2.HDMI input only applicable to the device with HDMI output function.

Figure 5: The HDMI input allows screen mirroring from devices like Kindle Fire, computers, Xbox, Switch, Fire Stick, PlayStation, phones, and Raspberry Pi. Note: Only supports HDMI input, not output.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the Power button on the TV or the remote control to turn the TV on or off.

2. Initial Channel Scan (for Antenna TV)

After connecting the antenna, navigate to the TV's menu settings. Select "Channel Scan" or "Auto Tune" to search for available digital channels. This process may take several minutes.

3. Selecting Input Source

Press the "Source" or "Input" button on the remote control to cycle through available input sources (TV, HDMI, AV, USB). Select the desired input for your connected device.

4. USB Media Playback

Insert a USB flash drive into the USB port. The TV will typically prompt you to access the media browser. You can play various media formats:

- **Movies:** AVI, MPG, MOV, MKV, MP4, TS, VOB, DAT
- **Music:** MP3, WMA, M4A, AAC
- **Photos:** JPG, JPEG, BMP, PNG

The TV can also function as an electronic photo frame.



Figure 6: The USB port supports a wide range of media formats for movies, music, and photos, allowing the TV to serve as a versatile media player or digital photo frame.

5. Audio and Volume Control

Use the Volume Up/Down buttons on the remote control or the TV to adjust the sound level. The TV features built-in dual speakers for clear audio output.

OSHPRO 22 INCH Television with Dual Speakers

22' TV with multiple speakers, enjoy audio and video entertainment with loud speakers.



Figure 7: The OSHPRO 22-inch TV is equipped with dual speakers, providing clear audio for an enhanced viewing experience.

MAINTENANCE

Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Do not spray liquid directly onto the screen.
- Avoid using abrasive cleaners, waxes, or solvents as they can damage the finish.

Storage

If storing the TV for an extended period, disconnect all cables and store it in its original packaging in a cool, dry place

away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Power cable not connected; Power outlet not working.	Ensure power cable is securely connected. Test the outlet with another device.
No Signal / "No Input" message	Incorrect input source selected; Device not powered on; Cable loose or damaged.	Press "Source" button to select correct input. Power on connected device. Check cable connections.
Poor Picture Quality (Antenna TV)	Weak antenna signal; Antenna position.	Adjust antenna position. Perform a new channel scan.
No Sound	Volume too low or muted; External device audio settings.	Increase volume. Check if TV is muted. Check audio output settings on connected device.
Remote Control Not Working	Dead batteries; Obstruction between remote and TV.	Replace batteries. Remove any obstructions. Ensure remote is pointed at the TV's sensor.

SPECIFICATIONS

Feature	Detail
Brand	OSHPRO
Model	B0DHCQJF42
Screen Size	22 Inches
Display Technology	LCD
Resolution	1080p
Refresh Rate	90 Hz
Aspect Ratio	16:9
Special Feature	Built-in Speaker, ATSC Tuner
Connectivity Technology	Wired (HDMI, AV, USB)
Item Weight	5.24 pounds
Product Dimensions	1"D x 1"W x 1"H (approximate, based on input)

WARRANTY AND SUPPORT

For product support, technical assistance, or warranty inquiries, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific warranty terms and contact information.

While optional protection plans are available for purchase, any inherent manufacturer's warranty details should be confirmed with the point of sale or the OSHPRO brand directly.



© 2024 OSHPRO. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.