

## Bozily B1

# Bozily Golf Rangefinder B1 User Manual

Model: B1

## INTRODUCTION

Thank you for choosing the Bozily Golf Rangefinder B1. This advanced laser rangefinder is designed to provide accurate distance measurements for golf, enhancing your game with features like slope compensation, flag-lock technology, and continuous scanning. Its compact and ergonomic design ensures comfortable handling and reliable performance on the course. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to help you get the most out of your device.

## PACKAGE CONTENTS

Upon opening your Bozily Golf Rangefinder B1 package, please ensure all the following items are included:

- 1x Bozily Golf Rangefinder B1
- 1x Carrying Case
- 1x USB Type-C Charging Cable
- 1x Lanyard
- 1x Carabiner
- 1x Cleaning Cloth
- 1x User Manual (this document)
- 1x Warranty Card
- 1x Color Box



Image: All components included in the Bozily Golf Rangefinder B1 package.

## SETUP AND INITIAL USE

### Charging the Device

The Bozily Golf Rangefinder B1 features a built-in 750mAh rechargeable lithium-ion battery. Before first use, it is recommended to fully charge the device.

1. Locate the Type-C charging port on the side of the rangefinder.
2. Connect the provided USB Type-C charging cable to the rangefinder.
3. Connect the other end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
4. The charging indicator will illuminate during charging and turn off when fully charged. A full charge typically takes a few hours.

# *Built-in 750mAh Rechargeable Lithium Battery*



Support Type-C  
Charging Port



Image: Charging the Bozily Golf Rangefinder B1 via its Type-C port.

# TYPE-C CABLE LITHIUM DIRECT RECHARGEABLE

## Battery

1.5V 750mah Li-ion

## Battery Life

Long Battery life - 500times

## Working Life

Use 20000times on sigle charge



Image: Battery specifications and charging illustration.

## Powering On/Off

To power on the device, press the **Power Button** (red button on top). The display will activate. To power off, the device will automatically shut down after a period of inactivity to conserve battery, or you can press and hold the Power Button.

## Adjusting Focus

Rotate the eyepiece to adjust the focus until the display and target appear clear and sharp.

## OPERATING INSTRUCTIONS

### Button Functions

- **Power Button (Red):** Press to power on, activate laser, and take single measurements.
- **Mode Button (Black):** Press to switch between measurement modes. Long press to switch between Meter (M) and Yard (Y) units.
- **Slope ON/OFF Switch:** A physical switch located on the side of the device to enable or disable the slope compensation feature.

Your browser does not support the video tag.

Video: An overview of the Bozily Golf Rangefinder B1, demonstrating its features and components, including the Type-C charging port, power and mode buttons, and the slope ON/OFF switch.

### Measurement Modes

The Bozily B1 offers multiple measurement modes to suit various golfing situations:

#### Mode 1: Continuous Scanning

This mode allows for continuous measurement of multiple targets. Press and hold the Power Button, then slowly pan across the landscape. The distance readings will update continuously, providing real-time measurements to different objects.

## **Mode 1: Continuous Scanning**

**Hidden Function: Long press the Mode button to switch the unit of Meter/Yard**



Image: Continuous Scanning Mode (Mode 1) in operation.

### **Mode 2: Flag-Lock with Vibration**

Designed for easily locking onto the flagstick. In this mode, aim at the flagstick and press the Power Button. The device will quickly identify the flag and provide a precise distance. Once locked, the rangefinder will vibrate to confirm the measurement, ensuring you have targeted the flag and not background objects.

## Mode 2: Support Vibrating Lock Flag



Image: Flag-Lock with Vibration Mode (Mode 2) in use.

### Slope Compensation (ON/OFF)

The B1 rangefinder includes a slope measurement function that automatically calculates the incline/decline to provide an adjusted distance, accounting for elevation changes. This feature helps in selecting the correct club for uphill or downhill shots.

- To enable slope compensation, slide the **Slope ON/OFF Switch** to the "ON" position. The display will show an indicator that slope is active.
- To disable slope compensation (e.g., for tournament play), slide the switch to the "OFF" position. The device will then provide only the direct line-of-sight distance.

Image: Slope ON/OFF functionality.

### Magnetic Attachment

The Bozily B1 features a built-in magnetic strip, allowing it to be securely attached to metal surfaces, such as a golf cart frame or club head, for convenient access during play.

# MAGNETIC MOUNT



Image: Magnetic mount feature in use.

## MAINTENANCE AND CARE

- **Cleaning Lenses:** Use the provided cleaning cloth or a soft, lint-free cloth to gently wipe the lenses. Avoid using abrasive materials or harsh chemicals that could scratch the lens coating.
- **Cleaning Body:** Wipe the body of the rangefinder with a soft, damp cloth. Do not submerge the device in water, despite its IP65 water resistance rating, to prevent internal damage.
- **Storage:** When not in use, store the rangefinder in its protective carrying case in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Recharge the device regularly, especially if it will be stored for an extended period.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low or depleted battery.	Charge the device fully using the provided Type-C cable.
Inaccurate measurements.	Unstable aiming; dirty lenses; extreme weather conditions (fog, heavy rain).	Ensure stable aiming. Clean lenses with the provided cloth. Avoid use in severe weather.
Cannot lock onto flag.	Flag is too far or too small; excessive background interference.	Try continuous scan mode. Ensure clear line of sight. Aim for the base of the flagstick.
Display is blurry.	Eyepiece not focused.	Rotate the eyepiece to adjust focus until the display is clear.
Unit (M/Y) is incorrect.	Measurement unit needs changing.	Long press the Mode Button to switch between Meters (M) and Yards (Y).

## PRODUCT SPECIFICATIONS

<b>Model Name</b>	B1
<b>Brand</b>	Bozily
<b>Measuring Range</b>	Up to 1500 yards
<b>Accuracy</b>	+/- 0.5 yards
<b>Magnification</b>	6x Optical
<b>Battery Type</b>	750mAh Rechargeable Lithium-ion
Charging Port	Type-C USB
<b>Water Resistance</b>	IP65 (Waterproof)
<b>Material</b>	Plastic
<b>Item Weight</b>	0.38 Kilograms
<b>Dimensions (L x W x H)</b>	5.98 x 4.33 x 2.72 inches (Package)



Image: Bozily Golf Rangefinder B1 product view.

# Ergonomic Design

Comfortable Hand Feel



Image: Ergonomic design for comfortable handling.

## WARRANTY AND SUPPORT

The Bozily Golf Rangefinder B1 comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

For warranty claims, technical support, or any questions regarding your product, please contact Bozily customer service through the following channels:

- **Email:** Refer to the contact information provided on your warranty card or the official Bozily website.
- **Online Support:** Visit the official Bozily website for FAQs, support resources, and contact forms.

Please have your purchase receipt and product model number (B1) ready when contacting support.

