

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› **KESSER /**

› KESSER 2500W Infrared Patio Heater with Remote Control and Adjustable Tripod Instruction Manual

KESSER 2500W

KESSER 2500W Infrared Patio Heater Instruction Manual

Model: 2500W

1. INTRODUCTION

Thank you for choosing the KESSER 2500W Infrared Patio Heater. This heater is designed to provide efficient and instant warmth for both indoor and outdoor environments. Featuring three adjustable heat levels and a telescopic tripod, it offers flexible heating solutions. Please read this manual thoroughly before use to ensure safe operation and optimal performance.



This image displays the KESSER 2500W Infrared Patio Heater, featuring its main heating unit, adjustable tripod stand, and included remote control. The heater emits a warm, amber glow.

2. SAFETY INSTRUCTIONS

To prevent personal injury or property damage, always follow basic safety precautions when using electrical appliances. Keep this manual for future reference.

General Safety

- Read all instructions before using this heater.
- Do not use this heater in the immediate vicinity of a bath, shower, or swimming pool.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- Use this heater on a horizontal and stable surface, or fix it to the wall as instructed.
- Keep combustible materials such as furniture, curtains, and other flammable items at least 1 meter (3 feet) from the front of the heater.

- Do not allow children or pets near the heater without supervision.
- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug, or after the heater malfunctions, has been dropped or damaged in any manner.
- This heater is resistant to splashes and corrosion, making it suitable for outdoor use, but it should not be submerged in water.

3. PACKAGE CONTENTS

Verify that all components are present and in good condition:

- KESSER Infrared Heater Unit (2500W)
- Adjustable Telescopic Tripod Stand
- Remote Control
- Protective Weatherproof Cover
- Wall Mounting Kit (brackets, screws, anchors)
- Instruction Manual

4. SETUP AND ASSEMBLY

The KESSER Infrared Patio Heater can be used with the included tripod stand or mounted on a wall.

4.1 Tripod Assembly

1. Unpack all components and place them on a flat, stable surface.
2. Extend the legs of the tripod stand to form a stable base. Secure them in place if there are locking mechanisms.
3. Attach the heater unit to the top of the telescopic pole of the tripod. Ensure it is securely fastened.
4. Adjust the height of the telescopic pole to your desired level (between 110 cm and 175 cm) and tighten the locking knob.
5. Ensure the heater head is securely attached and can be swiveled and tilted as needed for optimal heat direction.

4.2 Wall Mounting

If you prefer wall mounting, detach the heater unit from the tripod stand.

1. Select a suitable wall location, ensuring it is away from combustible materials and has a stable surface.
2. Using the provided wall mounting brackets, mark the drilling points on the wall.
3. Drill holes and insert the appropriate wall anchors.
4. Securely attach the mounting brackets to the wall using the screws.
5. Attach the heater unit to the installed wall brackets, ensuring it is firmly in place.



This image demonstrates the alternative wall-mounting option for the KESSER heater, showcasing the included brackets and the heater securely installed on a wooden wall.

5. OPERATING INSTRUCTIONS

The KESSER Infrared Patio Heater offers instant heat and easy control via remote.

5.1 Powering On/Off

- Plug the power cord into a suitable electrical outlet (230 Volts AC).
- Press the power button on the remote control or the heater unit to turn the heater on. The LED display will illuminate.
- Press the power button again to turn the heater off.

5.2 Adjusting Heat Levels

The heater features three heat settings:

- **Level 1:** 800W
- **Level 2:** 1600W
- **Level 3:** 2500W

Use the 'W' (Wattage) button on the remote control to cycle through the heat levels. The selected level will be shown on the LED display.

5.3 Timer Function

The integrated timer allows you to set a specific operating duration.

- Press the 'TIMER' button on the remote control.
- Each press will increase the timer duration. The heater will automatically turn off once the set time expires.



This image illustrates the heater's adjustable head for swivel and tilt, the remote control for convenient operation, an LED display, three distinct heat levels (850W, 1650W, 2500W), and the included protective cover.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your heater.

6.1 Cleaning

- Always unplug the heater and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no water enters the interior of the heater.

6.2 Storage

- When not in use, especially during off-seasons, store the heater in a cool, dry place.
- Use the provided weatherproof protective cover to shield the heater from dust, moisture, and other elements.



This image shows the KESSER Infrared Patio Heater protected by its weatherproof cover during rainfall, emphasizing the cover's durability and ease of cleaning.

7. TROUBLESHOOTING

If you encounter issues with your heater, refer to the following common problems and solutions:

- **Heater does not turn on:**
 - Check if the power cord is securely plugged into a working outlet.
 - Ensure the power button on the heater or remote control has been pressed.
 - Verify the circuit breaker has not tripped.
- **Heater is on but not emitting heat:**
 - Check the selected heat level. Ensure it is set to 800W, 1600W, or 2500W.
 - Allow a few seconds for the infrared elements to reach full heat.
- **Remote control is not working:**
 - Ensure there are no obstructions between the remote and the heater's receiver.

- Replace the batteries in the remote control.
- **Unusual noises or odors:**
 - Turn off and unplug the heater immediately.
 - Contact customer support if the issue persists after the unit has cooled down.

8. SPECIFICATIONS

Feature	Specification
Brand	KESSER
Model	2500W Infrared Patio Heater
Voltage	230 Volts (AC)
Heat Settings	3 (800W, 1600W, 2500W)
Heating Method	Radiant (Infrared)
Coverage Area	Up to 25 m ²
Dimensions (Heater Unit)	87 cm (L) x 17 cm (H) (approx.)
Adjustable Height (Tripod)	110 cm - 175 cm
Power Source	Electric Cable
Form Factor	Pedestal / Wall Mount
Indoor/Outdoor Use	Outdoor
Special Features	Remote Control, Timer Function, Quiet Operation, Weatherproof Cover

MAßE



This diagram provides detailed measurements of the KESSER Infrared Patio Heater, including the heater unit (87cm length, 19cm height, 9cm depth), adjustable height of the tripod (110cm to 175cm), and the 180cm power cable length.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact the seller directly. Keep your proof of purchase for any warranty claims.