

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Maharaja Whiteline](#) /
- › [Maharaja Whiteline Infrared Cooktop IR Chef/IFS-002 User Manual](#)

Maharaja Whiteline IFS-002

Maharaja Whiteline Infrared Cooktop IR Chef/IFS-002 User Manual

Model: IFS-002

[Introduction](#) [Safety Instructions](#) [Package](#)
[Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

Thank you for choosing the Maharaja Whiteline Infrared Cooktop IR Chef/IFS-002. This appliance is designed for efficient and versatile cooking using infrared technology. Please read this manual thoroughly before operating the cooktop to ensure safe and optimal performance. Keep this manual for future reference.



Image 1.1: The Maharaja Whiteline IR Chef Infrared Cooktop, showcasing its sleek design alongside prepared dishes.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance generates heat during use. Adequate precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons or property caused by touching the appliance during use or during cooling.

3. PACKAGE CONTENTS

Carefully unpack your Maharaja Whiteline Infrared Cooktop and check for the following items:

- 1N Main Unit (Infrared Cooktop)
- 1N Stainless Steel Barbecue Grill
- 2N Skewers
- 1N User Manual with Warranty Card

If any items are missing or damaged, please contact customer support immediately.

4. SETUP AND FIRST USE

1. **Unpacking:** Remove all packaging materials, stickers, and labels from the cooktop.
2. **Placement:** Place the cooktop on a stable, flat, heat-resistant surface. Ensure there is adequate ventilation around the appliance (at least 10-15 cm clearance from walls or other objects). Do not place it near flammable materials.
3. **Power Connection:** Ensure the voltage of your power supply matches the rating indicated on the appliance (230V AC, 50Hz). Plug the power cord into a grounded electrical outlet.
4. **Initial Cleaning:** Before first use, wipe the ceramic glass surface with a damp cloth. Ensure it is completely dry before plugging in.

5. **First Operation (Burn-in):** It is normal for a slight odor or smoke to be emitted during the first few minutes of operation. This is due to the burning off of manufacturing residues and will dissipate quickly. Operate the cooktop at a medium setting for about 10-15 minutes without a pot to complete this process.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview



Image 5.1: Close-up of the cooktop's digital display and feather touch control panel, showing adjustable power mode.

The Maharaja Whiteline IR Chef features a digital display and feather touch controls for easy operation. The adjustable power mode allows precise heat control.

5.2 General Operation

1. **Power On:** Place a suitable cooking utensil on the ceramic glass surface. Press the **ON/OFF** button to turn on the cooktop. The digital display will illuminate.
2. **Select Mode:**
 - **Preset Modes:** The cooktop offers 3 preset cooking modes: **FRY**, **SOUP**, and **BBQ**. Select the desired mode by touching the corresponding icon.
 - **Manual Mode:** For custom cooking, select the **MANUAL** mode.
3. **Adjust Power/Temperature:** In Manual mode, use the adjustable power knob or touch controls to set the desired power level (11 personalized power levels available). The digital display will show the current power setting.
4. **Timer Function:** Press the **TIMER** button to set a cooking duration. Use the adjustment controls to set the time. The cooktop will automatically switch off once the timer expires.
5. **Power Off:** After cooking, press the **ON/OFF** button to turn off the cooktop. The surface will remain hot for some time; a "H" indicator may appear on the display until it cools down.

5.3 Utensil Compatibility

MAHARAJA
—WHITELINE—

FROM SIMMER TO SEAR Power Settings That Suit

EVERY DISH & UTENSIL



SUITABLE FOR ALL KIND
OF COOKING UTENSILS

3 PRESET & 11 PERSONALIZED POWER LEVELS



FRY



SOUP



BBQ



Image 5.2: The cooktop demonstrating its suitability for all types of cooking utensils, including pots and pans.

Unlike induction cooktops, the Maharaja Whiteline Infrared Cooktop is compatible with **all types of cooking utensils**, including ceramic, glass, aluminum, copper, and stainless steel. Ensure the base of the utensil is flat and covers the heating zone adequately for optimal heat transfer.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your infrared cooktop.

1. **Before Cleaning:** Always unplug the cooktop from the power outlet and allow it to cool completely before cleaning.
2. **Ceramic Glass Surface:**
 - Wipe the surface with a soft, damp cloth and mild detergent.
 - For stubborn stains, use a non-abrasive ceramic cooktop cleaner.
 - Do not use abrasive pads, harsh chemicals, or sharp objects that could scratch the surface.
 - Ensure the surface is dry before next use.
3. **Cooktop Body:** Wipe the exterior body with a soft, damp cloth. Do not immerse the cooktop in water or any other liquid.
4. **Ventilation Openings:** Keep the ventilation openings clear of dust and debris to prevent overheating. Use a soft brush or vacuum cleaner to gently clean them.



COOK SMART, CLEAN SMARTER

Easy-clean Infrared Solution for Your Kitchen



Image 6.1: A user demonstrating the ease of cleaning the infrared cooktop surface.

7. TROUBLESHOOTING

Before contacting customer support, please refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply. Power cord not properly plugged in.	Check if the power outlet is working. Ensure the power cord is securely plugged into both the cooktop and the wall outlet.
Cooktop heats slowly or unevenly.	Incorrect power setting. Utensil not suitable or too small.	Increase the power level. Use a flat-bottomed utensil that covers the heating zone.
Display shows "H" after turning off.	Residual heat on the ceramic surface.	This is normal. The "H" indicates the surface is still hot. Allow it to cool down naturally.
Unusual odor or smoke during first use.	Manufacturing residues burning off.	This is normal for initial use and will dissipate. Ensure good ventilation.

If the problem persists after trying these solutions, please contact Maharaja Whiteline customer support.

8. PRODUCT SPECIFICATIONS

MAHARAJA
—WHITELINE—

Power-packed Efficient Cooking

UNLEASH THE CHEF IN YOU

VOLTAGE
230V AC

WATTAGE
2200 W

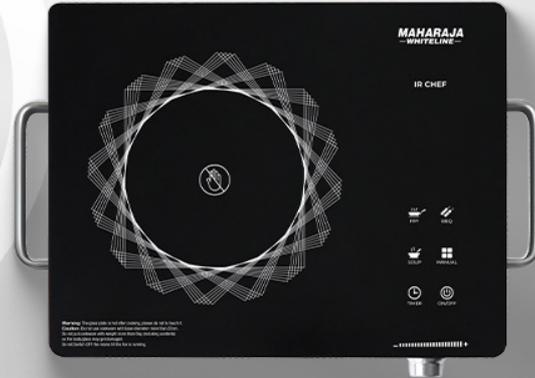


Image 8.1: Visual representation of the cooktop's electrical specifications: 230V AC and 2200W.

Feature	Detail
Model Number	IFS-002
Brand	Maharaja Whiteline
Type	Infrared Cooktop
Material	Alloy Steel
Special Features	Digital Display, Temperature Control
Heating Elements	1
Wattage	2200 Watts
Voltage	230 Volts (AC)
Product Dimensions (D x W x H)	43.5D x 35W x 9H Centimeters
Item Weight	2450 Grams (2.45 kg)

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included in your package. Keep your purchase receipt as proof of purchase for warranty claims.

If you have any questions, require technical assistance, or need to report a problem with your Maharaja Whiteline Infrared Cooktop, please contact Maharaja Whiteline customer support. Contact details can typically be found on the warranty card or the official Maharaja Whiteline website.

Manufacturer: GROUPE SEB INDIA(P) LTD. C-67, 3RD FLOOR, DDA SHEDS, OKHLA PLASE1, NEW DELHI-110020

