

MUDDY MUD-MTC16X

Muddy Outdoors Pro Cam Trail Camera 16 MP User Manual

Model: MUD-MTC16X

INTRODUCTION

Thank you for choosing the Muddy Outdoors Pro Cam Trail Camera. This 16-megapixel trail camera is designed to capture high-quality images and videos of wildlife in various outdoor environments. Its robust, weather-resistant design and advanced features make it an ideal tool for monitoring game and observing nature.

SAFETY INFORMATION

- Always handle the camera with care to prevent damage.
- Ensure the battery compartment is securely closed to maintain weather resistance.
- Do not expose the camera to extreme temperatures or direct sunlight for prolonged periods.
- Keep the camera away from strong magnetic fields.
- Dispose of batteries according to local regulations.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Muddy Outdoors Pro Cam Trail Camera (MUD-MTC16X)
- Mounting Strap
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the key components of your trail camera:



Figure 1: Front view of the Muddy Outdoors Pro Cam Trail Camera, displaying the main lens, infrared LEDs, and the passive infrared (PIR) motion sensor.



Figure 2: The camera with its front cover open, showing the internal LCD screen, menu navigation buttons (MENU, UP, DOWN, ENTER), and the mode switch (OFF, Q1, Q2, Q3, CUSTOM).



Figure 3: Close-up view of the camera's interior, highlighting the SD card slot and the pull-out battery tray for easy battery installation.

- **Main Lens:** Captures 16-megapixel images and high-definition video.
- **Infrared LEDs:** Provide illumination for clear nighttime captures without visible flash.
- **PIR Motion Sensor:** Detects movement within the camera's detection range to trigger recording.
- **LCD Screen:** Displays menu options, settings, and camera status.

- **Control Buttons:** Used for navigating menus and adjusting settings (MENU, UP, DOWN, ENTER).
- **Mode Switch:** Selects between OFF, Quick Set modes (Q1, Q2, Q3), and Custom settings.
- **SD Card Slot:** For inserting a standard SD card (not included) to store captured media.
- **Battery Tray:** Houses the required batteries.
- **Antenna:** For cellular connectivity and data transmission.

SETUP

1. Battery Installation

The camera requires power for operation. Open the camera's front cover and locate the battery tray. Insert the required batteries into the tray, ensuring correct polarity. Slide the tray back into the camera and close the cover securely.

2. SD Card Installation

A standard SD card (up to 32GB, Class 10 or higher recommended) is required to store images and videos. With the camera open, locate the SD card slot. Insert the SD card with the metal contacts facing down until it clicks into place. To remove, push the card in until it springs out.

3. Antenna Attachment

Screw the provided antenna firmly into the antenna port on top of the camera. Ensure it is tightened to provide optimal cellular signal reception.

4. Mounting the Camera

Use the included mounting strap to secure the camera to a tree or post. Thread the strap through the designated slots on the back of the camera and around the mounting surface. Pull the strap tight to ensure the camera is stable and does not move. Position the camera to capture the desired area, typically 3-6 feet off the ground, facing north or south to avoid direct sunlight interference.

5. App Setup and Connectivity

This camera utilizes the Stealth Command app for remote management and image retrieval. Download the Stealth Command app from your device's app store. Follow the in-app instructions to create an account and add your camera. Ensure your camera has sufficient cellular signal for successful connection and data transmission. The camera is designed to perform well even in areas with challenging cellular reception.

OPERATING INSTRUCTIONS

1. Powering On/Off

To power on the camera, move the mode switch from OFF to one of the Quick Set modes (Q1, Q2, Q3) or CUSTOM. The LCD screen will illuminate. To power off, move the switch back to OFF.

2. Basic Settings

Use the MENU button to access camera settings. Navigate through options using the UP/DOWN buttons and confirm selections with the ENTER button.

- **Photo Burst:** Configure the camera to take 1 to 3 photos per trigger event.
- **Trigger Speed:** The camera boasts a fast 0.7-second trigger speed, ensuring quick capture of moving subjects.

- **Detection Range:** The camera has an 80-foot detection range for motion sensing.
- **Image Resolution:** Set to 16 MP for high-quality images.
- **Video Resolution:** Adjust video quality as needed.

3. Image and Video Retrieval

Images and videos captured by the camera are transmitted to your Stealth Command app. You can view, download, and manage your media directly from the app. For direct access, remove the SD card from the camera and insert it into a compatible card reader connected to a computer.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera lens and housing. Do not use abrasive cleaners or solvents.
- **Battery Care:** Replace batteries when the low battery indicator appears. Remove batteries if the camera will not be used for an extended period to prevent leakage.
- **Storage:** Store the camera in a cool, dry place when not in use.

TROUBLESHOOTING

- **Camera not powering on:** Check battery installation and ensure batteries are fresh.
- **No images/videos captured:** Verify SD card is inserted correctly and has sufficient space. Check motion sensor settings and placement.
- **Poor cellular signal/image transmission:** Ensure antenna is securely attached. Relocate camera to an area with better cellular coverage if possible. The Muddy Pro Cam is designed for improved signal acquisition.
- **Blurry images:** Clean the camera lens. Ensure the camera is stable and not vibrating.

SPECIFICATIONS

Feature	Detail
Model Number	MUD-MTC16X
Image Resolution	16 Megapixels
Trigger Speed	0.7 seconds
Detection Range	80 feet
Photo Burst	1-3 photos per trigger
Connectivity	Wireless (Cellular)
Recommended Use	Game & Trail Monitoring
Indoor/Outdoor Usage	Outdoor
Item Weight	1 pound
Package Dimensions	8 x 6 x 3 inches

UPC	888151051566
Manufacturer	GSM LLC. Outdoor Brands/Hunting
Batteries Required?	No

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official MUDDY website or contact their customer service. Keep your purchase receipt as proof of purchase.