

[Manuals.plus](#) /

› [Auertech](#) /

› Auertech Portable Washing Machine User Manual

Auertech 7595-Auertech

Auertech Portable Washing Machine User Manual

Model: 7595-Auertech | Brand: Auertech

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Auertech Portable Washing Machine. This twin tub washer is designed for compact spaces such as dorms, apartments, and RVs, offering both washing and spinning capabilities. It features a powerful 1300 rpm motor for efficient cleaning, a built-in drain pump for flexible water discharge, and separate time controls for washing and spinning cycles. Please read this manual thoroughly before first use and retain it for future reference.



Image 1.1: Top-down view of the Auertech Portable Washing Machine, showcasing its compact design and control panel.

2. SAFETY INFORMATION

- Ensure the washing machine is placed on a stable, level surface to prevent vibration and noise during operation.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the machine during operation.
- Do not immerse the electrical components in water.
- Always unplug the machine before cleaning or performing any maintenance.

- Do not overload the washing or spinning tubs beyond their specified capacities.
- Ensure the drain hose is properly positioned to prevent water leakage.

3. PRODUCT COMPONENTS

The Auertech Portable Washing Machine includes the following main components:

- **Washing Tub:** For washing clothes (12 lbs capacity).
- **Spin Tub:** For spinning clothes to remove excess water (8 lbs capacity).
- **Control Panel:** Features knobs for Wash Timer, Wash Selector (Normal/Soft/Drain), and Spin Timer.
- **Drain Pump & Hose:** For discharging water.
- **Inlet Hose:** For connecting to a water source.
- **Lint Filter:** Collects lint during the wash cycle.



Image 3.1: Close-up of the control panel, illustrating the Wash Timer, Drain Selector, and Spin Timer knobs.

4. SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove the washing machine from its packaging. Note that the machine may contain residual water from factory testing; this is normal and does not indicate a used product.
2. **Placement:** Position the washing machine on a firm, flat surface. Ensure there is enough space around the unit for proper ventilation and access to water and drainage. The compact dimensions (15.5"D x 24.4"W x 28.3"H) make it suitable for various small living spaces.
3. **Water Inlet Connection:** Connect the provided inlet hose to the water inlet port on the machine and to a suitable water faucet. Ensure connections are secure to prevent leaks.
4. **Drain Hose Positioning:** Place the drain hose in a sink, tub, or other drainage area. The built-in drain pump allows for flexible drainage to a higher position if needed. Ensure the hose is not kinked or obstructed.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

Built-in drain pump Extended drain hose



Image 4.1: The portable washing machine positioned next to a sink, demonstrating the extended drain hose and built-in drain pump for convenient water discharge.

5. OPERATING INSTRUCTIONS

5.1 Washing Cycle

1. **Load Clothes:** Open the lid of the washing tub and place clothes inside. Do not exceed the 12 lbs washing capacity. For reference, this can accommodate approximately 1 set of sheets, 10 T-shirts, 15 bodysuits, or 4 pairs of pants.
2. **Add Water & Detergent:** Fill the washing tub with water to the desired level using the inlet hose. Add appropriate detergent.
3. **Select Wash Mode:** Turn the 'Wash Selector' knob to 'Normal' for regular clothes or 'Soft' for delicate items.
4. **Set Wash Timer:** Turn the 'Wash Timer' knob to the desired washing duration (up to 15 minutes). The machine will start washing automatically.

5. **Drain Water:** Once the wash cycle is complete, turn the 'Wash Selector' knob to 'Drain' to activate the drain pump and empty the water from the washing tub.

5.2 Spin Cycle

1. **Transfer Clothes:** Carefully transfer the washed clothes from the washing tub to the spin tub. Distribute clothes evenly to prevent imbalance. Do not exceed the 8 lbs spinning capacity.
2. **Close Lid:** Ensure the lid of the spin tub is securely closed.
3. **Set Spin Timer:** Turn the 'Spin Timer' knob to the desired spinning duration (up to 5 minutes). The machine will begin spinning.
4. **Remove Clothes:** Once the spin cycle is complete, open the lid and remove the spun clothes.



Image 5.1: Illustration of the washing tub (12 lbs capacity) and spin tub (8 lbs capacity).

Portable washing & spinning capacity

Brilliant washing performance



Image 5.2: Visual guide to the portable washing machine's capacity, showing typical load sizes for various clothing items.

6. MAINTENANCE

6.1 Cleaning the Lint Filter

Regularly clean the lint filter located inside the washing tub to maintain optimal washing performance and prevent lint buildup on clothes. Remove the filter, clean it under running water, and reinsert it securely.

6.2 Cleaning the Exterior

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents that could damage the surface.

6.3 Draining and Storage

After each use, ensure all water is drained from both tubs. If storing the machine for an extended period, ensure it is completely dry to prevent mold or mildew. Store in a cool, dry place.

7. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Symptom	Cause	Solution
No power	1. Loose plug connection	Ensure the plug is fully inserted.
	2. Outlet has no power	Test with phone charger. Try a different power outlet.
Washer won't start	1. Faucet not open (no water)	Open faucet fully.
	2. Lid not closed	Close tub lids.
	3. Laundry overweight	Remove some laundry
Draining but not washing	Drain Selector not reset to Normal	Turn Drain Selector back to Normal mode.
Loud vibration during spin	Unbalanced laundry in spin dryer	Open the lid, balance the clothes.

Image 7.1: Troubleshooting guide for common operational issues.

Symptom	Cause	Solution
No power	1. Loose plug connection 2. Outlet has no power	Ensure the plug is fully inserted. Test with phone charger. Try a different power outlet.
Washer won't start	1. Faucet not open (no water) 2. Lid not closed 3. Laundry overweight	Open faucet fully. Close tub lids. Remove some laundry.
Draining but not washing	Drain Selector not reset to Normal	Turn Drain Selector back to Normal mode.
Loud vibration during spin	Unbalanced laundry in spin dryer	Open the lid, balance the clothes.

8. SPECIFICATIONS

Feature	Specification
Brand	Auertech
Model Number	7595-Auertech
Product Dimensions	15.5"D x 24.4"W x 28.3"H
Washing Capacity	12 lbs
Spinning Capacity	8 lbs
Total Capacity	20 lbs
Max Spin Speed	1300 RPM
Installation Type	Freestanding
Special Feature	High Efficiency, Drain Pump
Color	White
Control Console	Knob

Feature	Specification
Access Location	Top Load
Voltage	110 Volts
Material Type	Polypropylene
Included Components	Inlet Hose

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Auertech customer service. Keep your purchase receipt as proof of purchase for warranty claims. You can visit the official Auertech store for more information:[Auertech Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question