

Braun CG7044

Braun MultiGrill 7 Contact Grill CG 7044 User Manual

Model: CG7044 | Brand: Braun

1. PRODUCT OVERVIEW

The Braun MultiGrill 7 Contact Grill CG 7044 is a versatile kitchen appliance designed for a wide range of cooking tasks, from grilling meats and vegetables to making waffles. Its intelligent design combines three plate types and three cooking positions to offer maximum flexibility and superb results.

Key features include:

- **Integrated Heating Elements:** For faster and more consistent heat transfer directly to the plates.
- **Independent Temperature Controls:** Two electronic controls allow precise temperature setting for each plate, enabling simultaneous cooking of different foods.
- **2000W Power:** Ensures rapid heating and professional-level grilling performance.
- **Storage Locking System:** For compact and easy storage.
- **Integrated and Removable Grease Tray:** Collects excess oil for healthier cooking and easy disposal.
- **Large Cooking Surfaces:** Two 29 x 23 cm surfaces accommodate meals for up to 6 people.
- **Dishwasher-Safe Parts:** Removable plates and grease tray are safe for dishwasher cleaning.
- **3-in-1 Cooking Positions:** Offers contact, open (BBQ), and oven positions for maximum versatility.




Figure 1: The Braun MultiGrill 7, showcasing its main unit, interchangeable grill plates, waffle plates, and a measuring cup.

Braun MultiGrill 7

Superb grilling results.



3 in 1 grilling positions

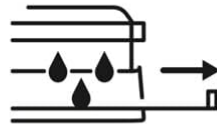

Integrated grease tray



Locking system



Dishwasher safe parts



Figure 2: Visual representation of the MultiGrill 7's key features: 3-in-1 grilling positions, integrated grease tray, locking system, and dishwasher-safe parts.

2. SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Verify Contents:** Ensure all parts are present: the main grill unit, two grill plates, two waffle plates, a waffle measuring cup, and the recipe book.
3. **Initial Cleaning:** Before first use, wash the grill plates, waffle plates, and the removable grease tray in warm soapy water or in a dishwasher. Wipe the exterior of the main unit with a damp cloth. Ensure all parts are completely dry before assembly and use.
4. **Placement:** Place the MultiGrill on a stable, heat-resistant, and dry surface. Ensure there is adequate space around the appliance for ventilation.
5. **Install Plates:** Insert the desired cooking plates (grill or waffle) into the appliance. Press down firmly until they click securely into place. Ensure the removable grease tray is correctly inserted at the front of the unit.

3. OPERATING INSTRUCTIONS

1. **Power On:** Plug the appliance into a grounded electrical outlet. The display will illuminate, indicating the unit is ready.
2. **Select Plates:** Choose between the grill plates for grilling meats, vegetables, and sandwiches, or the waffle plates for preparing waffles.
3. **Set Temperature:** Use the independent electronic temperature controls for the upper and lower plates to set your desired cooking temperature for each. The digital display will show the selected temperatures.
4. **Preheat:** Allow the grill to preheat until the indicator light or display signals that it has reached the set temperature. Preheating is crucial for optimal cooking results and to prevent food from sticking.
5. **Choose Cooking Position:**
 - **Contact Position:** Ideal for grilling sandwiches, paninis, and thinner cuts of meat. Close the lid to cook both sides simultaneously.
 - **Open Position (BBQ Mode):** Open the grill completely to lay flat, creating two large, independent cooking surfaces. This mode is perfect for grilling larger quantities or different types of food that require separate temperatures.
 - **Oven Position:** Utilize the adjustable hinge to set the top plate at a specific height above the bottom plate. This is suitable for melting cheese, baking certain items, or warming food without direct contact.
6. **Cooking:** Carefully place your food onto the preheated plates. Monitor the cooking progress. The integrated grease tray will collect any excess fats or liquids.
7. **Completion:** Once cooking is complete, carefully remove the food using heat-resistant utensils. Unplug the appliance from the electrical outlet.



Figure 3: The MultiGrill 7 in its open (BBQ) position, ideal for grilling steaks, corn, and other vegetables simultaneously.



Figure 4: The MultiGrill 7 used in contact position, perfectly grilling two burgers with cheese.



Figure 5: The MultiGrill 7 equipped with waffle plates, demonstrating its capability to prepare delicious waffles.

4. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Braun MultiGrill 7 and ensure optimal performance.

1. **Cool Down:** Always allow the MultiGrill to cool down completely before attempting any cleaning. This prevents burns and damage to the appliance.
2. **Remove Plates and Grease Tray:** Press the plate release buttons to detach the cooking plates. Slide out the integrated grease tray from the front of the unit.
3. **Clean Plates and Tray:** The grill plates, waffle plates, and grease tray are dishwasher safe for convenient cleaning. Alternatively, wash them by hand with warm soapy water and a non-abrasive sponge. Avoid using abrasive cleaners or scouring pads that could damage the non-stick coating.
4. **Clean Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid, as this can damage electrical components.
5. **Storage:** Once all parts are clean and completely dry, reattach the plates. Use the storage locking system to secure the grill in a compact, upright position for easy storage in a cabinet or pantry. Store in a dry place away from direct sunlight.



Figure 6: Side view of the MultiGrill 7, highlighting its robust hinge and the mechanism for adjusting or locking the plates for storage.

5. TROUBLESHOOTING

If you encounter issues with your Braun MultiGrill 7, refer to the following common problems and solutions:

- **Appliance not turning on:**
 - Ensure the power cord is securely plugged into a functional electrical outlet.
 - Check your household's circuit breaker to ensure power is available.
- **Uneven heating:**
 - Verify that the cooking plates are correctly inserted and clicked firmly into place.
 - Allow sufficient time for the grill to preheat completely before adding food.

- **Food sticking to plates:**
 - Ensure the plates are clean and free of residue from previous cooking.
 - For certain foods, a light application of cooking oil or spray may be beneficial (refer to the recipe book for specific recommendations).
 - Always preheat the grill thoroughly before placing food on the plates.
- **Excessive smoke during cooking:**
 - Ensure the integrated grease tray is empty and clean before use.
 - Reduce the amount of oil or fat used in your cooking.

If the problem persists after trying these solutions, please refer to the recipe book for additional tips or contact Braun customer support.

6. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Braun
Model Number	CG7044
Power	2000 Watts
Material	Stainless Steel
Color	Silver
Product Dimensions (L x W x H)	25 x 27.5 x 17.5 cm (approx. 9.8 x 10.8 x 6.9 inches)
Item Weight	8.48 Kilograms (approx. 18.7 lbs)
Special Feature	Temperature control
Included Components	Recipe book
Number of Settings	3 (cooking positions)
Cooking Surface Dimensions	29 x 23 cm (each plate)

7. WARRANTY AND SUPPORT

For information regarding warranty coverage, terms, and conditions for your Braun MultiGrill 7, please refer to the warranty card or documentation included with your product. You can also visit the official Braun website for the most up-to-date warranty information and to register your product.

For technical support, spare parts, or service inquiries, please contact Braun customer service. Contact details can typically be found in your product manual or on the Braun website. Please have your model number (CG7044) and proof of purchase ready when contacting support.

