

Effireli BRC0884402/01

Effireli BRC0884402/01 Replacement Remote Control User Manual for Philips 4K TVs

Model: BRC0884402/01

1. INTRODUCTION

This manual provides comprehensive instructions for the Effireli BRC0884402/01 replacement remote control. This remote is designed to be compatible with various Philips 4K TV models, offering a direct replacement for your original remote without the need for complex setup.

Compatible Philips TV models include: 70PUS7304, 43PUS7334, 50PUS7334, 55PUS7334, 43PUS7354, 50PUS7354, 55PUS7354, 43PUS7304, 50PUS7304, 55PUS7304, 58PUS7304, 65PUS7354, 75PUS7354, 50PUS7394, 43PUS6554, 43PUS6704/12, 43PUS6754/12, 55PUS6754/12, 65PUS6704/12, 65PUS6754/12, 70PUS6724/12, 75PUS6754/12, 50PUS6704/12, 50PUS6704/62, 50PUS6754/12, 55PUS6704/12, 43PUS6804/12, 50PUS6754/12, 55PUS6704/12, 50PUS6804/12, 55PUS6754/12, 65PUS6704/12, 75PUS6754/12, 65PUS6754/12, 70PUS6704/12.

2. SETUP

This replacement remote control requires no programming or complex setup. Simply insert the batteries, point it at your Philips TV, and it is ready for use.

2.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or lift the cover to open the compartment.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

3. OPERATING INSTRUCTIONS

The remote control features a standard layout for easy navigation and control of your Philips TV. Below is a detailed

description of each button's function.



Image: Effireli BRC0884402/01 Replacement Remote Control. This image displays the full layout of the black remote control,

highlighting its various buttons for power, navigation, media playback, volume, channel selection, and dedicated app access.

3.1 Button Functions

- **Power (Red Circle with Power Symbol):** Turns the TV on or off.
- **Ambilight:** Activates or adjusts the Ambilight feature on compatible Philips TVs.
- **INFO (i symbol):** Displays information about the current program or input.
- **Search (Magnifying Glass):** Opens the TV's search function.
- **SOURCES (Arrow pointing right into a box):** Selects the input source (e.g., HDMI 1, HDMI 2, TV).
- **Directional Pad (Up, Down, Left, Right arrows):** Navigates through menus and options.
- **OK:** Confirms a selection or opens a menu item.
- **Back (Left Arrow):** Returns to the previous menu or screen.
- **Home (House symbol):** Accesses the TV's main home screen or smart TV portal.
- **Settings/Menu (Three horizontal lines/sliders):** Opens the TV's settings or options menu.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record):** Controls media playback for connected devices or TV functions.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within interactive TV services or applications, as indicated on screen.
- **Volume Up (+):** Increases the TV volume.
- **Volume Down (-):** Decreases the TV volume.
- **Mute (Speaker with X):** Mutes or unmutes the TV audio.
- **NETFLIX:** Direct access button for the Netflix streaming service.
- **Windows (Windows logo):** Likely a smart TV or app button, potentially for a specific app or smart hub.
- **TV EXIT:** Exits current menu or application and returns to live TV.
- **Rakuten TV:** Direct access button for the Rakuten TV streaming service.
- **Number Pad (0-9):** Enters channel numbers or numerical input.
- **TEXT:** Accesses Teletext services (if available).
- **LIST:** Displays the channel list or a list of available options.
- **TV GUIDE:** Opens the electronic program guide (EPG).

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

4.2 Battery Care

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device. Replace batteries when the remote's response becomes sluggish or inconsistent.

5. TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are correctly inserted and not depleted. Replace with fresh batteries if necessary. Check for any obstructions between the remote and the TV's infrared sensor.

- **Specific buttons not working:** Clean the remote's surface, especially around the unresponsive buttons, to remove any debris.
- **Compatibility issues:** If your TV model number is not listed in the introduction or if your original remote control is significantly different, please contact the seller directly to confirm compatibility.

6. SPECIFICATIONS

Feature	Detail
Brand	Effireli
Model Number	YK-BRC0884402/01
Connectivity Technology	Infrared
Special Feature	No programming required
Compatible Devices	Television
Number of Supported Devices	1
Item Weight	80 Grams
Product Dimensions	17L x 4W x 2H centimeters
Rechargeable Battery	No

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This product comes with a 30-day money-back guarantee and a 12-month warranty covering manufacturing defects. Returns and exchanges are accepted during the warranty period.

7.2 Customer Support

For any questions, troubleshooting assistance, or warranty claims, please contact the seller, Remote Realm, directly. Refer to your purchase documentation for specific contact details.

© 2024 Effireli. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question