

QUOLODOO CV06

QUOLODOO 4K 64MP Digital Camera CV06 User Manual

Model: CV06

1. INTRODUCTION

Thank you for choosing the QUOLODOO 4K 64MP Digital Camera, Model CV06. This camera is designed to capture high-quality 4K videos and 64-megapixel photos, offering a range of features for both beginners and experienced users. This manual provides essential information on setting up, operating, and maintaining your camera to ensure optimal performance and longevity.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- QUOLODOO 4K 64MP Digital Camera (Model CV06)
- 64GB Memory Card
- Rechargeable Lithium-ion Batteries (x2)
- Lanyard
- USB Cable
- Cleaning Cloth
- Camera Bag
- User Manual (this document)

3. PRODUCT OVERVIEW

The QUOLODOO CV06 Digital Camera features a compact design with advanced imaging capabilities. Key features include:

- **4K UHD Video Recording:** Capture videos with exceptional clarity.

- **64 Megapixel Photos:** High-resolution still images for detailed memories.
- **Dual Screens:** Front and rear screens for easy selfies and vlogging.
- **18x Digital Zoom:** Magnify subjects for closer shots.
- **One-Touch Autofocus:** Simplifies focusing for sharp images.
- **Multiple Creative Filters:** Experiment with different photographic styles.
- **Self-Timer Function:** For group photos and stable shots.
- **PC Camera Mode:** Use the camera as a webcam.
- **Data Stamp:** Add date and time to your photos.

4k Video & 64MP Photos

Selfies made simple, Record your travel vlogs clearly

64MP
Photos

4k
Video



Image: The QUOLODOO 4K 64MP Digital Camera, highlighting its compact form factor and the presence of both front and rear screens for versatile shooting.

Pocket Size Digital Camera

Easy to carry go out anytime



Image: The QUOLODOO digital camera being easily slipped into a pocket, demonstrating its lightweight and portable design for convenient travel.

4. SETUP

4.1. Charging the Battery

1. Insert one of the provided Lithium-ion batteries into the camera's battery compartment.
2. Connect the camera to a USB power source (e.g., computer, wall adapter) using the supplied USB cable.
3. The charging indicator light will illuminate. It will turn off or change color once charging is complete.
4. A full charge typically takes approximately 2-3 hours.

4.2. Inserting the Memory Card

1. Locate the memory card slot on the camera.
2. Insert the 64GB TF (Micro SD) card with the gold contacts facing the correct direction (refer to the diagram inside

the slot).

3. Push the card gently until it clicks into place. To remove, push it again until it springs out.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

- To power on, press and hold the Power button until the screen illuminates.
- To power off, press and hold the Power button again until the screen turns off.

5.2. Taking Photos and Recording Videos

- **Photo Mode:** Ensure the camera is in photo mode. Frame your shot using the screen. Press the Shutter button halfway to focus, then fully press to capture the photo.
- **Video Mode:** Switch to video mode. Press the Shutter button once to start recording. Press it again to stop recording.



Image: A user holding the QUOLODOO digital camera, demonstrating its ease of use for capturing moments.

5.3. Zoom Function

The camera features an 18x digital zoom. Use the zoom controls (usually marked 'W' for Wide and 'T' for Telephoto) to adjust the magnification. Note that digital zoom may reduce image quality compared to optical zoom.

18X Digital Zoom & Multiple filters



Image: Visual representation of the 18x digital zoom capability, showing how subjects appear closer at different zoom levels. Also displays various color filters like Regular, Black & White, Red, and Blue.

5.4. One-Touch Autofocus

The camera is equipped with one-touch autofocus. Simply press the shutter button halfway down, and the camera will automatically adjust the focus for a clear image. A green box typically indicates successful focus.

One-touch Autofocus

Effortless Focus, Capture Every Brilliant Moment



Image: The camera's screen showing a child in focus, illustrating the one-touch autofocus feature and the camera's user interface.

5.5. Creative Functions

- **Self-Timer:** Access the menu to set a self-timer (e.g., 3s, 10s, 15s) for delayed shots.
- **Filters:** Explore various built-in filters (e.g., Black & White, Sepia, Red, Blue) to add artistic effects to your photos.
- **Fill Light:** Activate the fill light for improved illumination in low-light conditions.
- **PC Camera Mode:** Connect the camera to a computer via USB and select "PC Camera" mode to use it as a webcam.
- **Data Stamp:** Enable this feature in the settings to imprint the date and time directly onto your photos.



Image: A collage demonstrating several creative functions: self-timer options (3s, 10s, 15s), the fill light feature, using the camera as a PC webcam, and the data stamp feature showing date and time on a photo.

6. MAINTENANCE

- **Cleaning:** Use the provided cleaning cloth to gently wipe the camera body and lens. For stubborn smudges on the lens, use a specialized lens cleaning solution and cloth.
- **Storage:** When not in use, store the camera in its bag in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the camera will not be used for an extended period. Recharge batteries regularly to maintain their lifespan.
- **Water Resistance:** This camera is not waterproof. Avoid exposure to water or high humidity.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Ensure battery is charged and correctly inserted. Try the second battery.
Cannot take photos/videos.	Memory card is full, locked, or not inserted.	Check memory card status. Ensure it's unlocked and has free space. Reinsert the card.
Images are blurry.	Improper focus, camera shake, or dirty lens.	Ensure autofocus is engaged. Hold camera steady. Clean the lens.
Camera freezes or becomes unresponsive.	Software glitch or low battery.	Remove and reinsert the battery to reset. Ensure battery is charged.

8. SPECIFICATIONS

Feature	Detail
Brand	QUOLODOO
Model	CV06
Effective Still Resolution	64 Megapixels
Video Resolution	3840p (4K UHD)
Digital Zoom	18x
Optical Zoom	18x (Note: Product description mentions 18x digital zoom, while specifications list 18x optical zoom. Clarification may be needed from manufacturer. Assuming digital based on feature bullets.)
Screen	2.75 inch LED (Dual Screens)
Image Stabilization	Digital
Connectivity Technology	USB
Battery Composition	Lithium-ion (2 included)
Focal Length	7.36mm - 18mm
Aperture	F2.8-F5.6
Sensor Technology	CMOS
Supported File Format	JPEG

Feature	Detail
Dimensions (Package)	12.8 x 9 x 5.6 cm; 253 grams
Water Resistance Level	Not waterproof

9. WARRANTY AND SUPPORT

The QUOLODOO 4K 64MP Digital Camera (Model CV06) comes with a **one-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your peace of mind. For technical support, warranty claims, or any questions regarding your camera, please refer to the contact information provided on the product packaging or the official QUOLODOO website. Please have your model number (CV06) and proof of purchase ready when contacting support.

© 2024 QUOLODOO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

