

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Okin](#) /

› [Okin JLDK.17.05.01 Switch User Manual](#)

Okin JLDK.17.05.01

Okin JLDK.17.05.01 Switch User Manual

Model: JLDK.17.05.01

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of the Okin JLDK.17.05.01 Switch. This product is designed as a direct replacement for existing switches with the same item number, ensuring compatibility and reliable performance. Please read this manual thoroughly before installation and use to ensure proper function and safety.

2. SAFETY INFORMATION

- **Compatibility:** This switch is not a universal part. Verify that your existing switch has the exact item number JLDK.17.05.01 before installation. Incompatible parts may cause damage or malfunction.
- **Power Disconnection:** Always disconnect power to the device before attempting any installation or replacement procedures.
- **Professional Installation:** If you are unsure about any step, consult a qualified technician.
- **Environmental Conditions:** Do not expose the switch to moisture, extreme temperatures, or corrosive environments.
- **Intended Use:** Use this product only for its intended purpose as a replacement switch for compatible devices.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and undamaged. If any items are missing or damaged, contact your retailer.

- Okin JLDK.17.05.01 Switch (1 unit)

4. PRODUCT OVERVIEW

The Okin JLDK.17.05.01 switch features a silver faceplate with integrated buttons and a 5-pin connector. It

provides DC 24V 2A output and a USB 5V 2A port for charging compatible devices.





Figure 1: Okin JLDK.17.05.01 Switch. This image shows the complete switch unit, including the silver faceplate, control buttons, and the attached cable with its connector.



Figure 2: Product Label. A close-up view of the label on the switch, displaying the model number (P/N JLDK.17.05.01), DC 24V 2A, and USB 5V 2A specifications, along with the manufacturer's name.



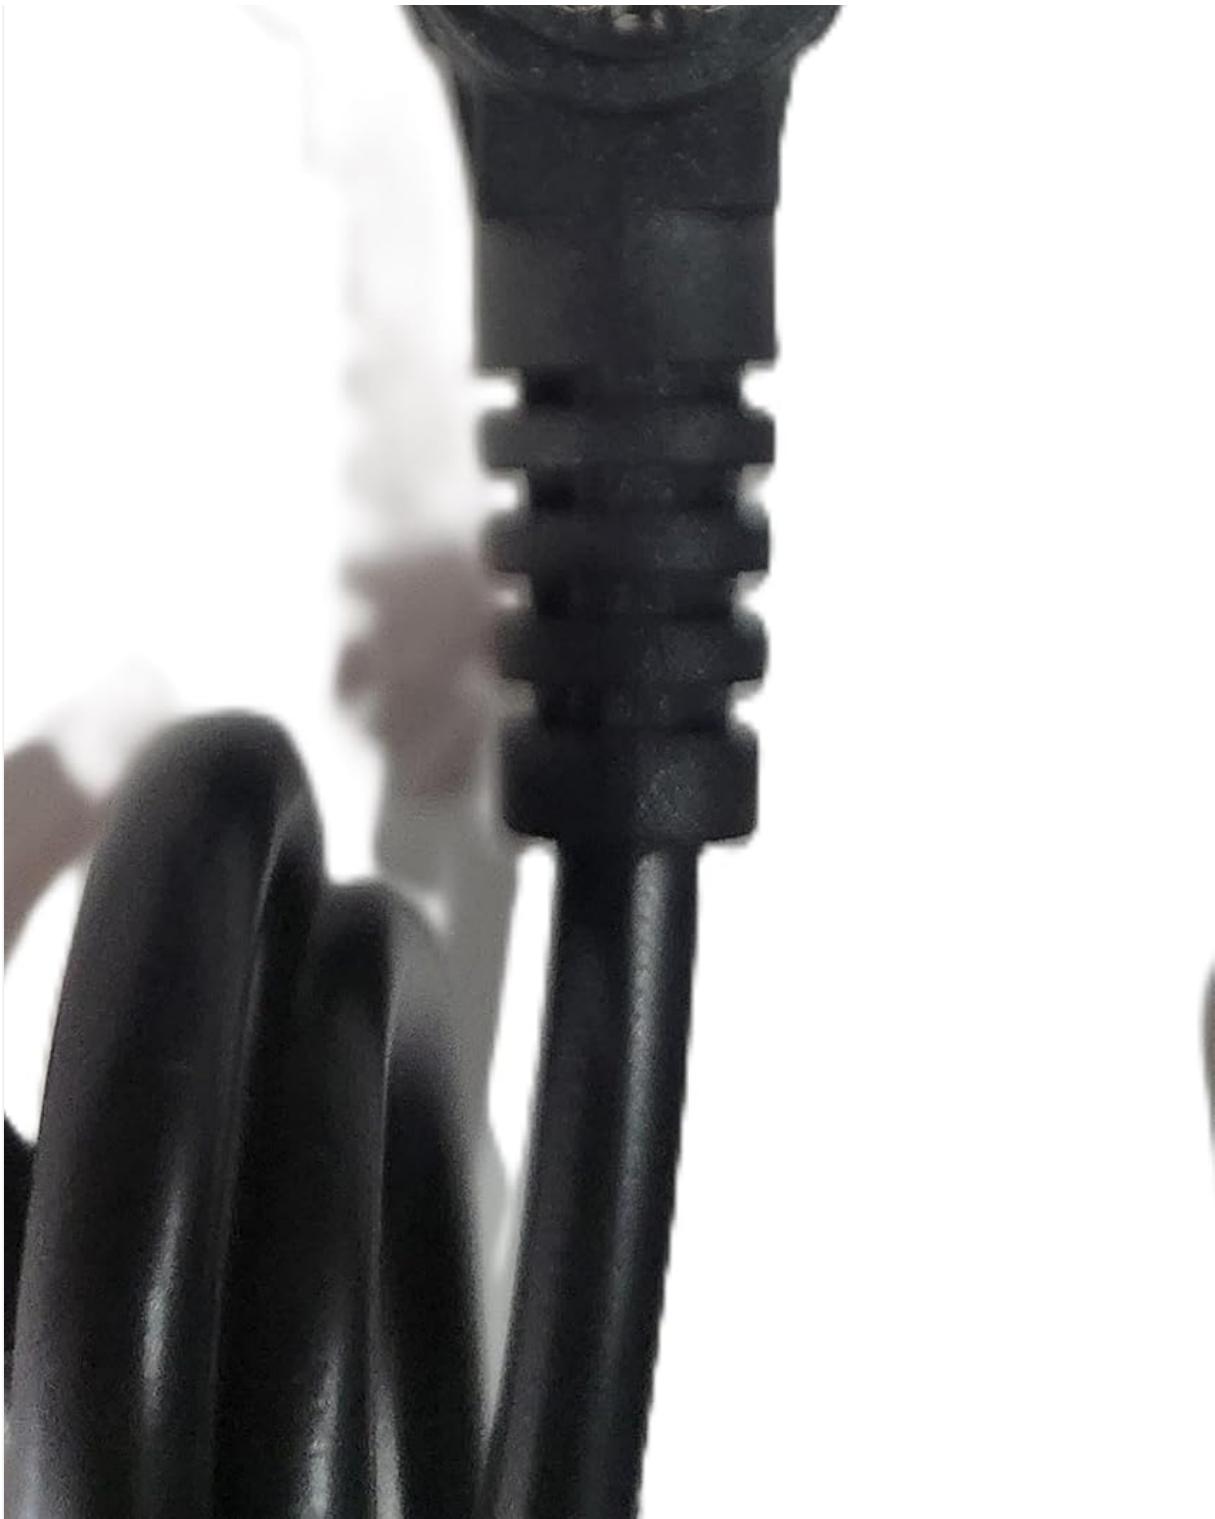


Figure 3: 5-Pin Connector. A detailed view of the 5-pin connector, which is essential for connecting the switch to the compatible device's control system.

5. SETUP AND INSTALLATION

This switch is designed for "Plug and Play" replacement. Follow these steps carefully:

- 1. Verify Compatibility:** Before proceeding, confirm that the item number on your existing switch matches JLDK.17.05.01. This is crucial for proper function.
- 2. Disconnect Power:** Ensure the power supply to the device (e.g., recliner, lift chair) is completely disconnected from the wall outlet.
- 3. Remove Old Switch:** Carefully disconnect the 5-pin connector from your old switch. Note its orientation if necessary.

- 4. Install New Switch:** Connect the 5-pin connector of the new Okin JLDK.17.05.01 switch to the corresponding port on your device. Ensure the connection is firm and secure.
- 5. Secure Switch (if applicable):** If your device requires the switch to be mounted, secure it in place using the original mounting hardware or appropriate fasteners.
- 6. Reconnect Power:** Once the new switch is securely installed, reconnect the power supply to the wall outlet.
- 7. Test Functionality:** Test all functions of the device to ensure the new switch is operating correctly.

6. OPERATING INSTRUCTIONS

The Okin JLDK.17.05.01 switch provides intuitive control over your compatible device and includes a USB charging port.

- Control Buttons:** Use the integrated buttons on the silver faceplate to operate the functions of your device (e.g., recline, lift). Refer to your device's specific manual for button assignments.
- USB Charging Port:** The switch includes a USB port (5V 2A) for charging compatible electronic devices such as smartphones or tablets. Simply connect your device's USB charging cable to this port.

7. MAINTENANCE

The Okin JLDK.17.05.01 switch requires minimal maintenance to ensure long-term performance.

- Cleaning:** Wipe the surface of the switch with a soft, dry cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as these can damage the finish or internal components.
- Inspection:** Periodically inspect the cable and connector for any signs of wear, fraying, or damage. If damage is observed, discontinue use and replace the switch.
- Environmental Protection:** Keep the switch in a dry environment, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you encounter issues with your Okin JLDK.17.05.01 switch, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Switch does not respond.	No power to the device. Loose or incorrect connection. Incompatible switch. Faulty switch.	Ensure the device is plugged into a working power outlet. Check that the 5-pin connector is securely and correctly inserted. Verify the switch model number (JLDK.17.05.01) matches your original. If all else fails, the switch may be faulty and require replacement.

Problem	Possible Cause	Solution
USB port not charging.	Device not powered. Faulty USB cable or device. USB port malfunction.	Ensure the main device is powered on. Test with a different USB cable and/or a different device. If other functions work but USB does not, the USB port may be faulty.

If the problem persists after attempting these solutions, contact Okin customer support or your retailer for further assistance.

9. SPECIFICATIONS

Feature	Detail
Model Number	JLDK.17.05.01
Brand	Okin
DC Output	24V 2A
USB Output	5V 2A
Connector Type	5-Pin
Faceplate Color	Silver
Material	Plastic
Item Weight	Approximately 1 pound

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your original device or contact Okin customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the [Okin Store on Amazon](#).